
Connector Joining Wire Harness and Wire Harness

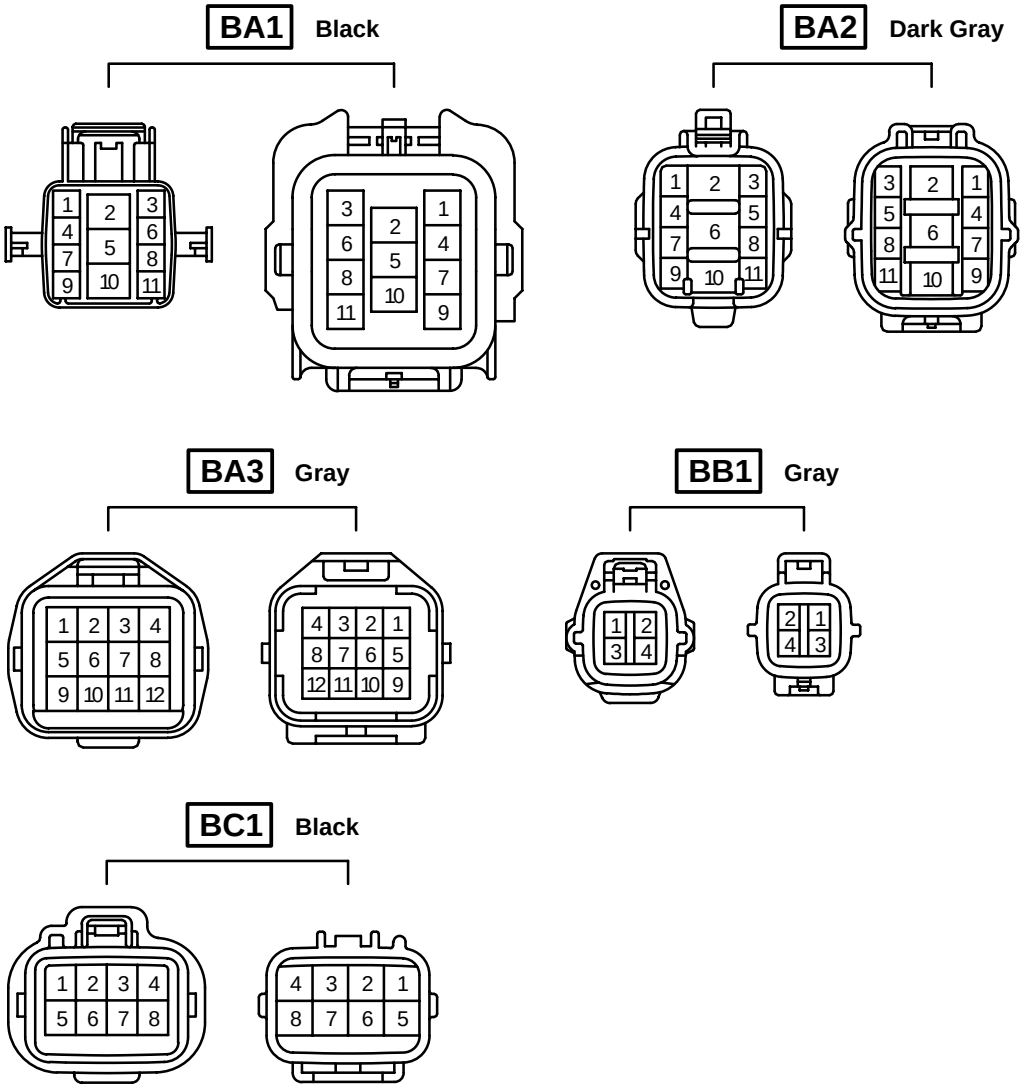

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Engine Room Main Wire and Frame Wire (Rear Left Side of the No.3 Cross Member)
BA2	
BA3	
BB1	Speed Sensor Wire and Frame Wire (Front Left Side of the No.6 Cross Member)
BC1	Frame No.2 Wire and Frame Wire (Left Side of the End Cross Member)