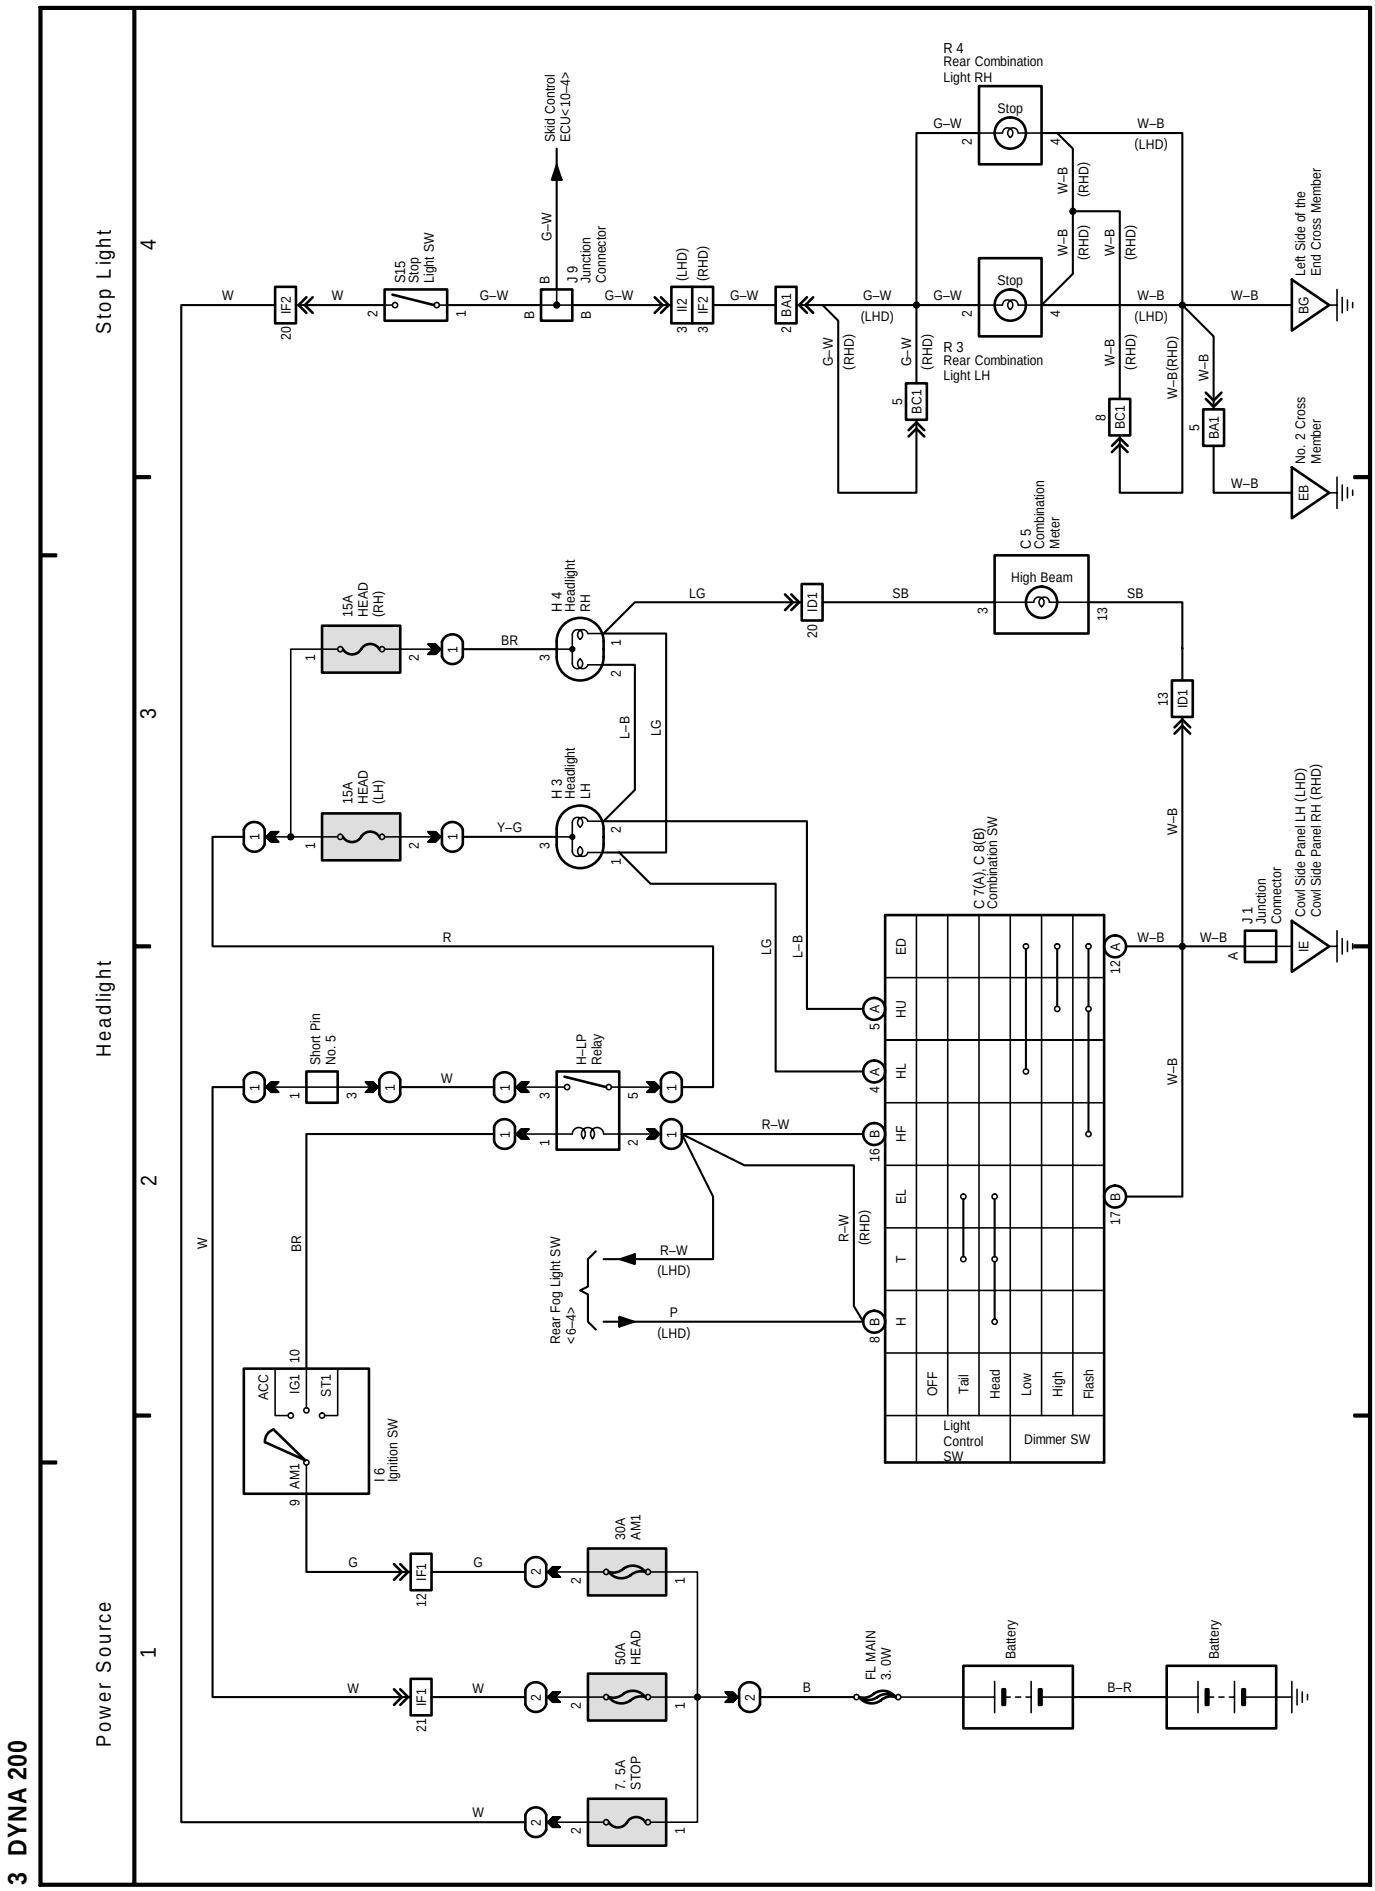

3 DYNA 200
Power Source
Headlight
Stop Light
1
2
3
4
Battery
B–R
FL MAIN 3.0W
50A HEAD
30A AM1
7.5A STOP
I6 Ignition SW
ACC
IG1
ST1
AM1
Short Pin No. 5
H–LP Relay
15A HEAD (RH)
15A HEAD (LH)
H 3 Headlight LH
H 4 Headlight RH
Rear Fog Light SW <6–4>
C 7(A), C 8(B) Combination SW
Light Control SW
Dimmer SW
OFF
Tail
Head
Low
High
Flash
C 5 Combination Meter
High Beam
Skid Control ECU<10–4>
J 9 Junction Connector
J 1 Junction Connector
S15 Stop Light SW
R 4 Rear Combination Light RH
R 3 Rear Combination Light LH
Stop
Left Side of the End Cross Member
No. 2 Cross Member
Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)
(LHD)
(RHD)