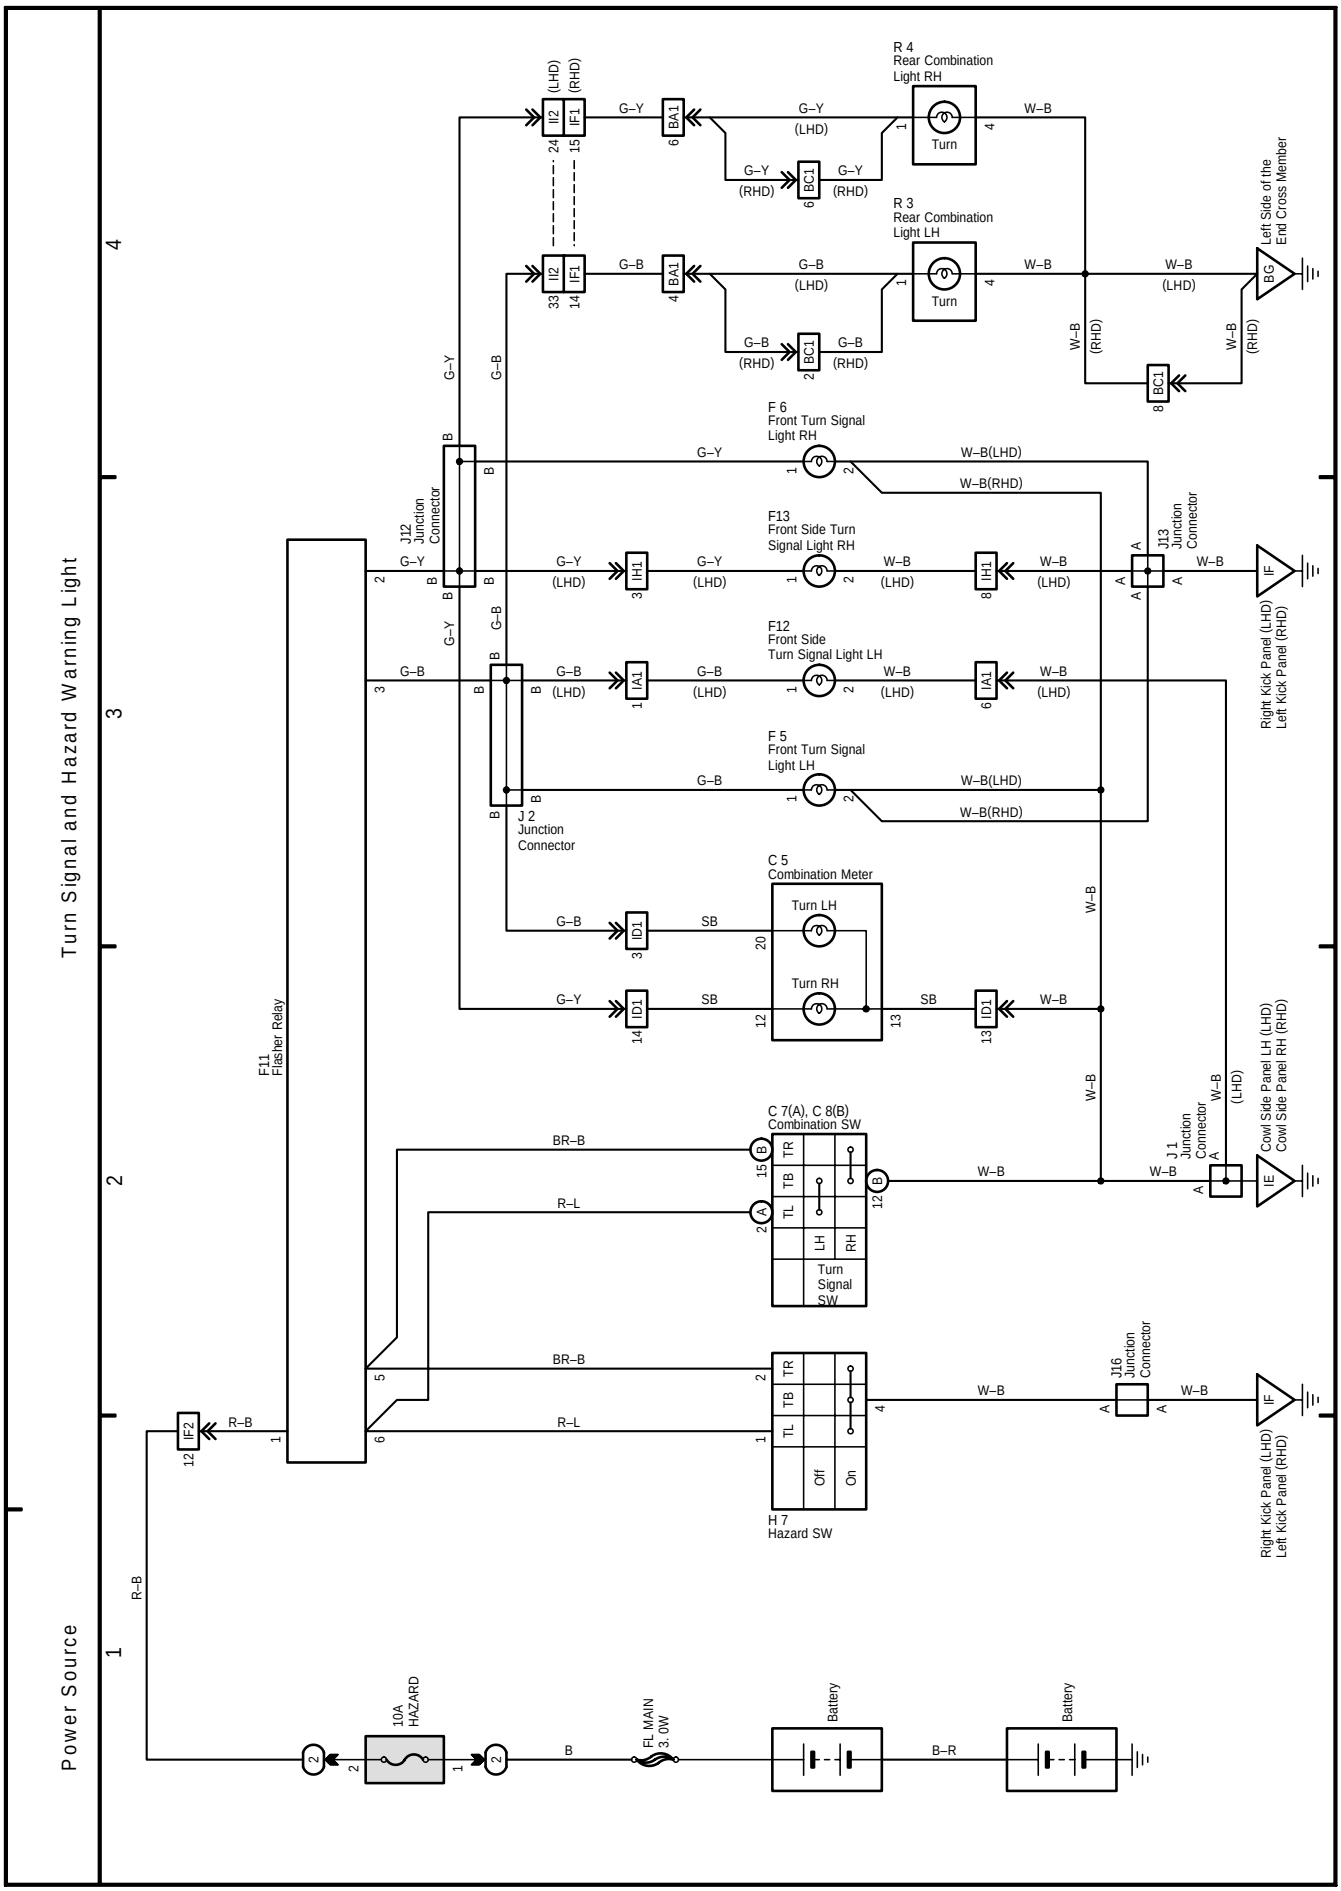

4 DYNA 200
Turn Signal and Hazard Warning Light
Power Source
R 4
Rear Combination
Light RH
R 3
Rear Combination
Light LH
Turn
Left Side of the
End Cross Member
F 6
Front Turn Signal
Light RH
F13
Front Side Turn
Signal Light RH
F12
Front Side
Turn Signal Light LH
F 5
Front Turn Signal
Light LH
J12
Junction
Connector
J13
Junction
Connector
J 2
Junction
Connector
C 5
Combination Meter
Turn LH
Turn RH
F11
Flasher Relay
C 7(A), C 8(B)
Combination SW
Turn
Signal
SW
J 1
Junction
Connector
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
J16
Junction
Connector
H 7
Hazard SW
Off
On
10A
HAZARD
FL MAIN
3.0W
Battery
Battery
Right Kick Panel (LHD)
Left Kick Panel (RHD)