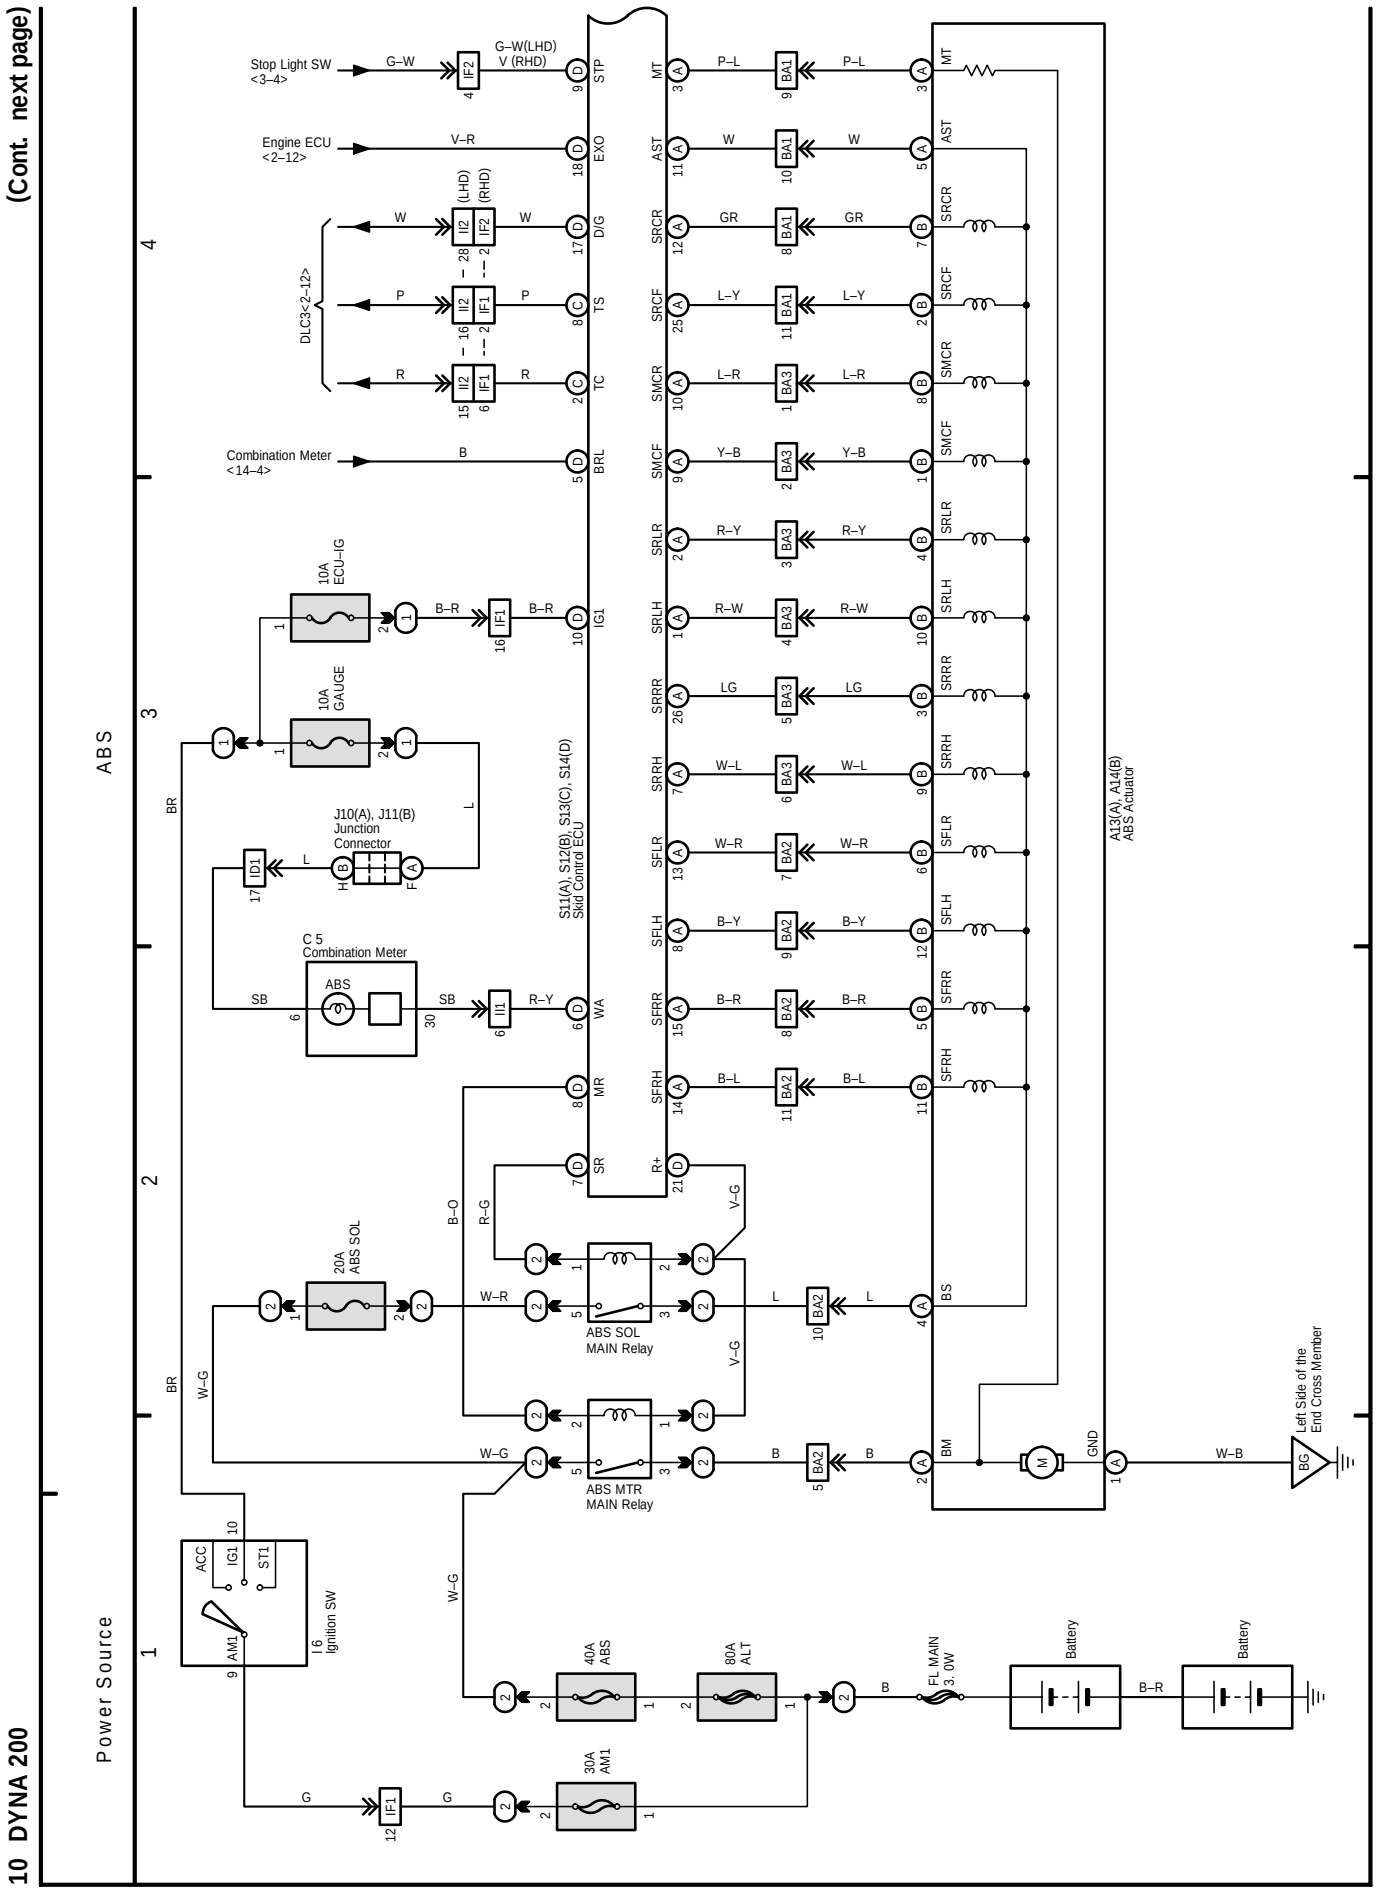

(Cont. next page)
10 DYNA 200
ABS
Power Source
Stop Light SW <3–4>
Engine ECU <2–12>
Combination Meter <14–4>
DLC3<2–12>
10A ECU–IG
10A GAUGE
20A ABS SOL
40A ABS
80A ALT
30A AM1
J10(A), J11(B) Junction Connector
C 5 Combination Meter
S11(A), S12(B), S13(C), S14(D) Skid Control ECU
A13(A), A14(B) ABS Actuator
ABS SOL MAIN Relay
ABS MTR MAIN Relay
I 6 Ignition SW
FL MAIN 3.0W
Battery
Left Side of the End Cross Member

10 DYNA 200 (Cont' d)

