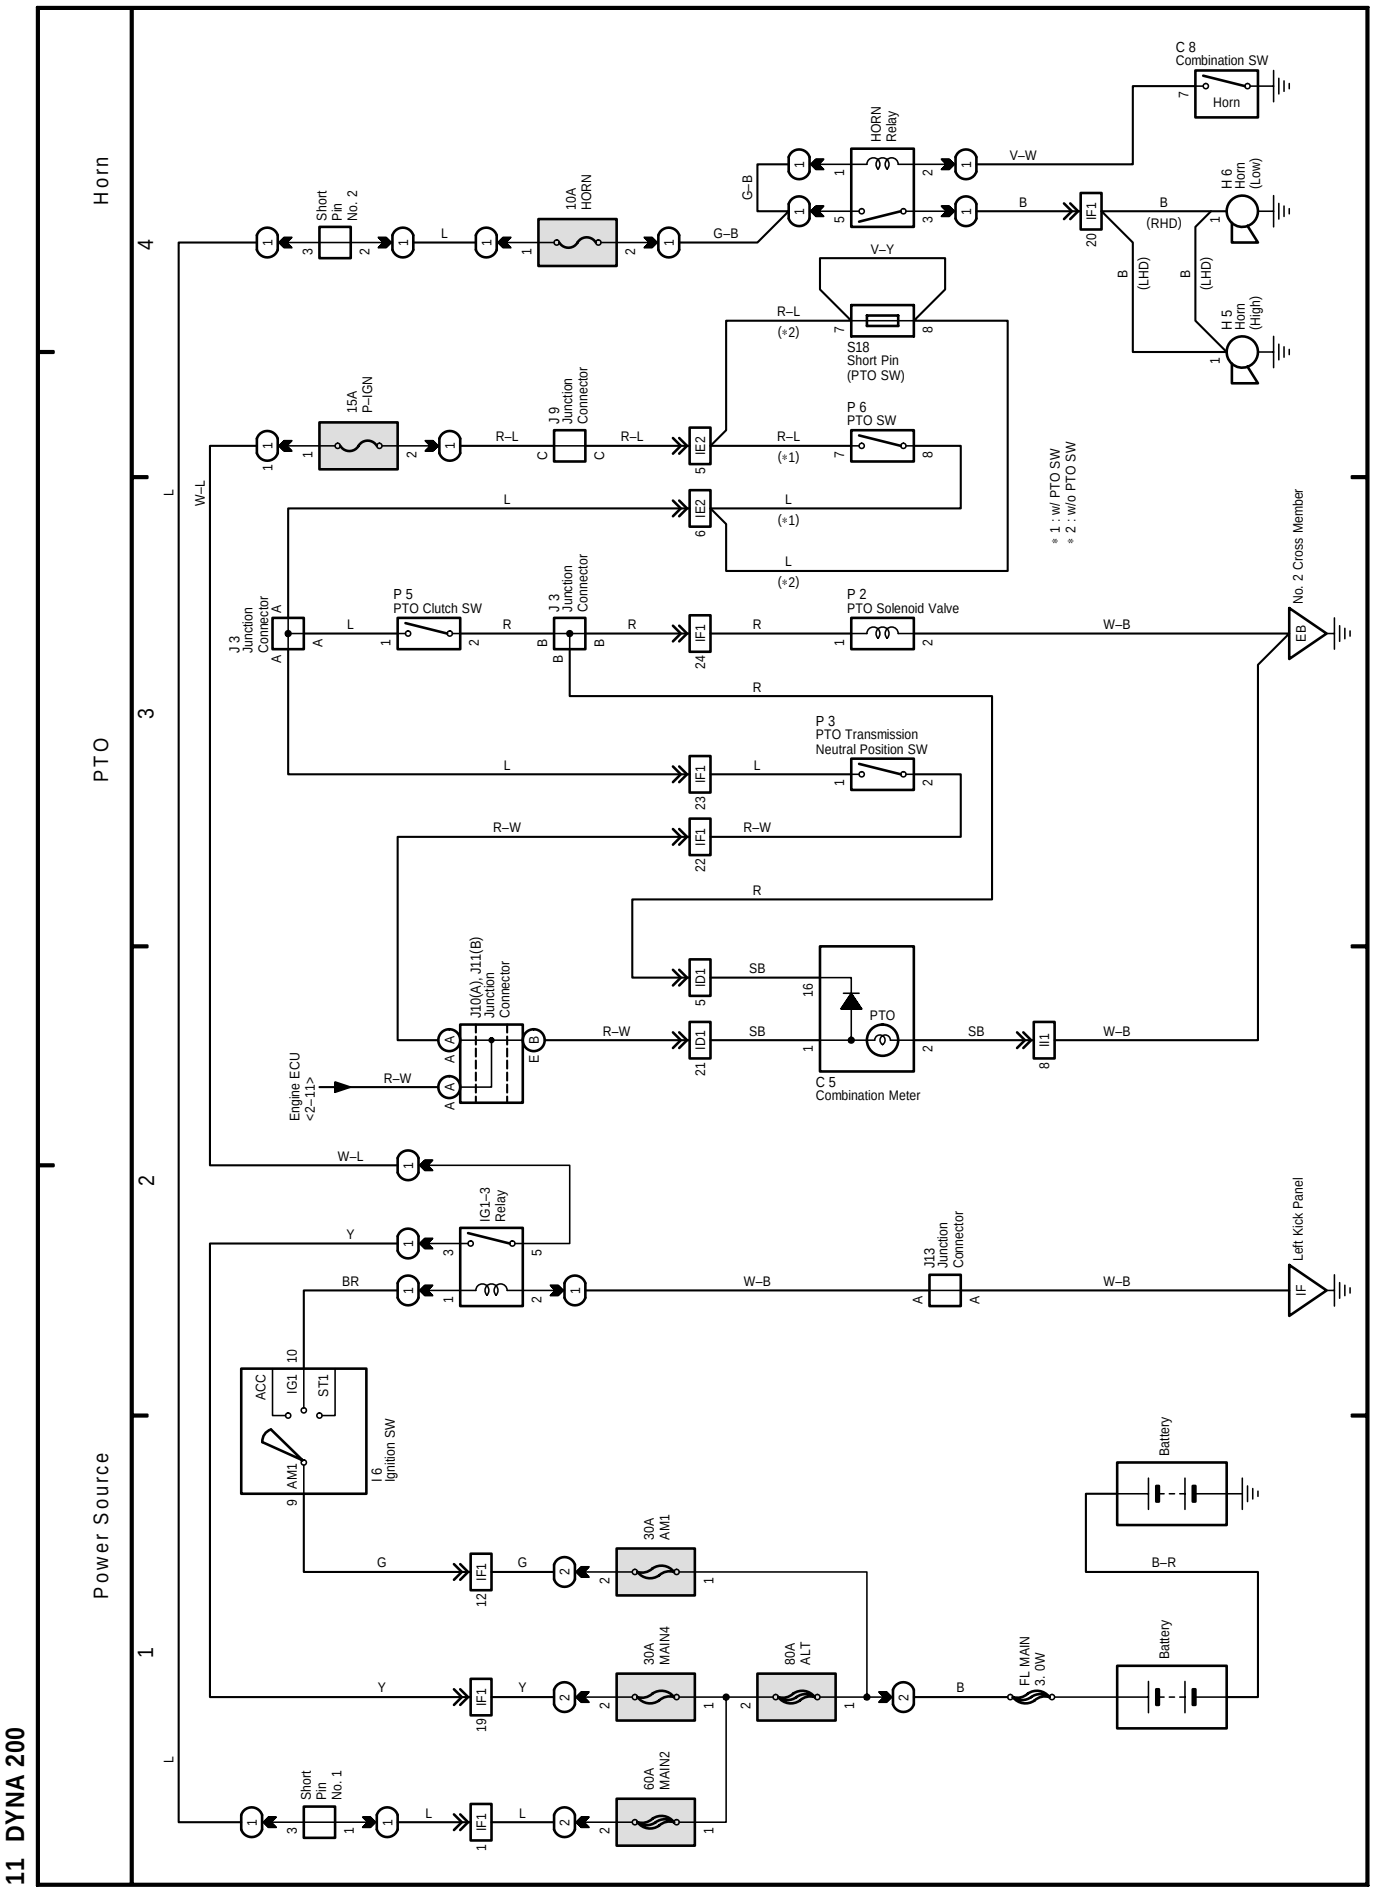

Horn
PTO
Power Source
C 8
Combination SW
Horn
HORN
Relay
10A
HORN
Short
Pin
No. 2
V–W
G–B
B
H 6
Horn
(Low)
H 5
Horn
(High)
(RHD)
(LHD)
V–Y
R–L
(*2)
S18
Short Pin
(PTO SW)
15A
P–IGN
J 9
Junction
Connector
P 6
PTO SW
(*1)
* 1 : w/ PTO SW
* 2 : w/o PTO SW
P 5
PTO Clutch SW
J 3
Junction
Connector
P 2
PTO Solenoid Valve
No. 2 Cross Member
P 3
PTO Transmission
Neutral Position SW
J10(A), J11(B)
Junction
Connector
Engine ECU
<2–11>
PTO
C 5
Combination Meter
IG1–3
Relay
J13
Junction
Connector
Left Kick Panel
ACC
IG1
ST1
AM1
I 6
Ignition SW
Battery
30A
AM1
30A
MAIN4
80A
ALT
FL MAIN
3. 0W
60A
MAIN2
Short
Pin
No. 1
W–L
R–W
W–B
B–R
SB
BR