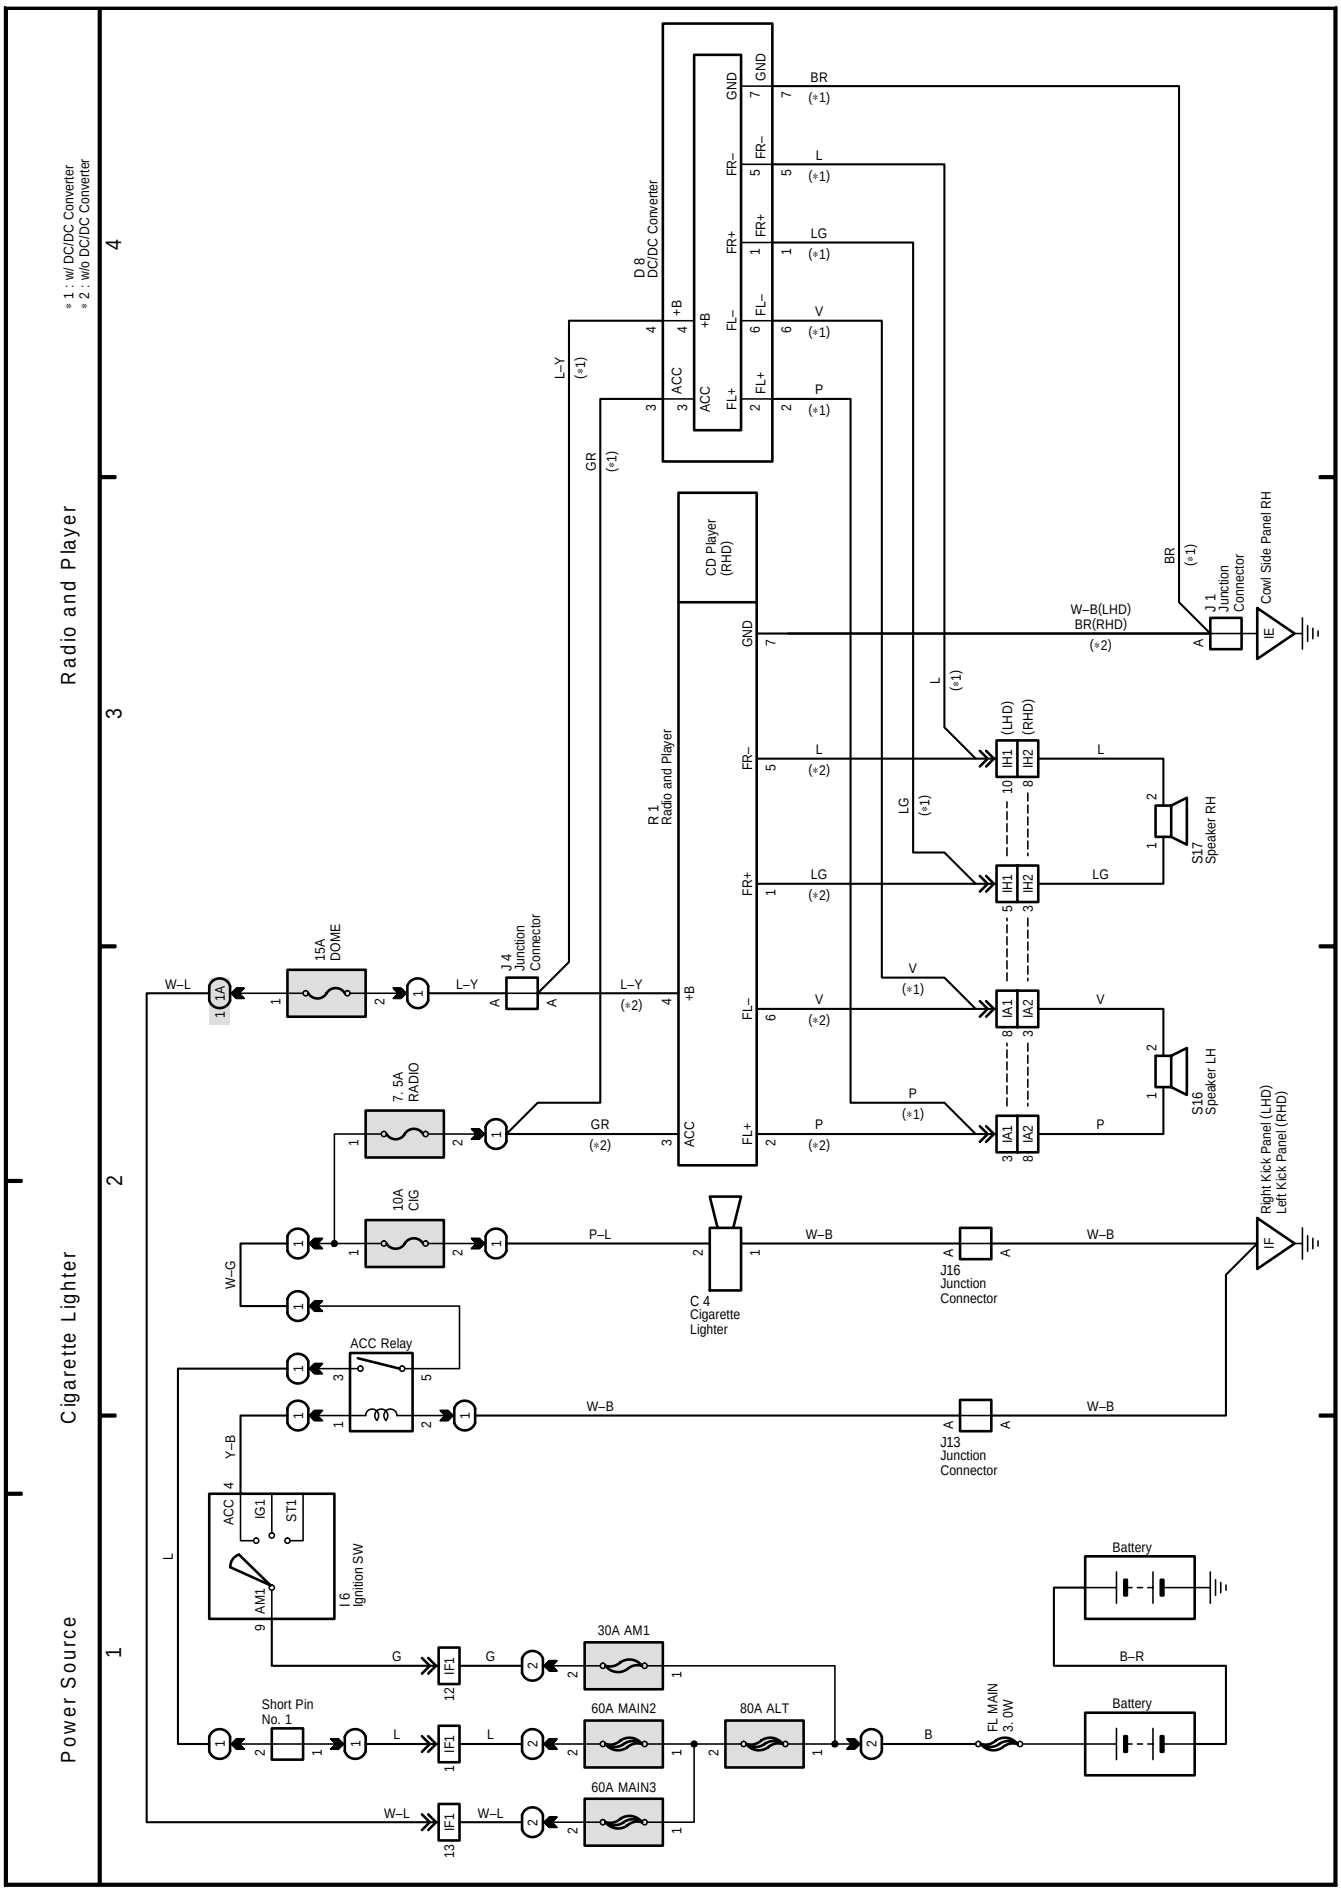

13 DYNA 200
Power Source
Cigarette Lighter
Radio and Player
1
2
3
4
* 1 : w/ DC/DC Converter
* 2 : w/o DC/DC Converter
D 8
DC/DC Converter
GND
FR–
FR+
FL–
FL+
+B
ACC
BR
L
LG
V
P
L–Y
GR
(*1)
(*2)
CD Player
(RHD)
R 1
Radio and Player
J 1
Junction
Connector
Cowl Side Panel RH
W–B(LHD)
BR(RHD)
IH1
IH2
IA1
IA2
S17
Speaker RH
S16
Speaker LH
15A
DOME
7. 5A
RADIO
10A
CIG
J 4
Junction
Connector
W–L
W–G
P–L
W–B
C 4
Cigarette
Lighter
J16
Junction
Connector
J13
Junction
Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
ACC Relay
Y–B
I 6
Ignition SW
ACC
IG1
ST1
AM1
Short Pin
No. 1
30A AM1
60A MAIN2
60A MAIN3
80A ALT
FL MAIN
3. 0W
Battery
B–R
B