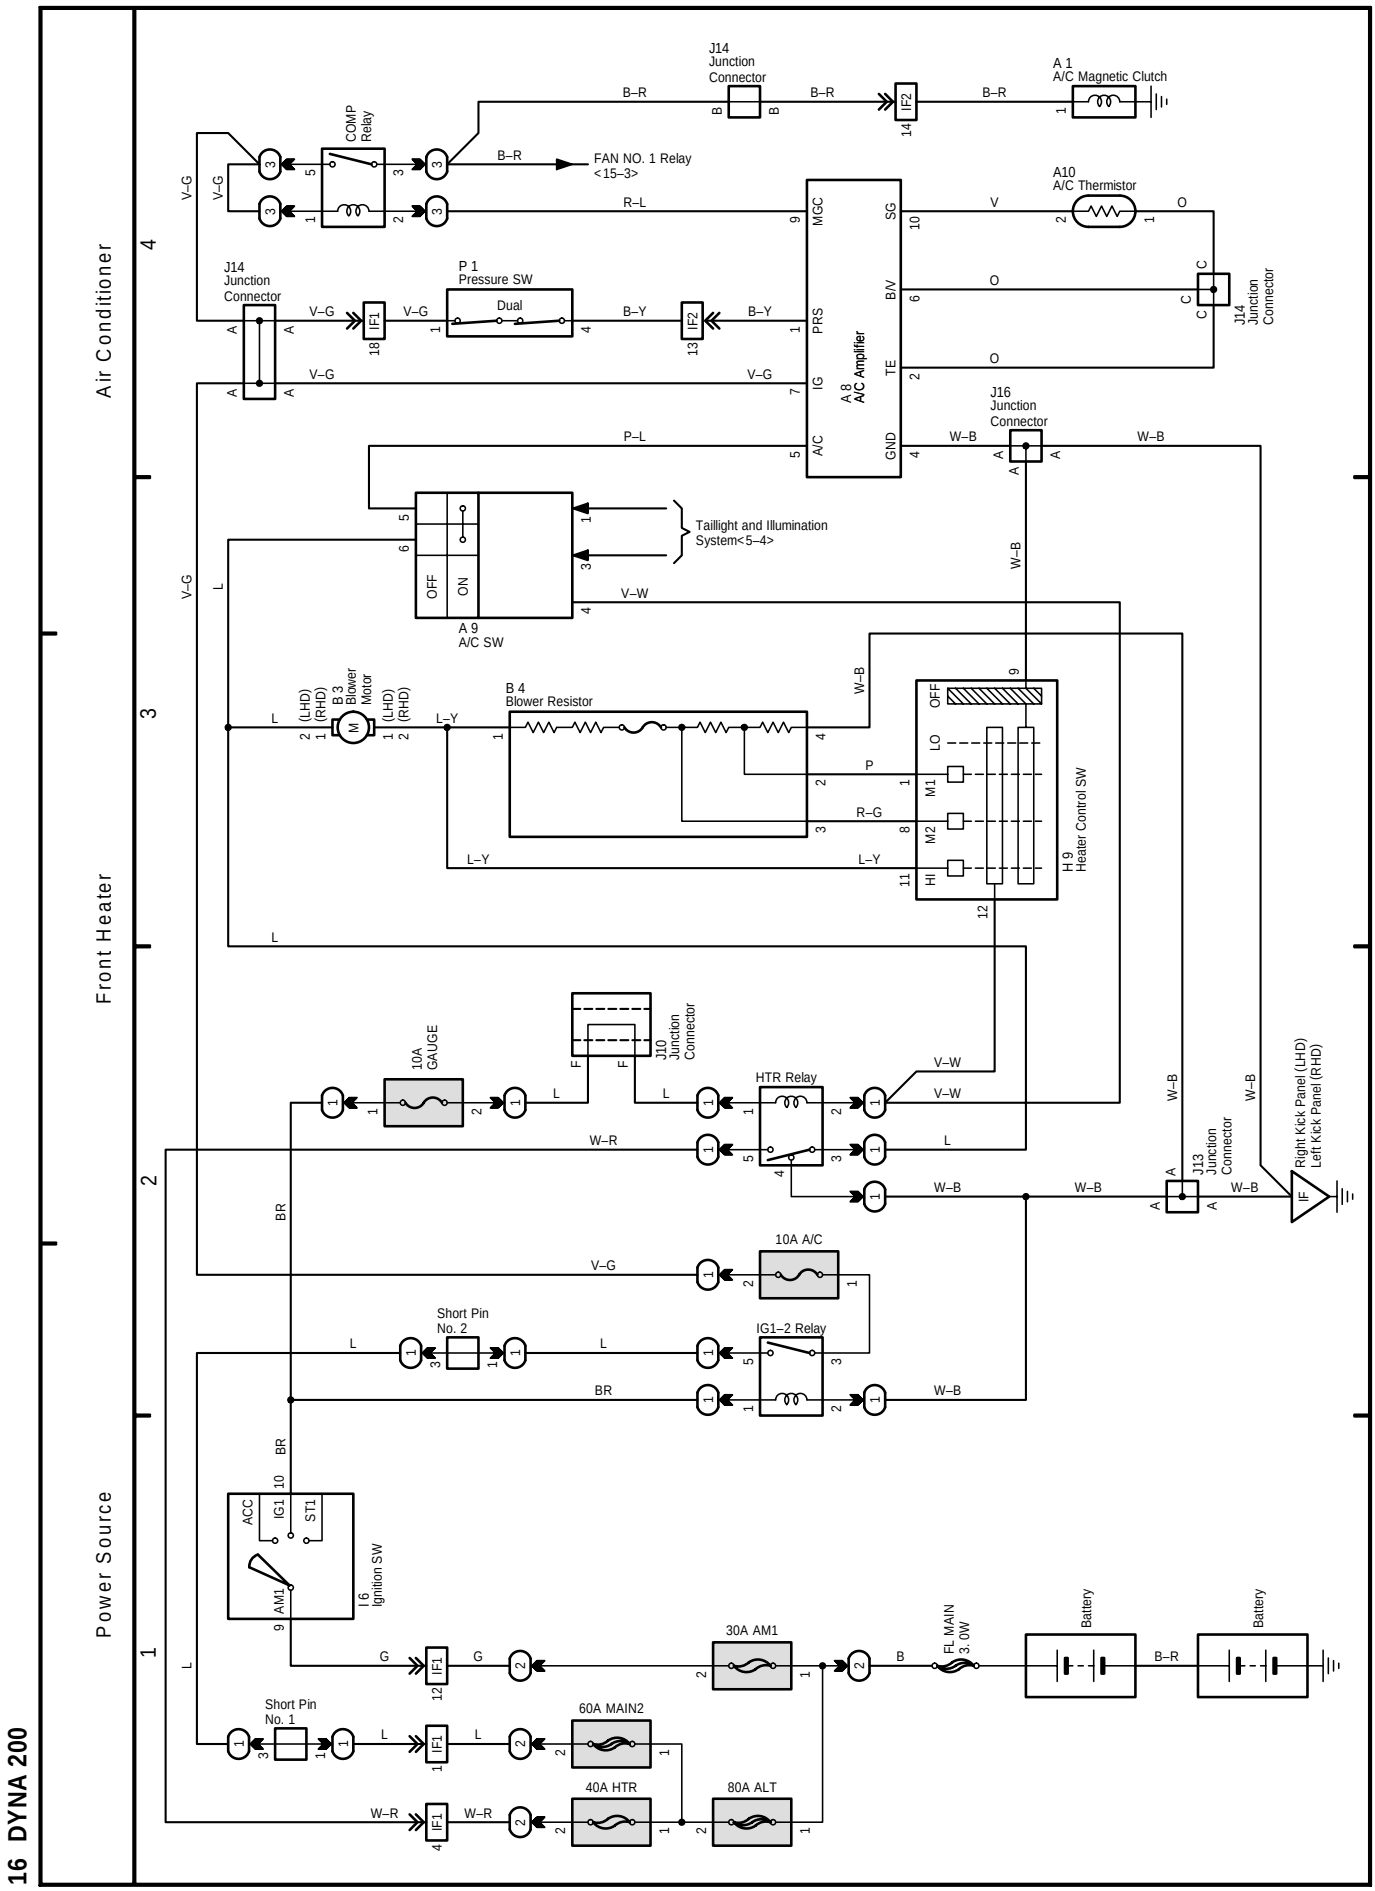

Air Conditioner
Front Heater
Power Source
J14 Junction Connector
B–R
A 1 A/C Magnetic Clutch
COMP Relay
FAN NO. 1 Relay <15–3>
A10 A/C Thermistor
P 1 Pressure SW
Dual
A 8 A/C Amplifier
MGC
SG
B/V
PRS
TE
IG
A/C
GND
J16 Junction Connector
Taillight and Illumination System<5–4>
A 9 A/C SW
OFF
ON
B 3 Blower Motor
B 4 Blower Resistor
H 9 Heater Control SW
LO
M1
M2
HI
10A GAUGE
J10 Junction Connector
HTR Relay
J13 Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
10A A/C
Short Pin No. 2
IG1–2 Relay
I 6 Ignition SW
ACC
IG1
ST1
AM1
30A AM1
FL MAIN 3. 0W
Battery
Short Pin No. 1
60A MAIN2
40A HTR
80A ALT

16 DYNA 200