
Position of Parts in Engine Compartment

[LHD : S05C–TB]

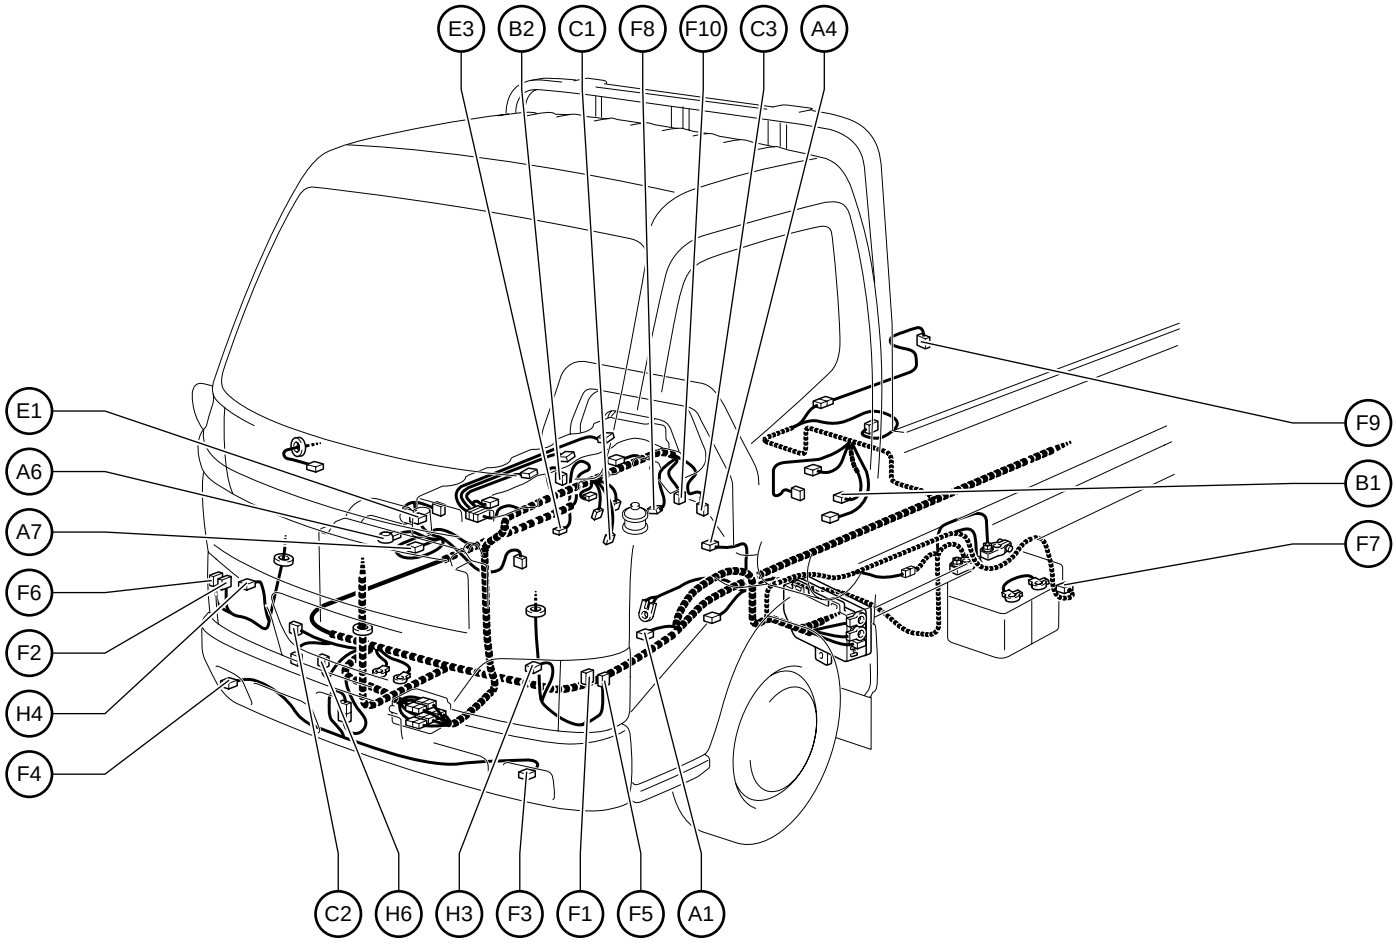

A 1 A/C Magnetic Clutch
A 4 Accel Position Sensor
A 6 Alternator
A 7 Alternator

B 1 Back–Up Light SW
B 2 Brake Vacuum Warning SW

C 1 Camshaft Position Sensor
C 2 Condenser Fan Motor and Resistor
C 3 Crankshaft Position Sensor

E 1 EFI Water Temp. Sensor
Water Temp. Sender
E 3 Exhaust Brake Solenoid

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Turn Signal Light LH
F 6 Front Turn Signal Light RH
F 7 Fuel Filter Warning SW
F 8 Fuel Pressure Sensor
F 9 Fuel Sender
F 10 Fuel Temp. Sensor

H 3 Headlight LH
H 4 Headlight RH
H 6 Horn (Low)