
Position of Parts in Engine Compartment

[LHD : S05C–B]

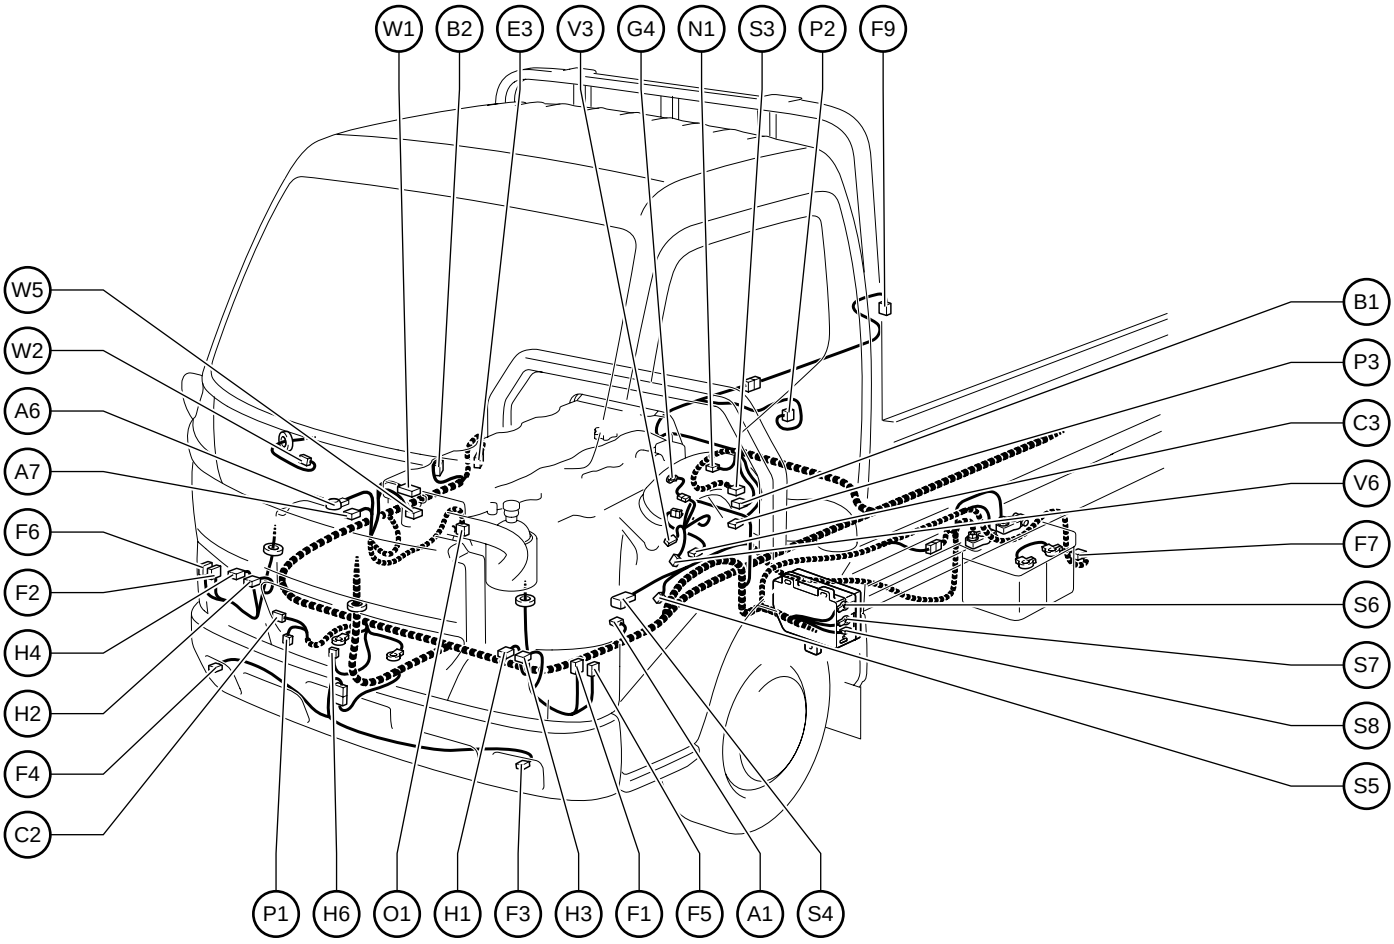

A 1 A/C Magnetic Clutch
A 6 Alternator
A 7 Alternator

B 1 Back–Up Light SW
B 2 Brake Vacuum Warning SW

C 2 Condenser Fan Motor and Resistor
C 3 Crankshaft Position Sensor

E 3 Exhaust Brake Solenoid

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Turn Signal Light LH
F 6 Front Turn Signal Light RH
F 7 Fuel Filter Warning SW
F 9 Fuel Sender

G 4 Glow Plug

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight LH
H 4 Headlight RH
H 6 Horn (Low)

N 1 Neutral Position SW

O 1 Oil Pressure SW

P 1 Pressure SW
P 2 PTO Solenoid Valve
P 3 PTO Transmission Neutral Position SW

S 3 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter
S 6 STARTER Relay
S 7 STARTER Relay
S 8 STARTER Relay

V 3 VSV (Intake Shutter)
V 6 VSV (Exhaust Brake)

W 1 Water Temp. SW
W 2 Wiper Motor
W 5 Water Temp. Sender
Water Temp. Sensor