
Position of Parts in Engine Compartment

[RHD : 15B–FTE]

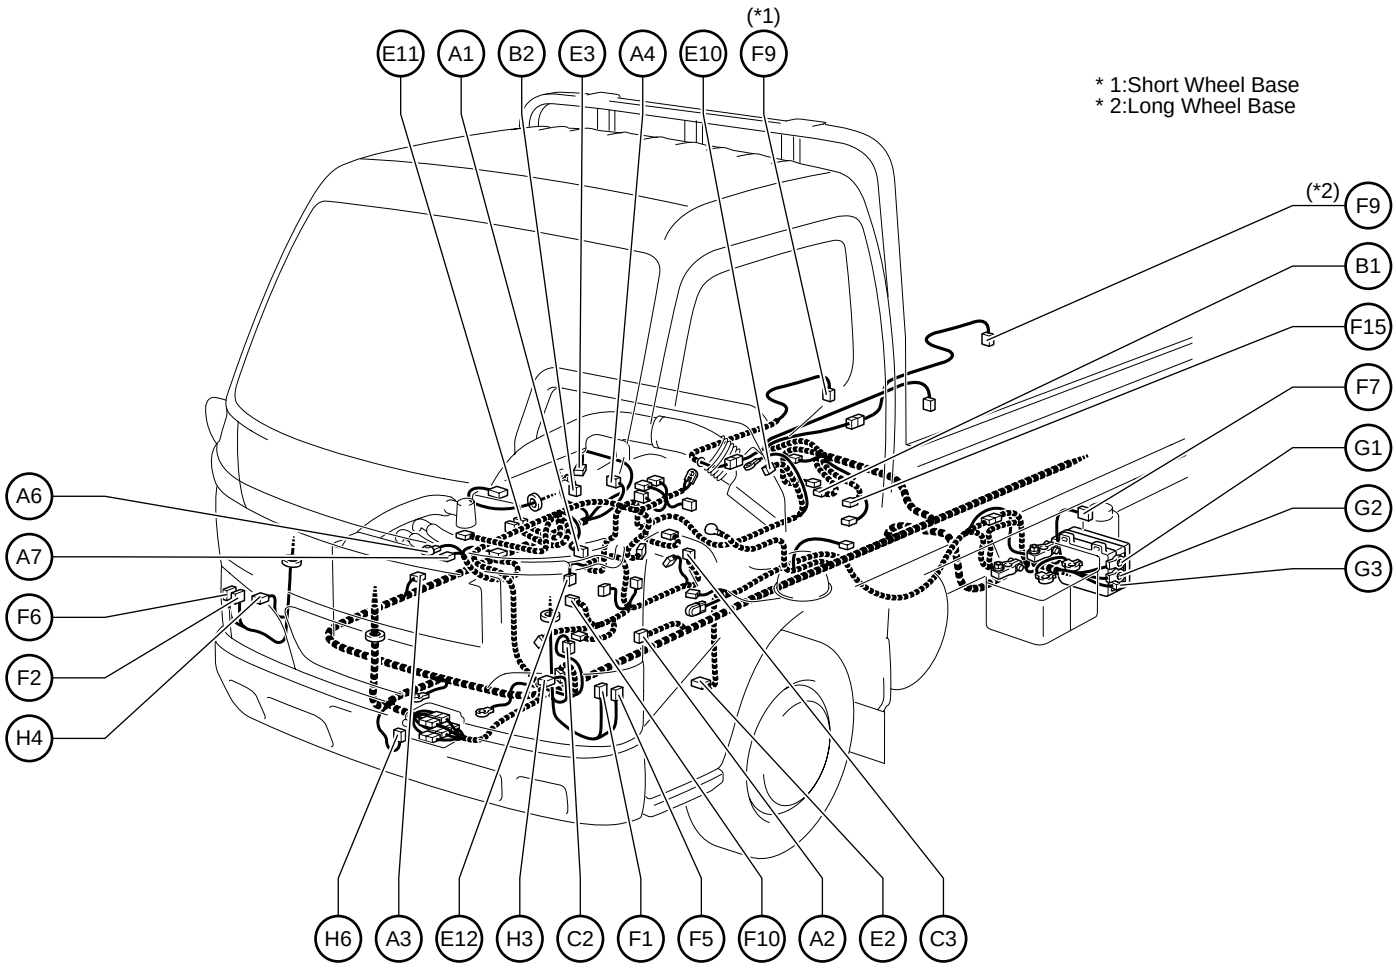

A 1 A/C Magnetic Clutch
A 2 ABS Speed Sensor Front LH
A 3 ABS Speed Sensor Front RH
A 4 Accel Position Sensor
A 6 Alternator
A 7 Alternator

B 1 Back–Up Light SW
B 2 Brake Vacuum Warning SW

C 2 Condenser Fan Motor and Resistor
C 3 Crankshaft Position Sensor

E 2 Engine Oil Level Warning SW
E 3 Exhaust Brake Solenoid
E 10 EDU
E 11 EFI Water Temp. Sensor
E 12 Engine Speed Sensor

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 5 Front Turn Signal Light LH
F 6 Front Turn Signal Light RH
F 7 Fuel Filter Warning SW
F 9 Fuel Sender
F 10 Fuel Temp. Sensor
F 15 First Gear Position SW

G 1 GLOW MAIN Relay
G 2 GLOW MAIN Relay
G 3 GLOW MAIN Relay

H 3 Headlight LH
H 4 Headlight RH
H 6 Horn (Low)