
Position of Parts in Engine Compartment

[RHD : 15B–FTE]

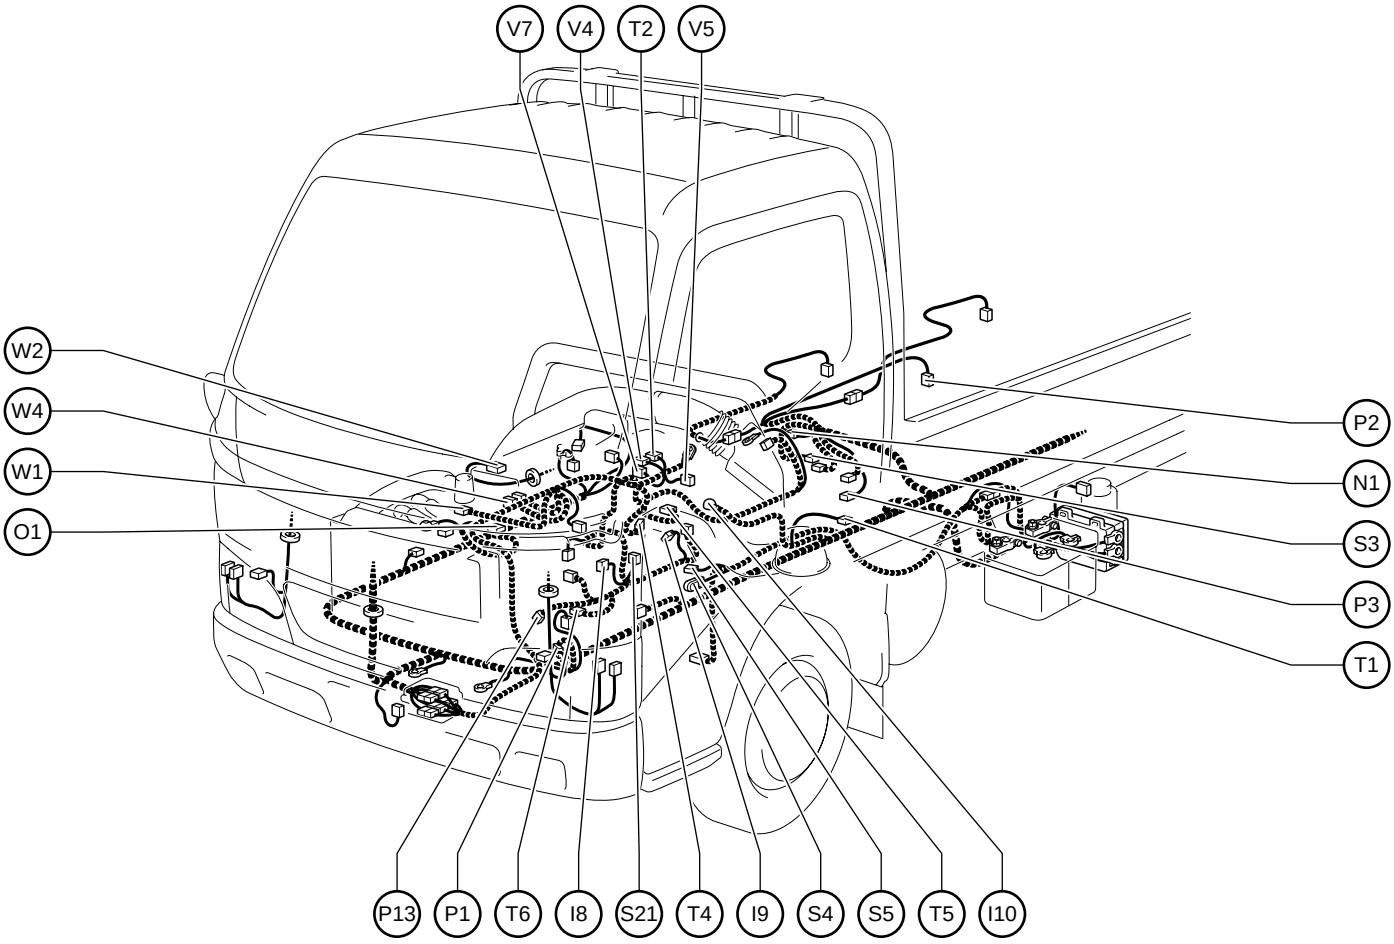

I 8 Injection Pump
I 9 Intake Air Temp. Sensor
I 10 Intake Heater

N 1 Neutral Position SW

O 1 Oil Pressure SW

P 1 Pressure SW
P 2 PTO Solenoid Valve
P 3 PTO Transmission Neutral Position SW
P 13 Power Steering Oil Pressure SW

S 3 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter
S 21 Spill Valve

T 1 Tilt Cab Control SW
T 2 Turbo Pressure Sensor
T 4 Throttle Control Motor
T 5 Throttle Open SW
T 6 Timing Control Valve

V 4 VRV (EGR)
V 5 VSV (EGR Cut)
V 7 VSV (Pressure Sensor)

W 1 Water Temp. SW
W 2 Wiper Motor
W 4 Water Temp. Sender