
Position of Parts in Engine Compartment

[RHD : S05C–TB]

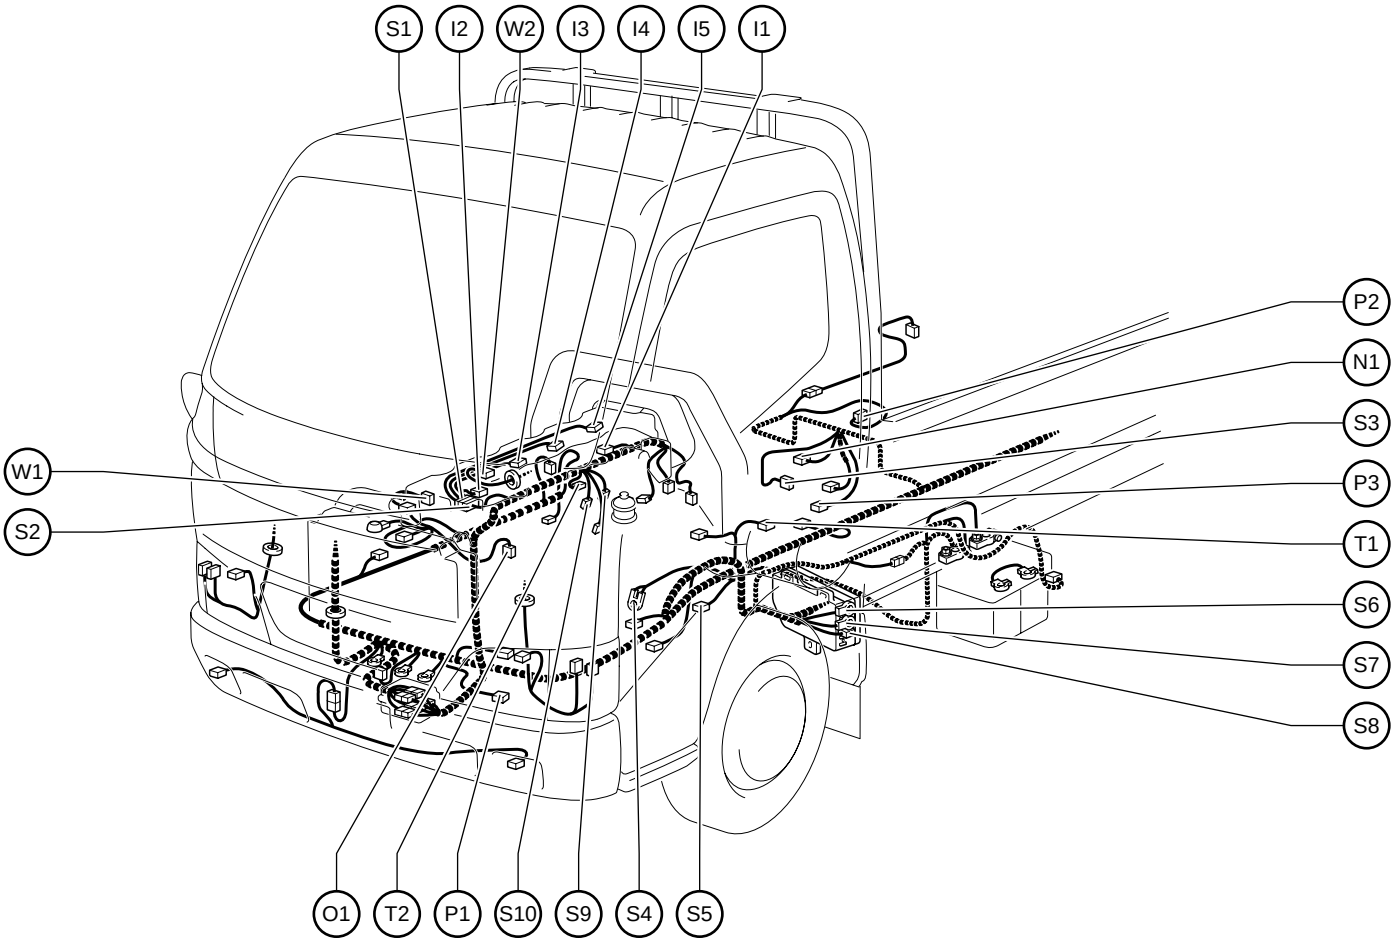

I 1 Injection Pump Correction Resistor
I 2 Injector No.1
I 3 Injector No.2
I 4 Injector No.3
I 5 Injector No.4

N 1 Neutral Position SW

O 1 Oil Pressure SW

P 1 Pressure SW
P 2 PTO Solenoid Valve
P 3 PTO Transmission Neutral Position SW

S 1 Short Connector
S 2 Short Connector
S 3 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter
S 6 STARTER Relay
S 7 STARTER Relay
S 8 STARTER Relay
S 9 Suction Control Valve No.1
S10 Suction Control Valve No.2

T 1 Tilt Cab Control SW
T 2 Turbo Pressure Sensor

W 1 Water Temp. SW
W 2 Wiper Motor