
Position of Parts in Engine Compartment

[RHD : 14B]

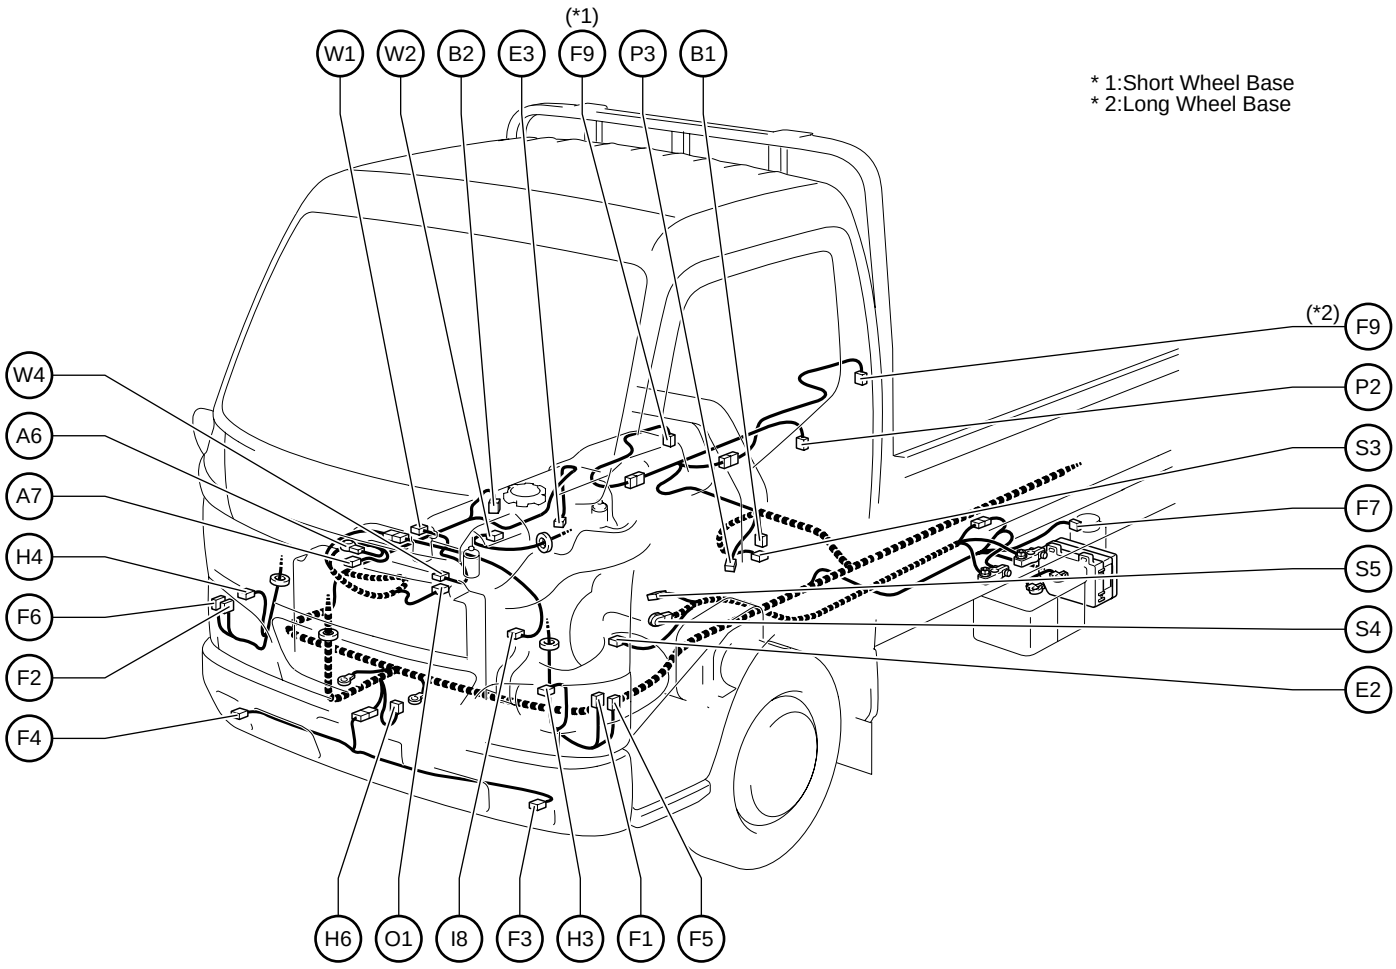

A 6 Alternator
A 7 Alternator

B 1 Back–Up Light SW
B 2 Brake Vacuum Warning SW

E 2 Engine Oil Level Warning SW
E 3 Exhaust Brake Solenoid

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Turn Signal Light LH
F 6 Front Turn Signal Light RH
F 7 Fuel Filter Warning SW
F 9 Fuel Sender

H 3 Headlight LH
H 4 Headlight RH
H 6 Horn (Low)

I 8 Injection Pump

O 1 Oil Pressure SW

P 2 PTO Solenoid Valve
P 3 PTO Transmission Neutral Position SW

S 3 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter

W 1 Water Temp. SW
W 2 Wiper Motor
W 4 Water Temp. Sender