
Position of Parts in Instrument Panel

[RHD]

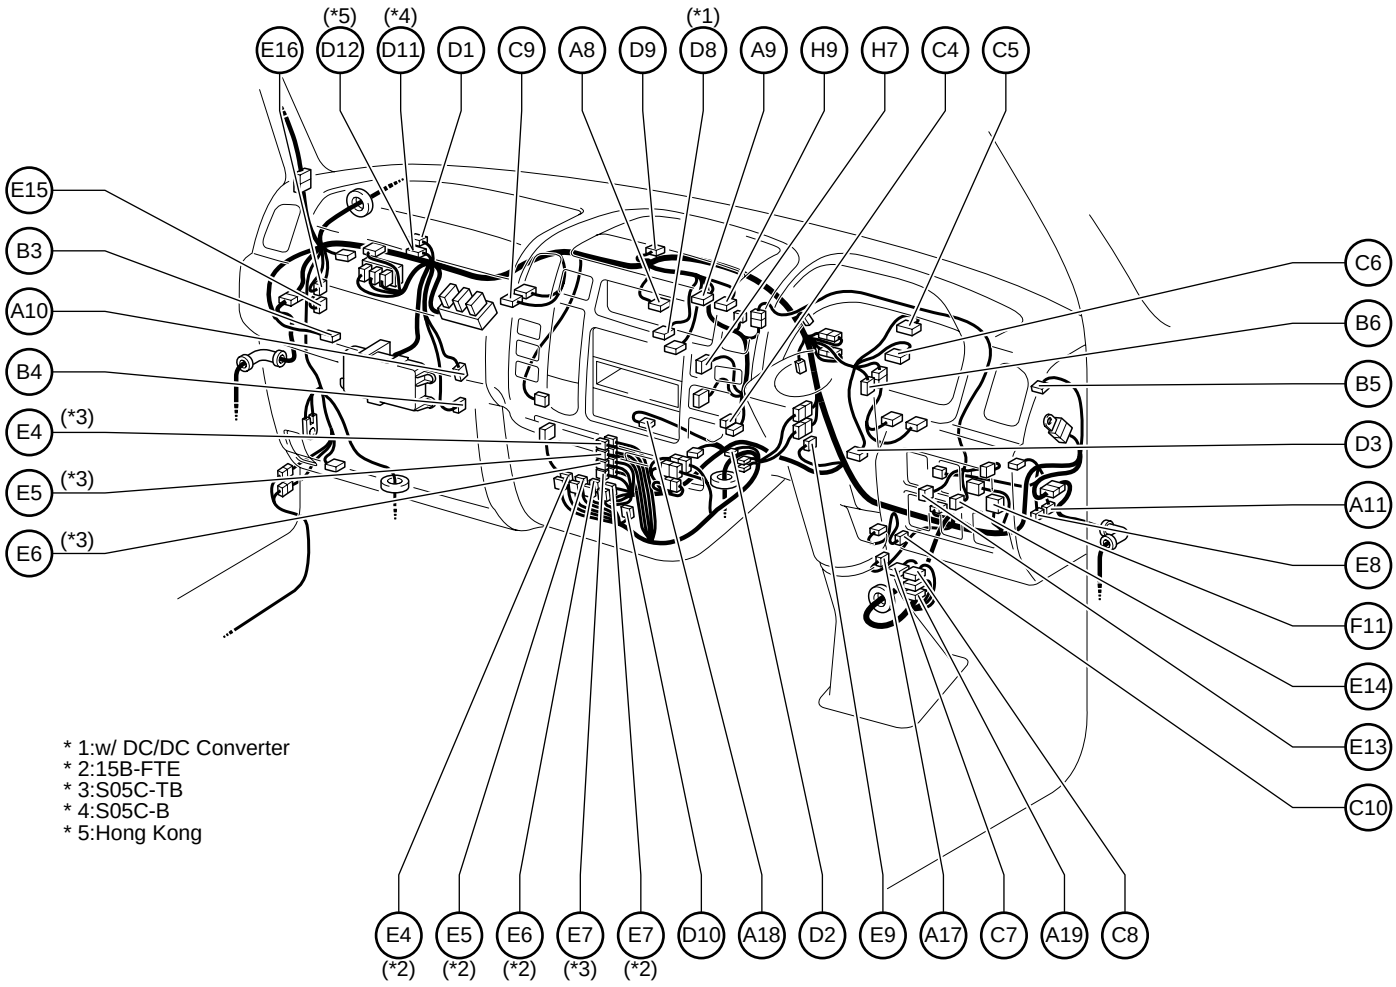

A 8 A/C Amplifier
A 9 A/C SW
A10 A/C Thermistor
A11 Accelerator Pedal Position Sensor
A17 Airbag Sensor Assembly
A18 Airbag Sensor Front
A19 Airbag Squib (Steering Wheel Pad)

B 3 Blower Motor
B 4 Blower Resistor
B 5 Brake Fluid Level Warning SW
B 6 Brake Vacuum Warning Buzzer

C 4 Cigarette Lighter
C 5 Combination Meter
C 6 Combination Meter
C 7 Combination SW
C 8 Combination SW
C 9 Condenser Fan Fuse
C10 Clutch Pedal Stroke Sensor

D 1 Diode (A/C No.1)
D 2 Diode (Pressure Charge Valve)
D 3 DLC3
D 8 DC/DC Converter
D 9 Diode (A/C No.2)
D10 Diode (ES Start)
D11 Diode (Parking Brake)
D12 Diode (Stop)

E 4 Engine ECU
E 5 Engine ECU
E 6 Engine ECU
E 7 Engine ECU
E 8 Exhaust Brake Accelerator Pedal SW
E 9 Exhaust Brake Clutch SW
E13 ES Start Main SW
E14 ES Start Timing SW
E15 ES Start ECU
E16 ES Start ECU

F 11 Flasher Relay

H 7 Hazard SW
H 9 Heater Control SW