
Position of Parts in Instrument Panel

[RHD]

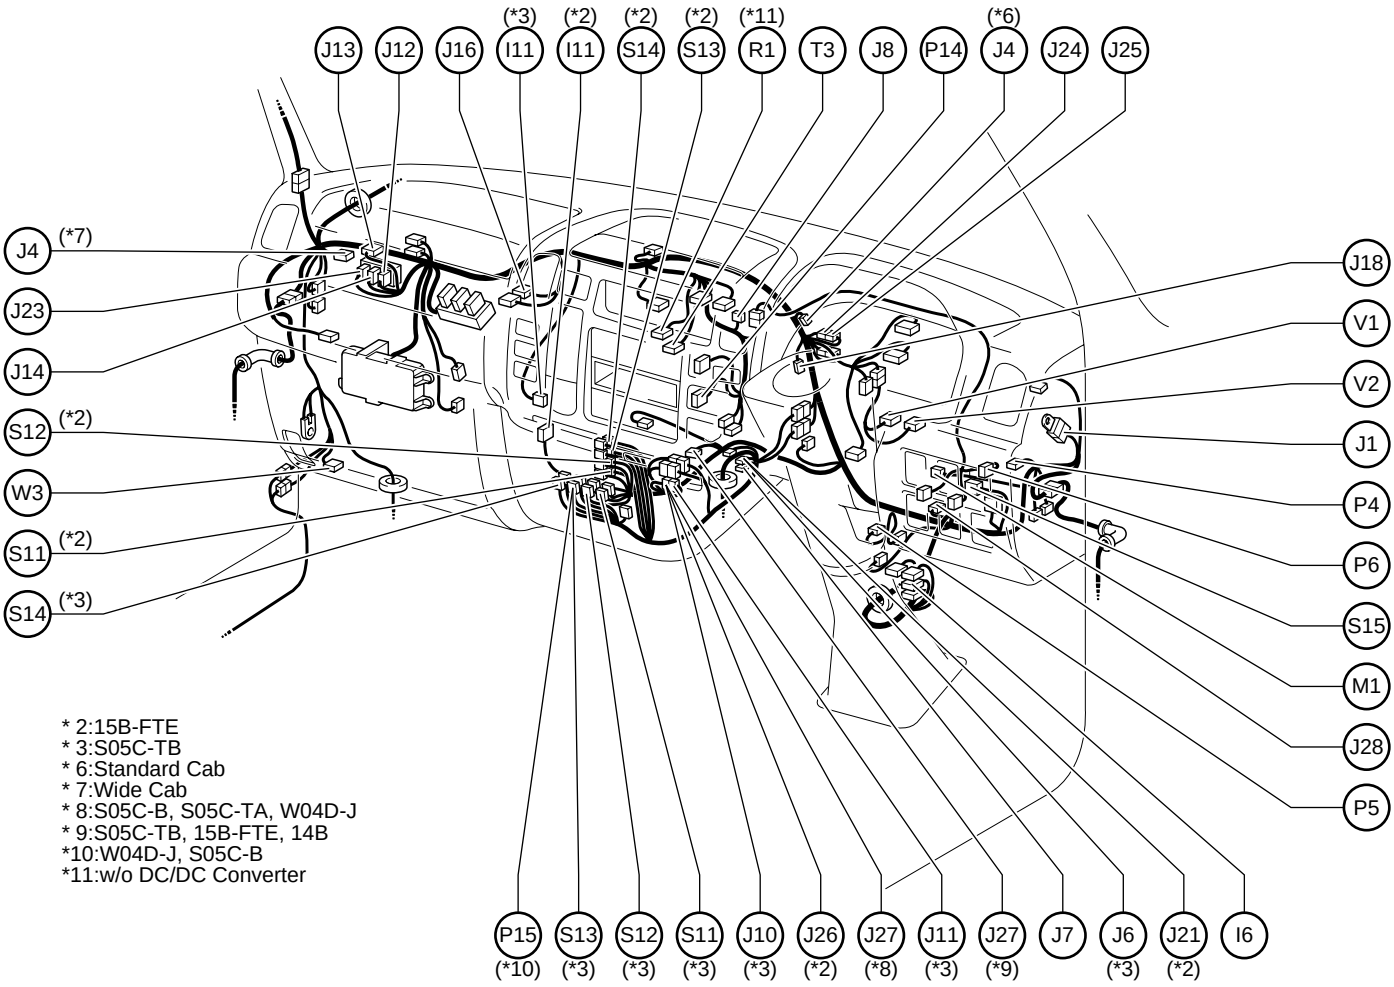

* 2:15B-FTE
* 3:S05C-TB
* 6:Standard Cab
* 7:Wide Cab
* 8:S05C-B, S05C-TA, W04D-J
* 9:S05C-TB, 15B-FTE, 14B
*10:W04D-J, S05C-B
*11:w/o DC/DC Converter

I 6 Ignition SW
I 11 Integration Relay

J 1 Junction Connector
J 4 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 16 Junction Connector
J 18 Junction Connector
J 21 Junction Connector
J 23 Junction Connector
J 24 Junction Connector
J 25 Junction Connector
J 26 Junction Connector
J 27 Junction Connector
J 28 Junction Connector

M 1 Master Cylinder Pressure Sensor

P 4 Power Outlet (Room)
P 5 PTO Clutch SW
P 6 PTO SW or Short Pin
P 14 Parking Light SW or Short Pin
P 15 Pre–Heating Timer

R 1 Radio and Player

S 11 Skid Control ECU
S 12 Skid Control ECU
S 13 Skid Control ECU
S 14 Skid Control ECU
S 15 Stop Light SW

T 3 Tachograph

V 1 Vacuum Sensor No.1
V 2 Vacuum Sensor No.2

W 3 Washer Motor