
Connector Joining Wire Harness and Wire Harness

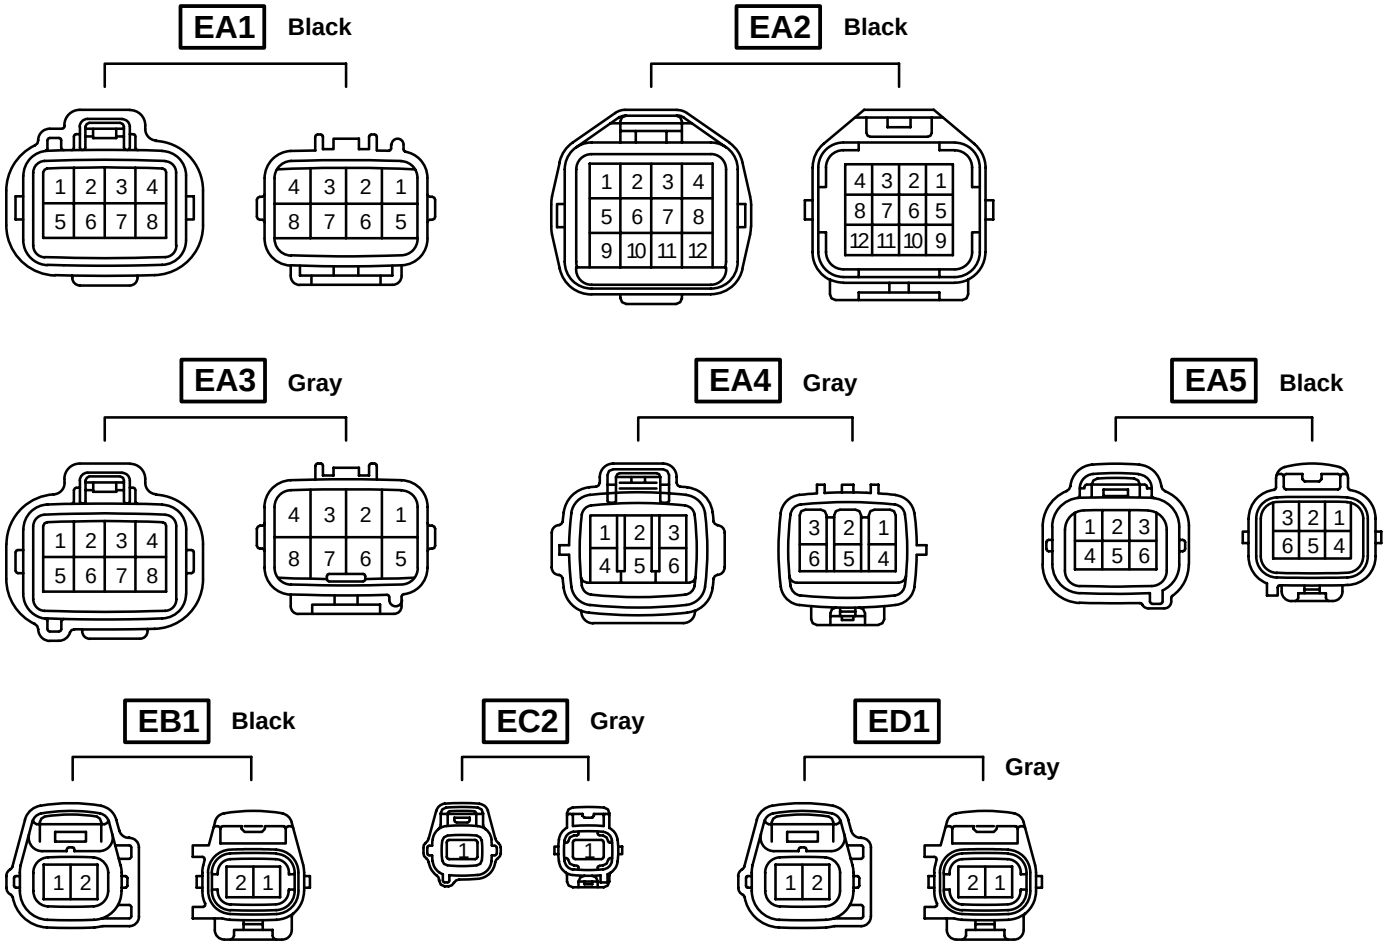

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Wire (Front Side of the No.2 Crossmember)
EA2	
EA3	
EA4	
EA5	
EB1	Frame No.3 Wire and Engine Room Main Wire (Right Side of the No.3 Crossmember)
EC2	Engine No.2 Wire and Engine Room Main Wire (Left Side of the No.3 Crossmember)
ED1	Engine Room No.2 Wire and Engine Room Main Wire (Front Crossmember)