
## Connector Joining Wire Harness and Wire Harness

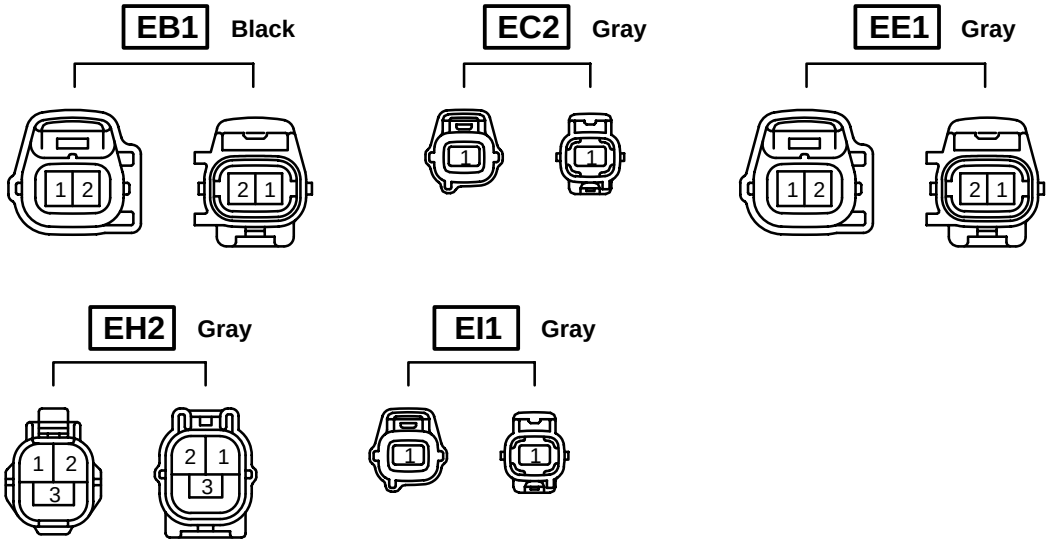


| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|
| EB1 | Frame No.3 Wire and Engine Room Main Wire (Right Side of the No.3 Crossmember) |
| EC2 | Engine No.2 Wire and Engine Room Main Wire (Left Side of the No.3 Crossmember) |
| EE1 | Engine Room No.4 Wire and Engine Room Main Wire (Front Crossmember) |
| EH2 | Engine Room Main Wire and Engine Wire (Upper the Alternator) |
| EI1 | Engine Wire and Glow Sub Wire (Front Left Side of the Engine Block) |