
Connector Joining Wire Harness and Wire Harness

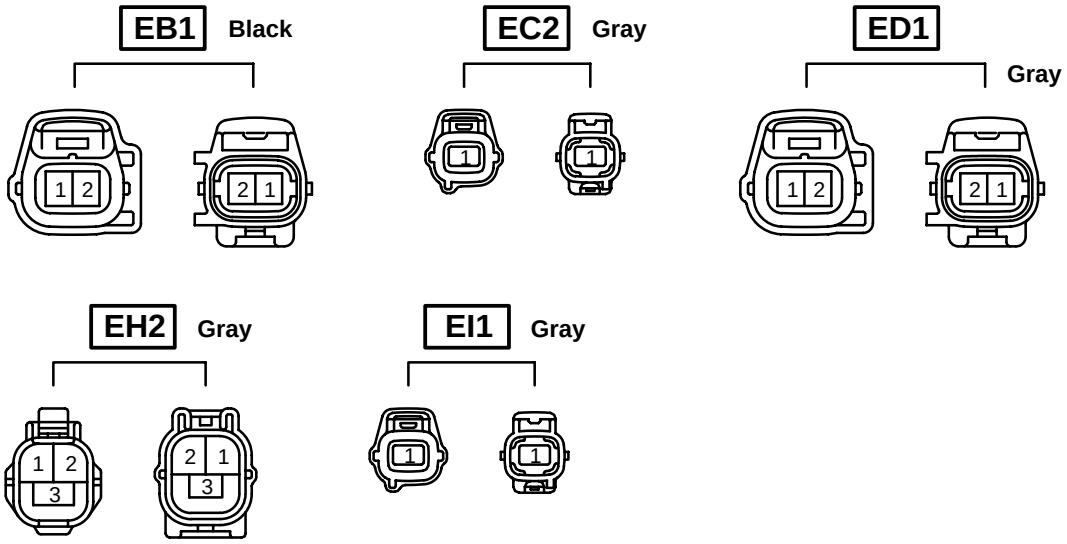

Code	Joining Wire Harness and Wire Harness (Connector Location)
EB1	Frame No.3 Wire and Engine Room Main Wire (Right Side of the No.3 Crossmember)
EC2	Engine No.2 Wire and Engine Room Main Wire (Left Side of the No.3 Crossmember)
ED1	Engine Room No.2 Wire and Engine Room Main Wire (Front Crossmember)
EH2	Engine Room Main Wire and Engine Wire (Upper the Alternator)
EI1	Engine Wire and Glow Sub Wire (Front Left Side of the Engine Block)