
Connector Joining Wire Harness and Wire Harness

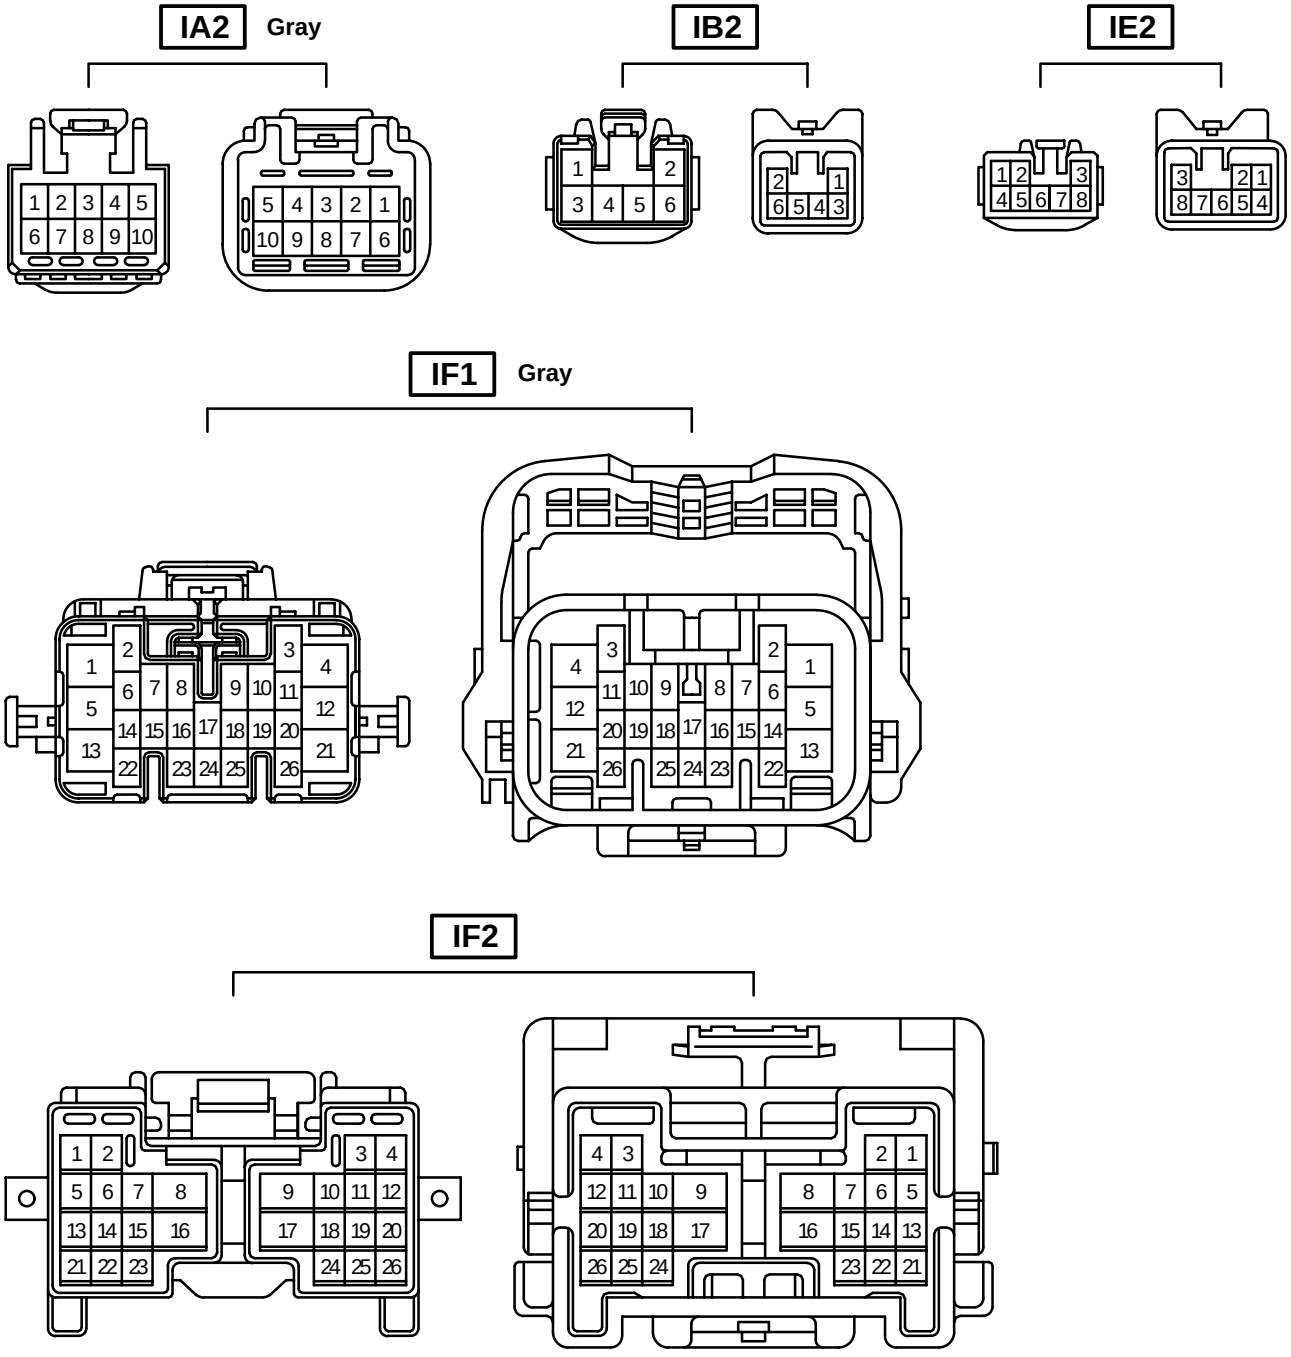

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA2	Front Door LH Wire and Cowl Wire (Cowl Side Panel LH)
IB2	Floor Wire and Cowl Wire (Cowl Side Panel LH)
IE2	Instrument Panel Wire and Cowl Wire (Instrument Panel Reinforcement Center)
IF1	Engine Room Main Wire and Cowl Wire (Right Side of the Accelerator Pedal)
IF2	