
Connector Joining Wire Harness and Wire Harness

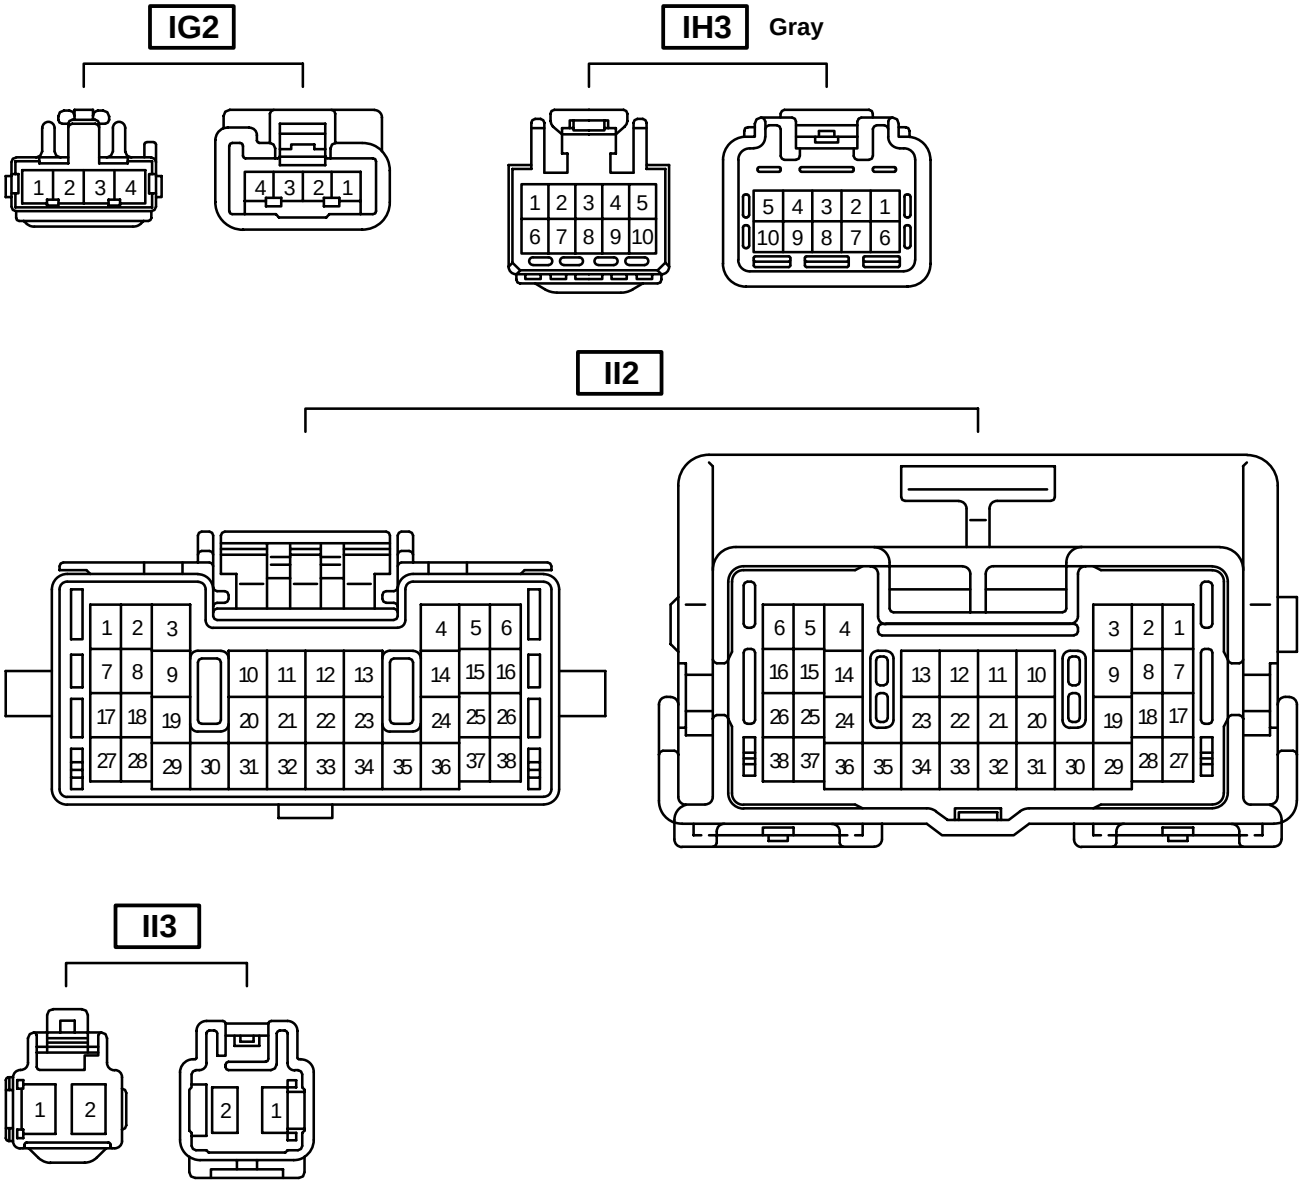

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG2	Roof Wire and Cowl Wire (Cowl Side Panel RH)
IH3	Front Door RH Wire and Cowl Wire (Cowl Side Panel RH)
II2	Engine Room Main Wire and Cowl Wire (Instrument Panel Brace LH)
II3	