
Connector Joining Wire Harness and Wire Harness

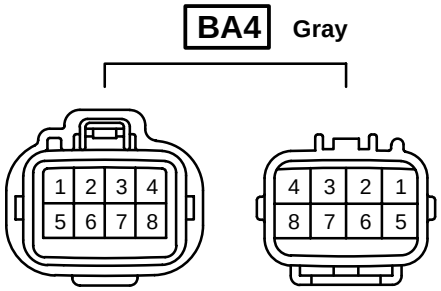

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA4	Engine Room Main Wire and Frame Wire (Rear Left Side of the No.3 Crossmember)