
Connector Joining Wire Harness and Wire Harness

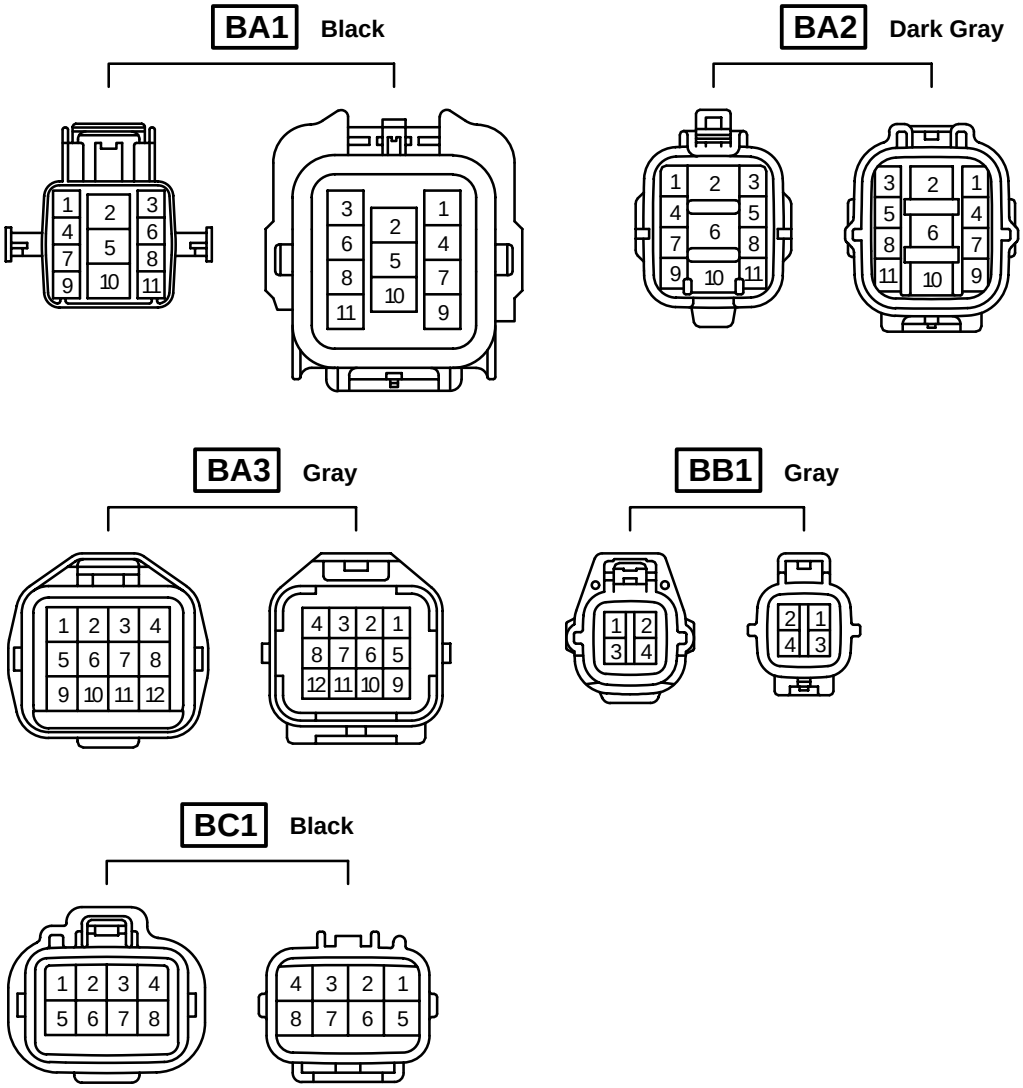

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Engine Room Main Wire and Frame Wire (Rear Left Side of the No.3 Crossmember)
BA2	
BA3	
BB1	Speed Sensor Wire and Frame Wire (Left Side of the No.6 Crossmember)
BC1	Frame No.2 Wire and Frame Wire (Left Side of the End Crossmember)