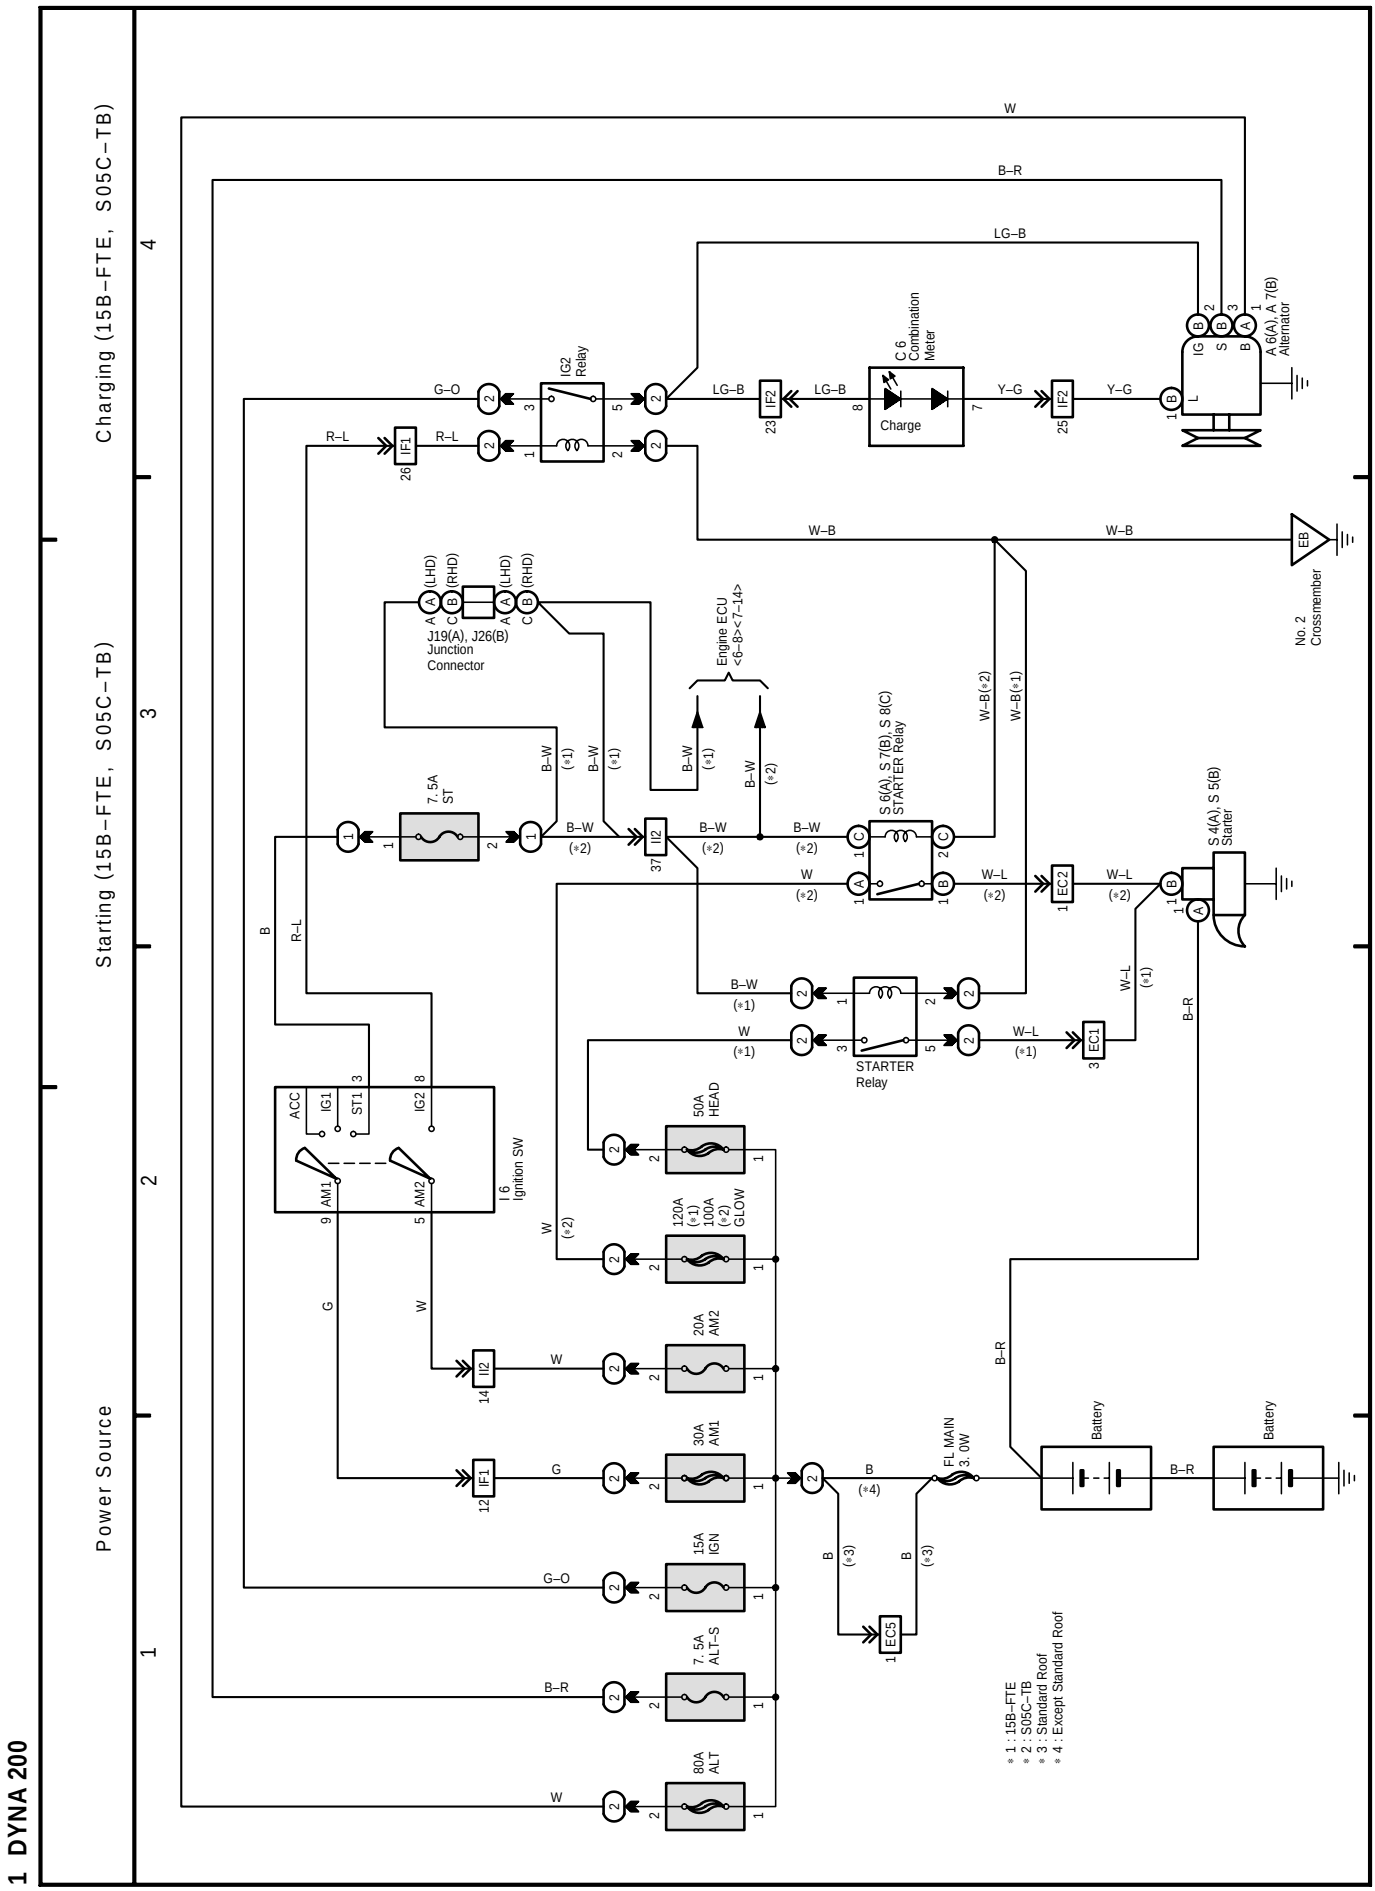

1 DYNA 200
Power Source
Starting (15B–FTE, S05C–TB)
Charging (15B–FTE, S05C–TB)
1
2
3
4
W
B–R
LG–B
G–O
R–L
W–B
B–W
W–L
B
G
Y–G
W–B(*2)
W–B(*1)
C 6 Combination Meter
Charge
IG2 Relay
A 6(A), A 7(B) Alternator
EB
No. 2 Crossmember
J19(A), J26(B) Junction Connector
(LHD)
(RHD)
Engine ECU <6–8><7–14>
7. 5A ST
S 6(A), S 7(B), S 8(C) STARTER Relay
S 4(A), S 5(B) Starter
STARTER Relay
I 6 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
50A HEAD
120A (*1) 100A (*2) GLOW
20A AM2
30A AM1
15A IGN
7. 5A ALT–S
80A ALT
FL MAIN 3. 0W
Battery
IF1
IF2
II2
EC1
EC2
EC5
(*1)
(*2)
(*3)
(*4)
* 1 : 15B–FTE
* 2 : S05C–TB
* 3 : Standard Roof
* 4 : Except Standard Roof