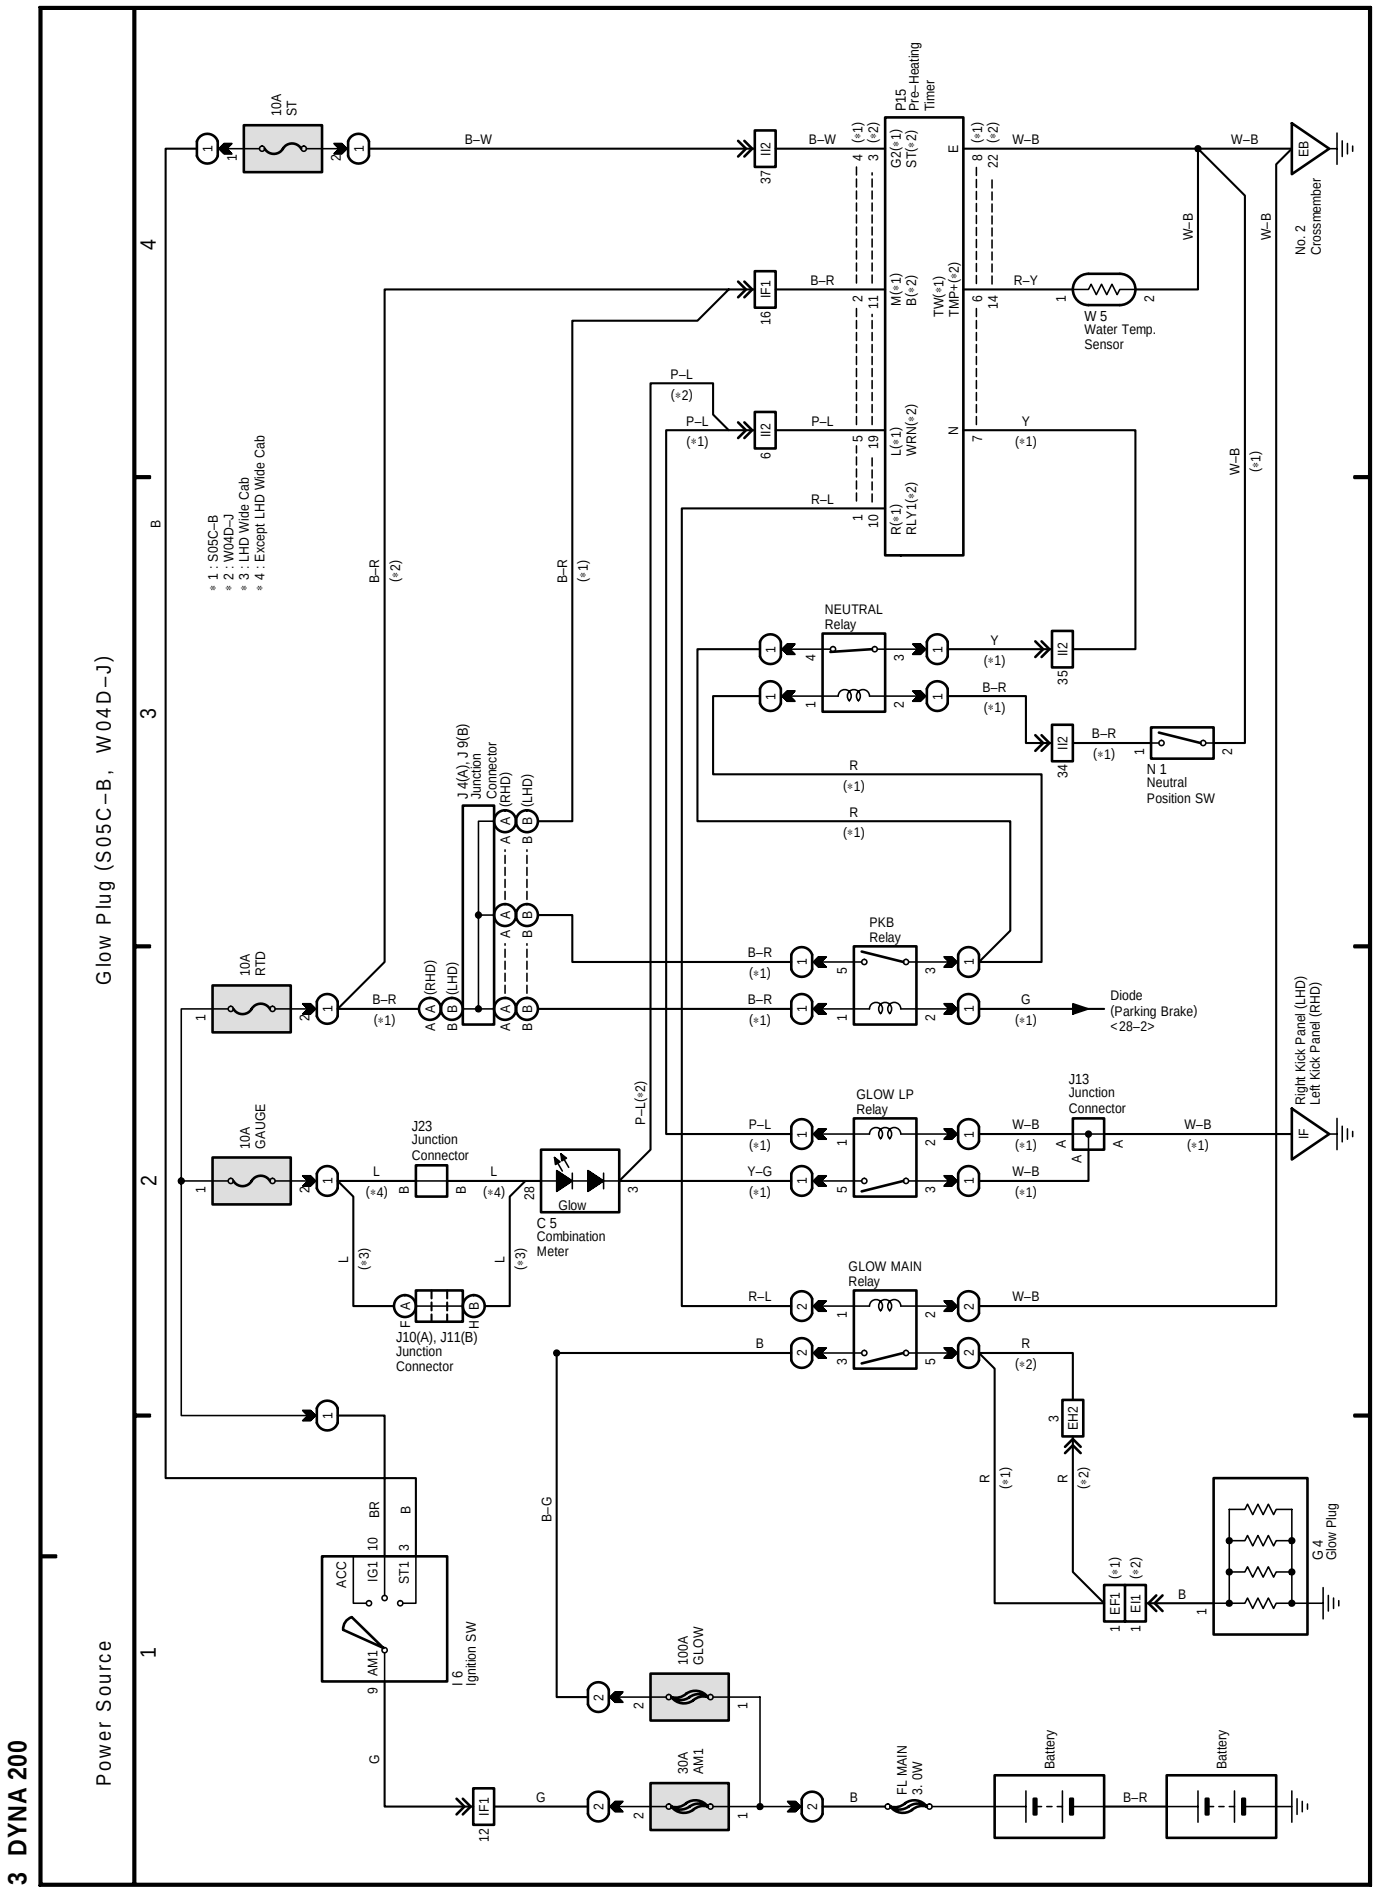

3 DYNA 200
Power Source
Glow Plug (S05C–B, W04D–J)
* 1 : S05C–B
* 2 : W04D–J
* 3 : LHD Wide Cab
* 4 : Except LHD Wide Cab
10A ST
10A RTD
10A GAUGE
30A AM1
100A GLOW
FL MAIN 3.0W
P15 Pre–Heating Timer
W 5 Water Temp. Sensor
No. 2 Crossmember
EB
NEUTRAL Relay
N 1 Neutral Position SW
PKB Relay
Diode (Parking Brake) <28–2>
GLOW LP Relay
GLOW MAIN Relay
J13 Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
IF
J23 Junction Connector
J4(A), J9(B) Junction Connector (RHD) (LHD)
J10(A), J11(B) Junction Connector
C 5 Combination Meter
Glow
I 6 Ignition SW
ACC
IG1
ST1
AM1
G 4 Glow Plug
EF1
EI1
EH2
Battery
Battery