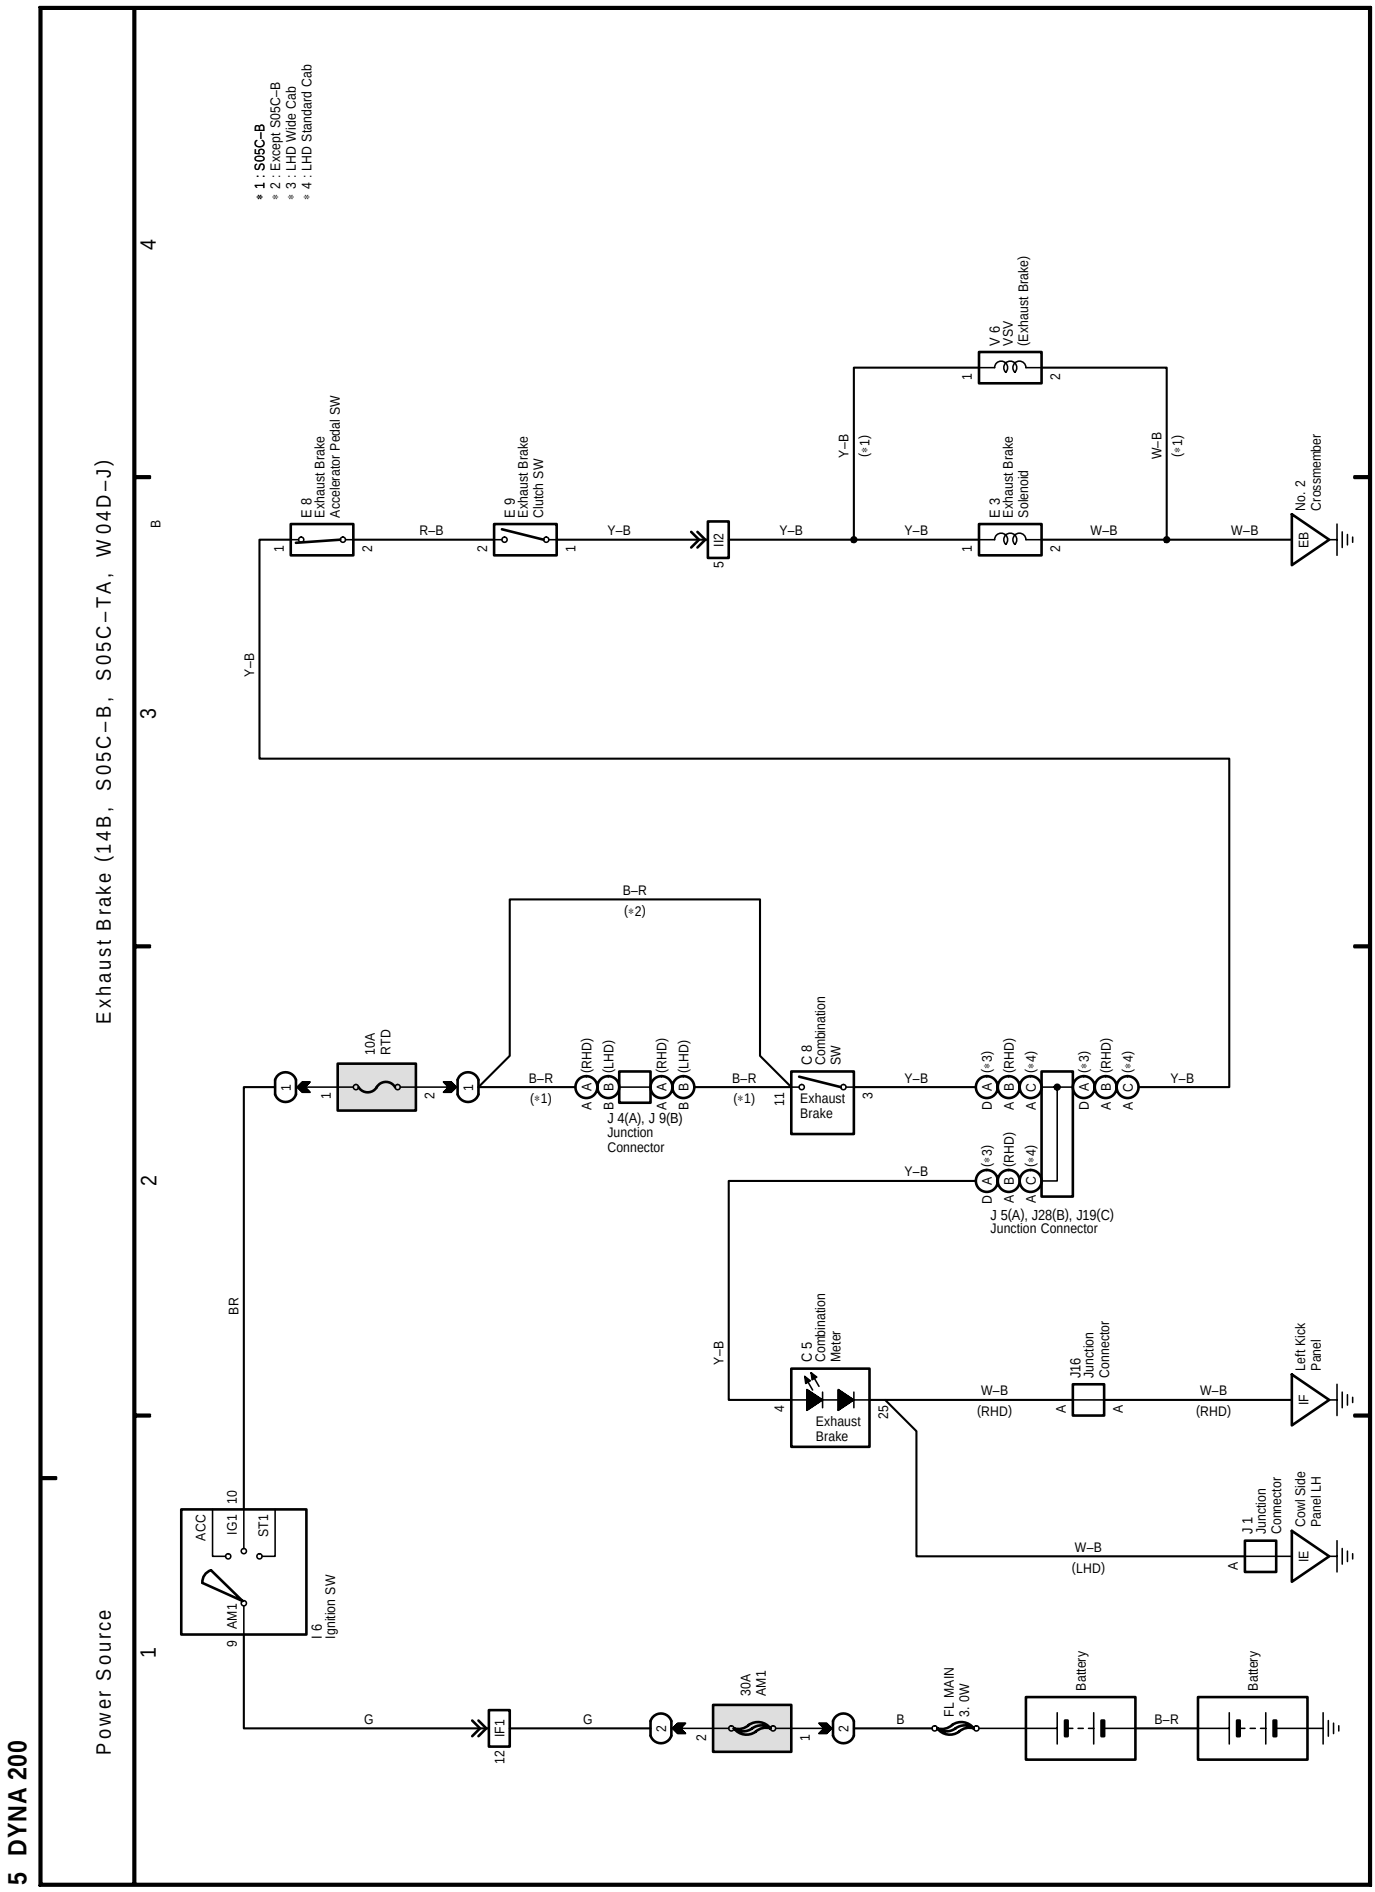

5 DYNA 200
Power Source
Exhaust Brake (14B, S05C–B, S05C–TA, W04D–J)
∗1 : S05C–B
∗2 : Except S05C–B
∗3 : LHD Wide Cab
∗4 : LHD Standard Cab
E 8 Exhaust Brake Accelerator Pedal SW
E 9 Exhaust Brake Clutch SW
V 6 VSV (Exhaust Brake)
E 3 Exhaust Brake Solenoid
No. 2 Crossmember
EB
10A RTD
C 8 Combination SW
Exhaust Brake
J 4(A), J 9(B) Junction Connector
J 5(A), J28(B), J19(C) Junction Connector
C 5 Combination Meter
Exhaust Brake
J16 Junction Connector
Left Kick Panel
IF
I 6 Ignition SW
ACC
IG1
ST1
AM1
J1 Junction Connector
Cowl Side Panel LH
IE
30A AM1
FL MAIN 3. 0W
Battery
Battery
IF1
Y–B
R–B
W–B
B–R
BR
G
B
(∗1)
(∗2)
(RHD)
(LHD)