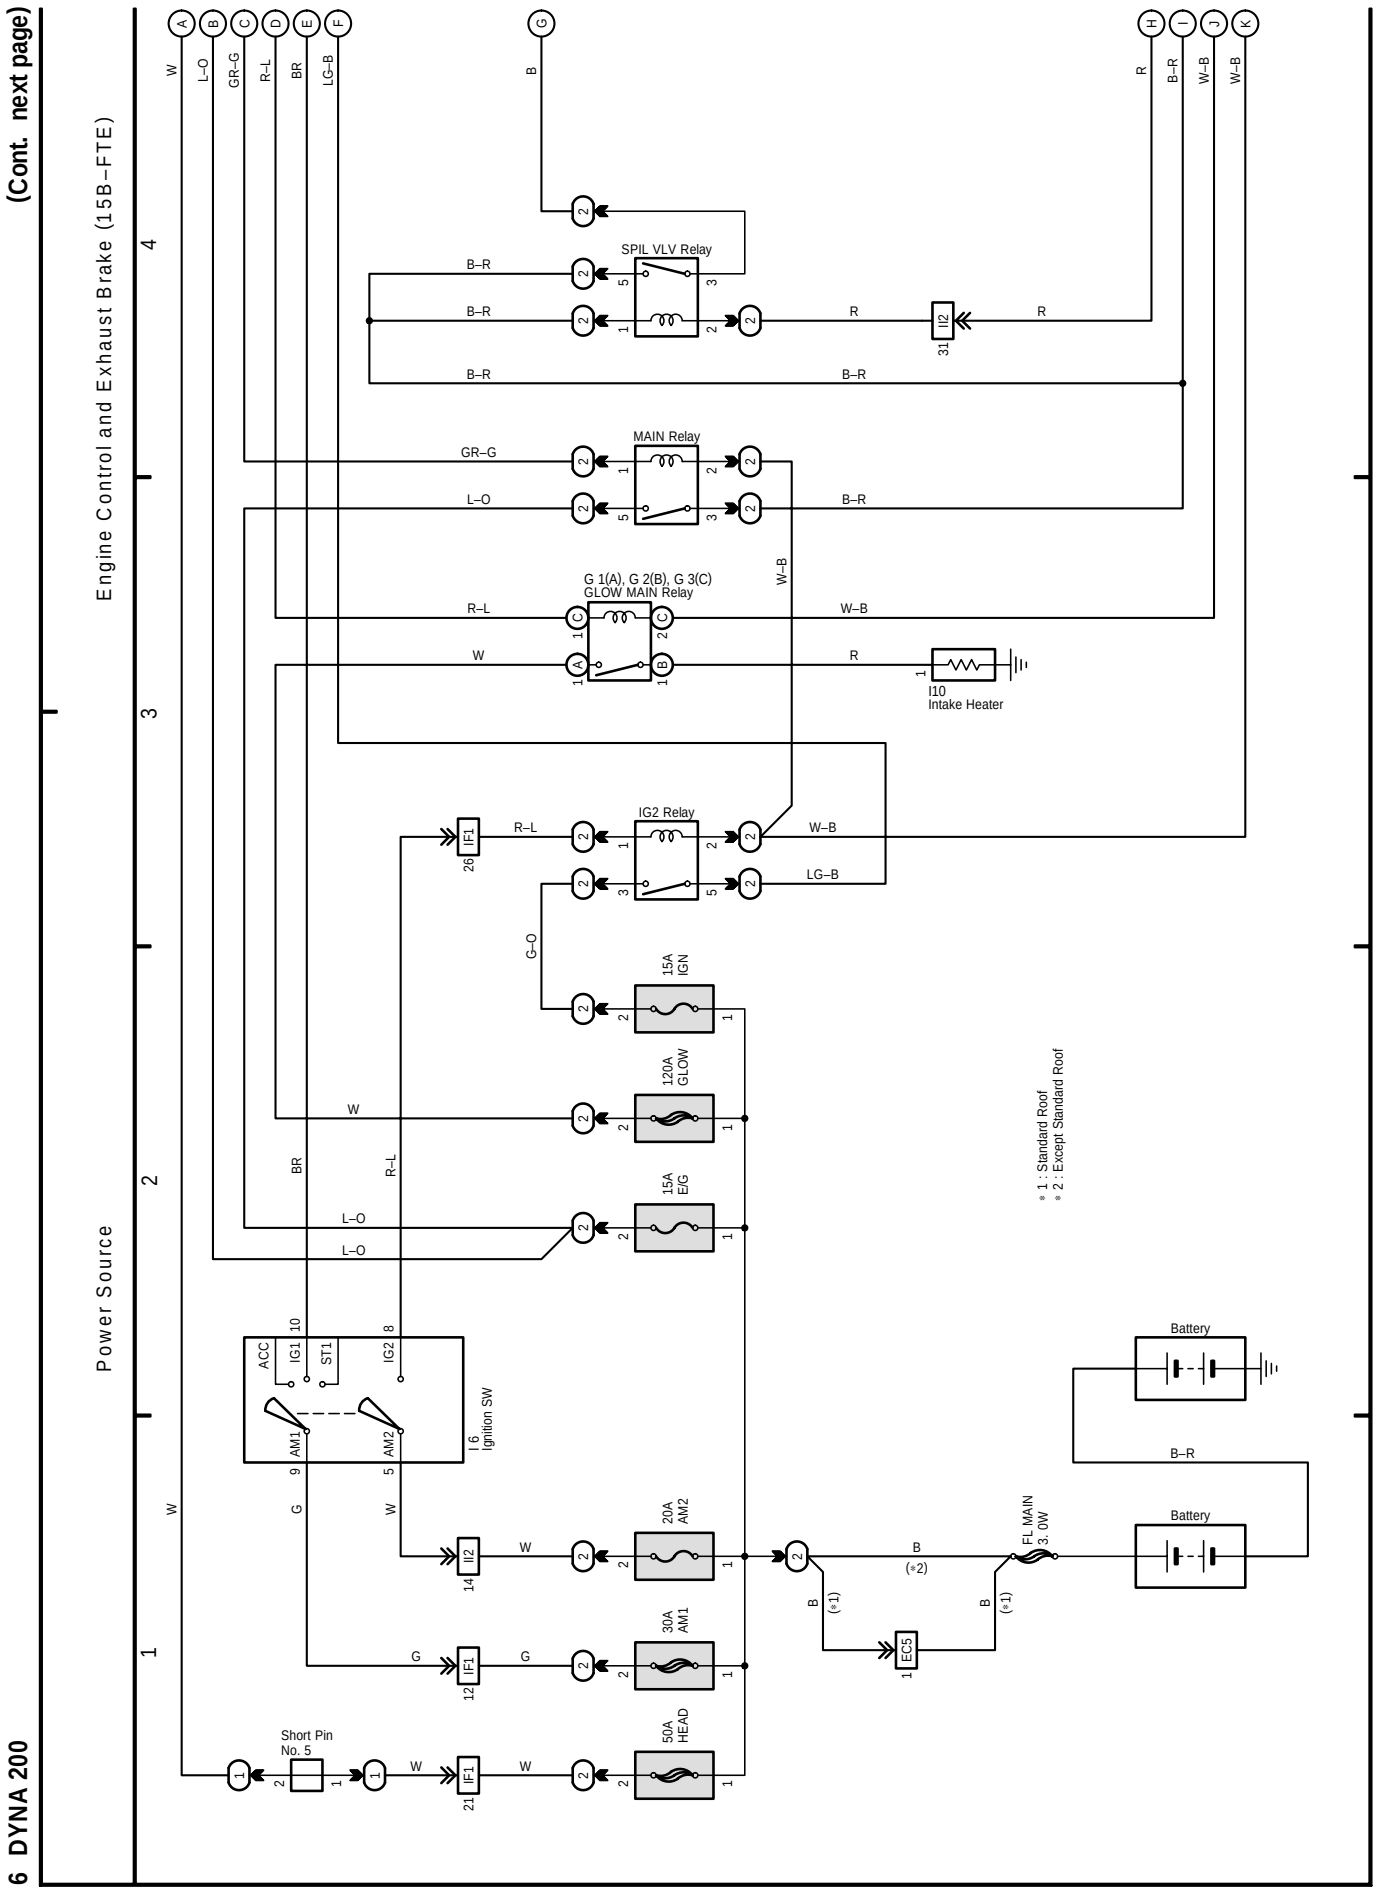
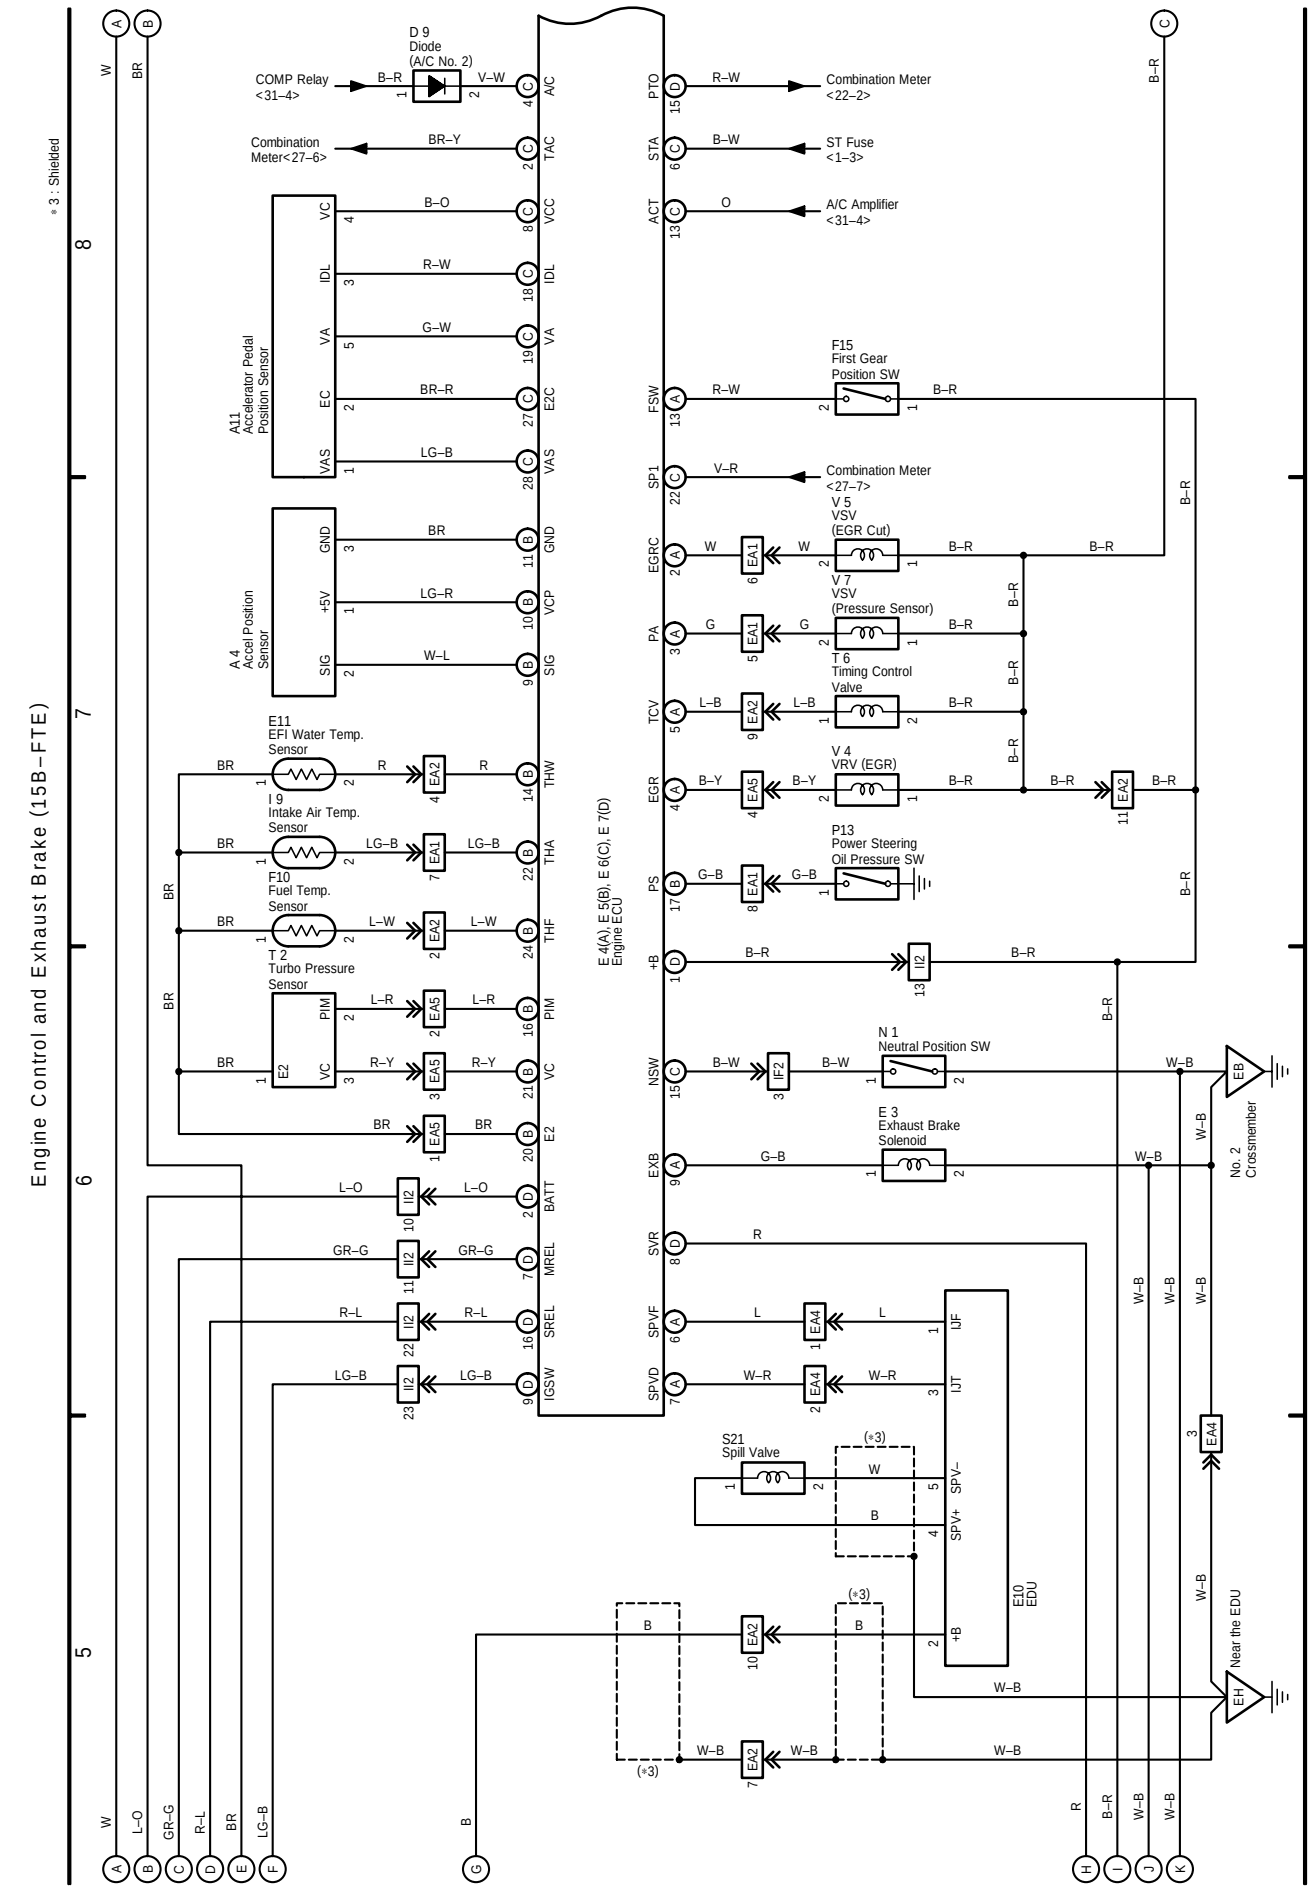
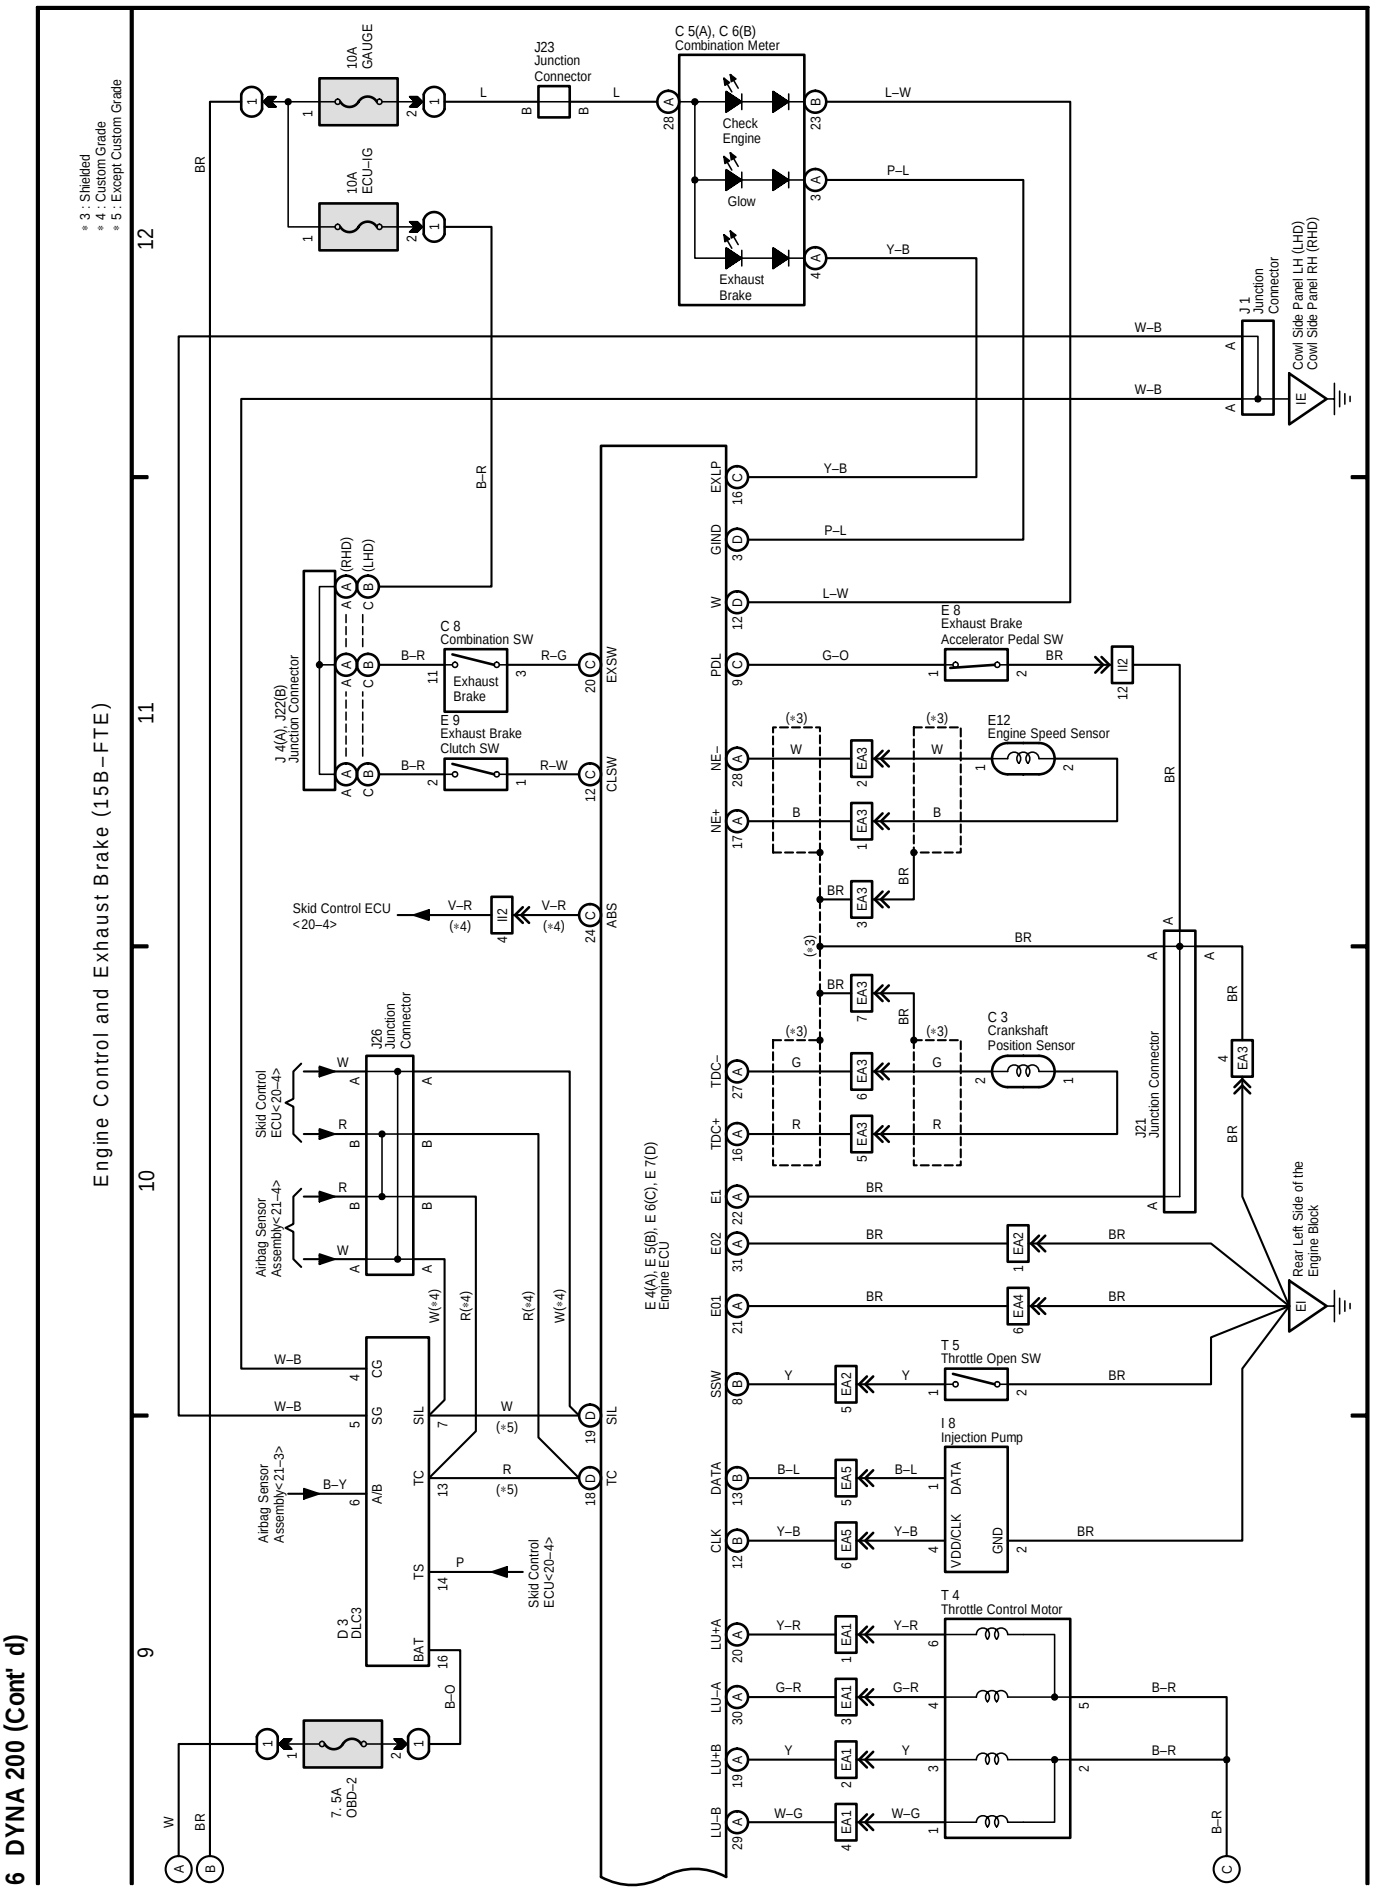

(Cont. next page)
Engine Control and Exhaust Brake (15B–FTE)
Power Source
SPIL VLV Relay
MAIN Relay
G 1(A), G 2(B), G 3(C)
GLOW MAIN Relay
IG2 Relay
I10
Intake Heater
15A
IGN
120A
GLOW
15A
E/G
20A
AM2
30A
AM1
50A
HEAD
FL MAIN
3. 0W
ACC
IG1
ST1
IG2
AM1
AM2
I 6
Ignition SW
Battery
Battery
Short Pin
No. 5
EC5
* 1 : Standard Roof
* 2 : Except Standard Roof
6 DYNA 200

6 DYNA 200 (Cont' d)

(Cont. next page)




6 DYNA 200 (Cont' d)
Engine Control and Exhaust Brake (15B–FTE)
* 3 : Shielded
* 4 : Custom Grade
* 5 : Except Custom Grade
10A GAUGE
10A ECU–IG
J23 Junction Connector
C 5(A), C 6(B) Combination Meter
Check Engine
Glow
Exhaust Brake
J 1 Junction Connector
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
J 4(A), J22(B) Junction Connector
C 8 Combination SW
Exhaust Brake
E 9 Exhaust Brake Clutch SW
E 8 Exhaust Brake Accelerator Pedal SW
E12 Engine Speed Sensor
C 3 Crankshaft Position Sensor
J21 Junction Connector
Rear Left Side of the Engine Block
Skid Control ECU <20–4>
J26 Junction Connector
Airbag Sensor Assembly<21–4>
Airbag Sensor Assembly<21–3>
D 3 DLC3
7.5A OBD–2
E 4(A), E 5(B), E 6(C), E 7(D) Engine ECU
T 5 Throttle Open SW
I 8 Injection Pump
T 4 Throttle Control Motor