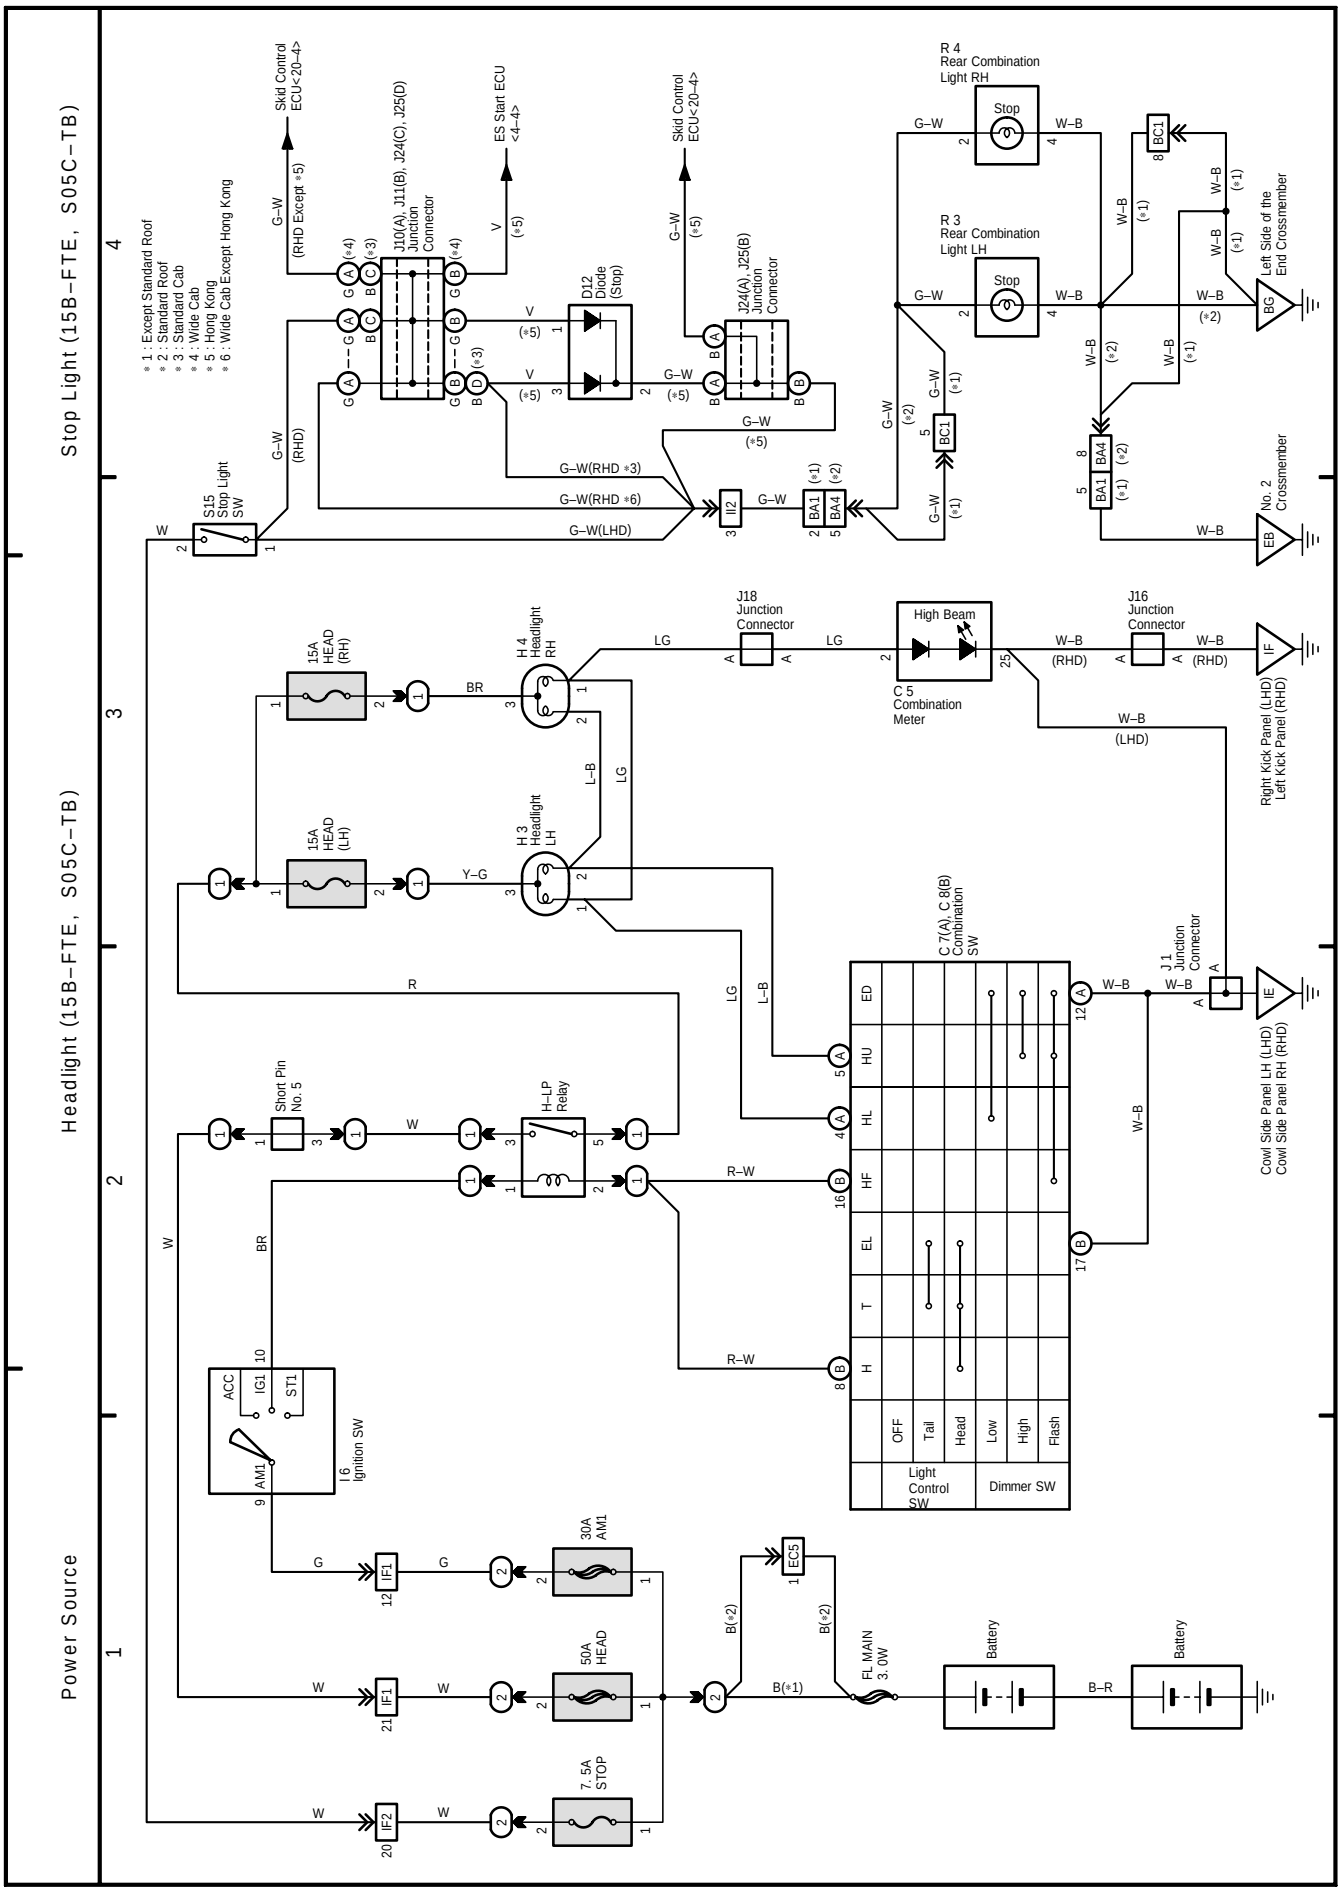

Stop Light (15B–FTE, S05C–TB)
Headlight (15B–FTE, S05C–TB)
Power Source
1
2
3
4
* 1 : Except Standard Roof
* 2 : Standard Roof
* 3 : Standard Cab
* 4 : Wide Cab
* 5 : Hong Kong
* 6 : Wide Cab Except Hong Kong
S15 Stop Light SW
Skid Control ECU<20–4>
ES Start ECU <4–4>
J10(A), J11(B), J24(C), J25(D) Junction Connector
D12 Diode (Stop)
J24(A), J25(B) Junction Connector
R 4 Rear Combination Light RH
R 3 Rear Combination Light LH
Stop
Left Side of the End Crossmember
No. 2 Crossmember
H 4 Headlight RH
H 3 Headlight LH
15A HEAD (RH)
15A HEAD (LH)
J18 Junction Connector
J16 Junction Connector
High Beam
C 5 Combination Meter
Right Kick Panel (LHD) Left Kick Panel (RHD)
C 7(A), C 8(B) Combination SW
J 1 Junction Connector
Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)
Short Pin No. 5
H–LP Relay
I 6 Ignition SW
ACC
IG1
ST1
AM1
Light Control SW
Dimmer SW
OFF
Tail
Head
Low
High
Flash
30A AM1
50A HEAD
7.5A STOP
IF1
IF2
EC5
FL MAIN 3.0W
Battery
Battery