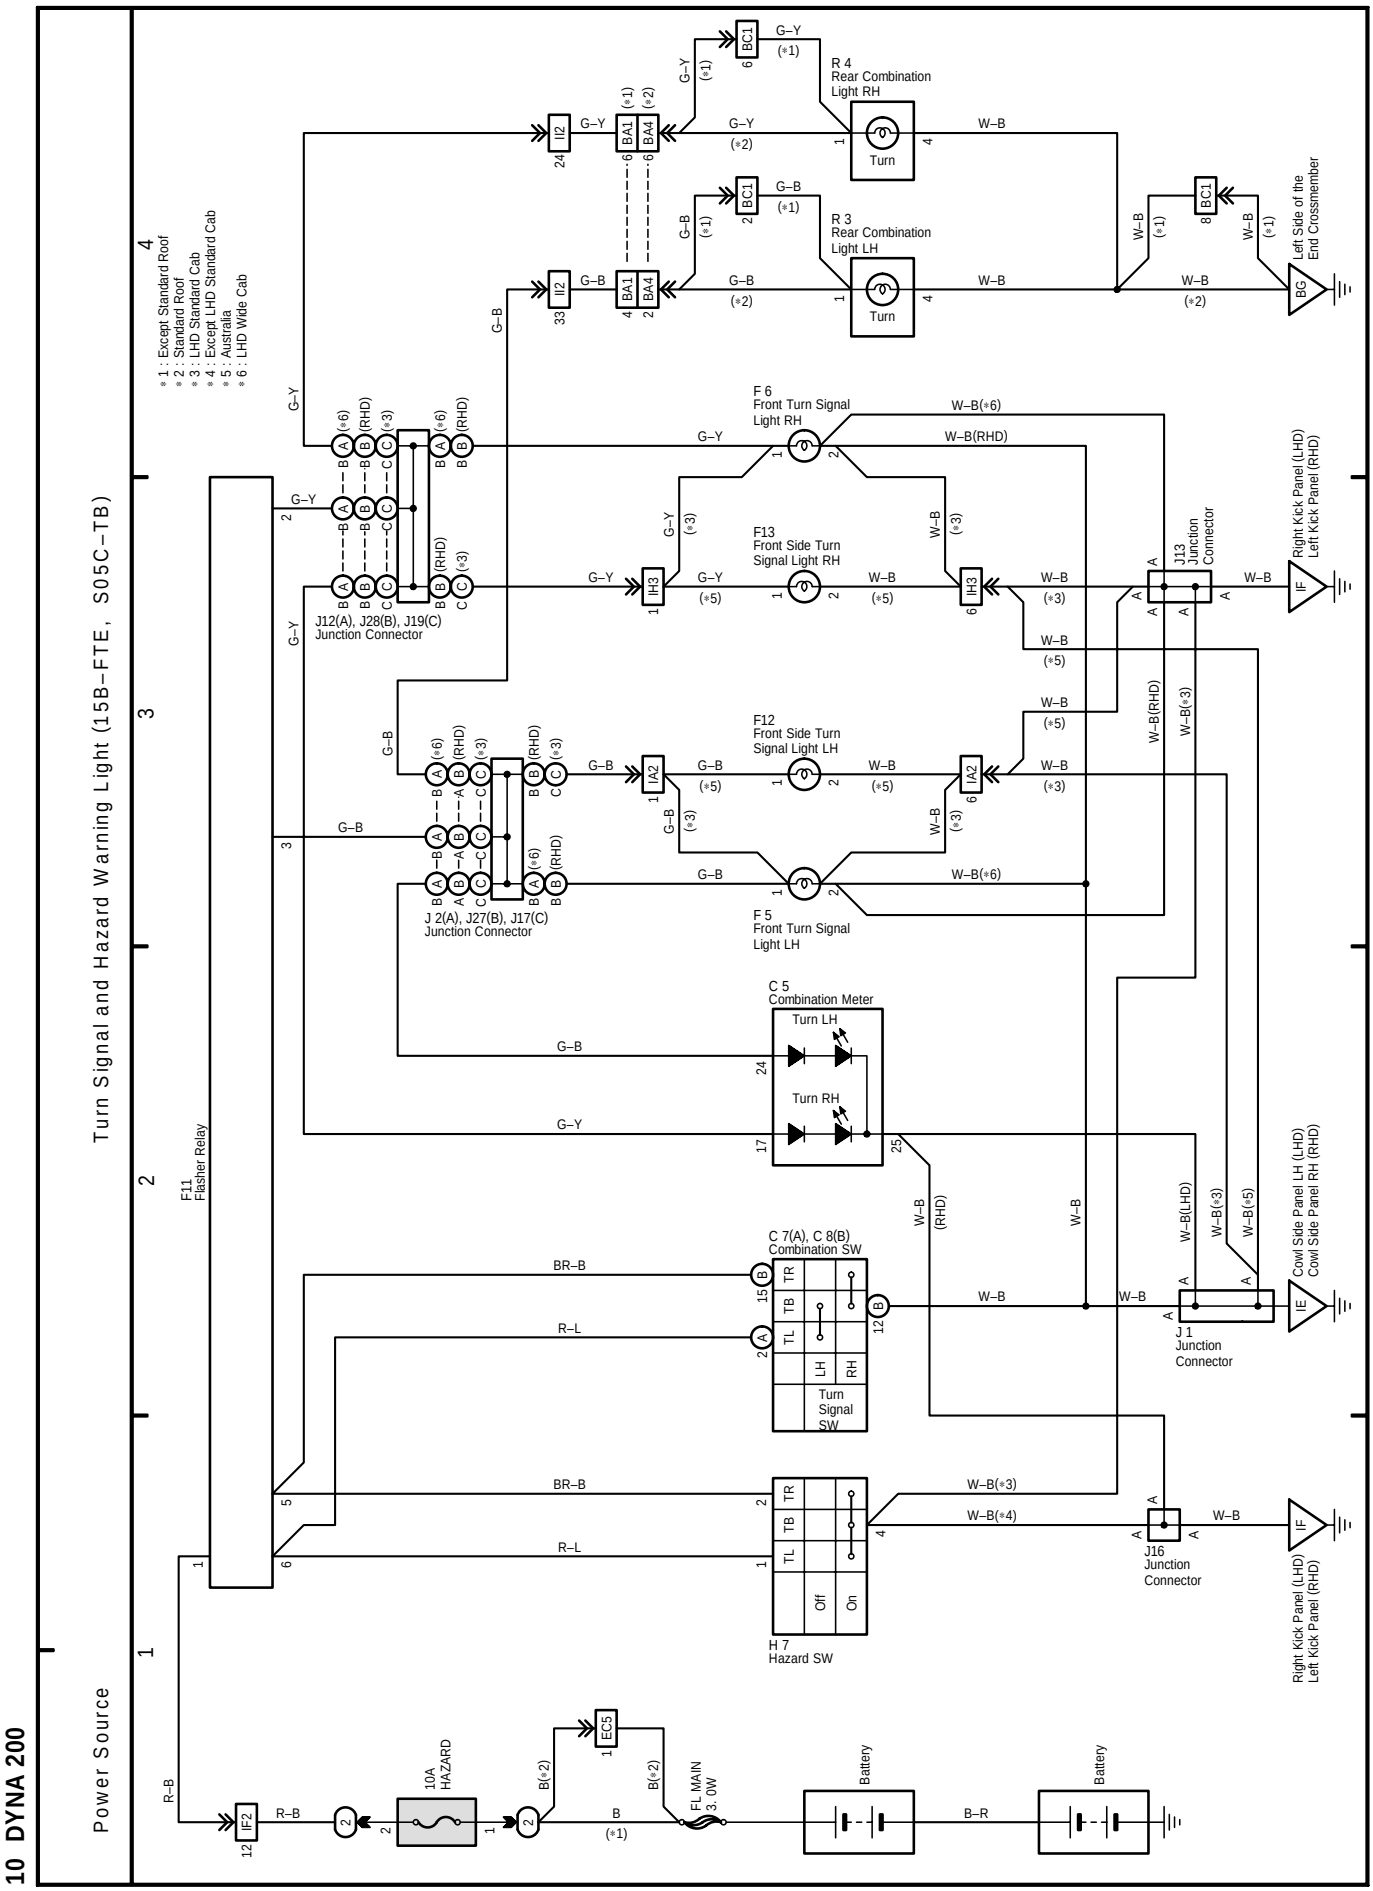

10 DYNA 200
Power Source
Turn Signal and Hazard Warning Light (15B–FTE, S05C–TB)
* 1 : Except Standard Roof
* 2 : Standard Roof
* 3 : LHD Standard Cab
* 4 : Except LHD Standard Cab
* 5 : Australia
* 6 : LHD Wide Cab
R 4 Rear Combination Light RH
R 3 Rear Combination Light LH
Turn
Left Side of the End Crossmember
F 6 Front Turn Signal Light RH
F13 Front Side Turn Signal Light RH
F12 Front Side Turn Signal Light LH
F 5 Front Turn Signal Light LH
J12(A), J28(B), J19(C) Junction Connector
J 2(A), J27(B), J17(C) Junction Connector
J13 Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
C 5 Combination Meter
Turn LH
Turn RH
F11 Flasher Relay
C 7(A), C 8(B) Combination SW
Turn Signal SW
J 1 Junction Connector
Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)
H 7 Hazard SW
J16 Junction Connector
10A HAZARD
FL MAIN 3. 0W
Battery
G–Y
G–B
W–B
R–B
BR–B
R–L
B–R