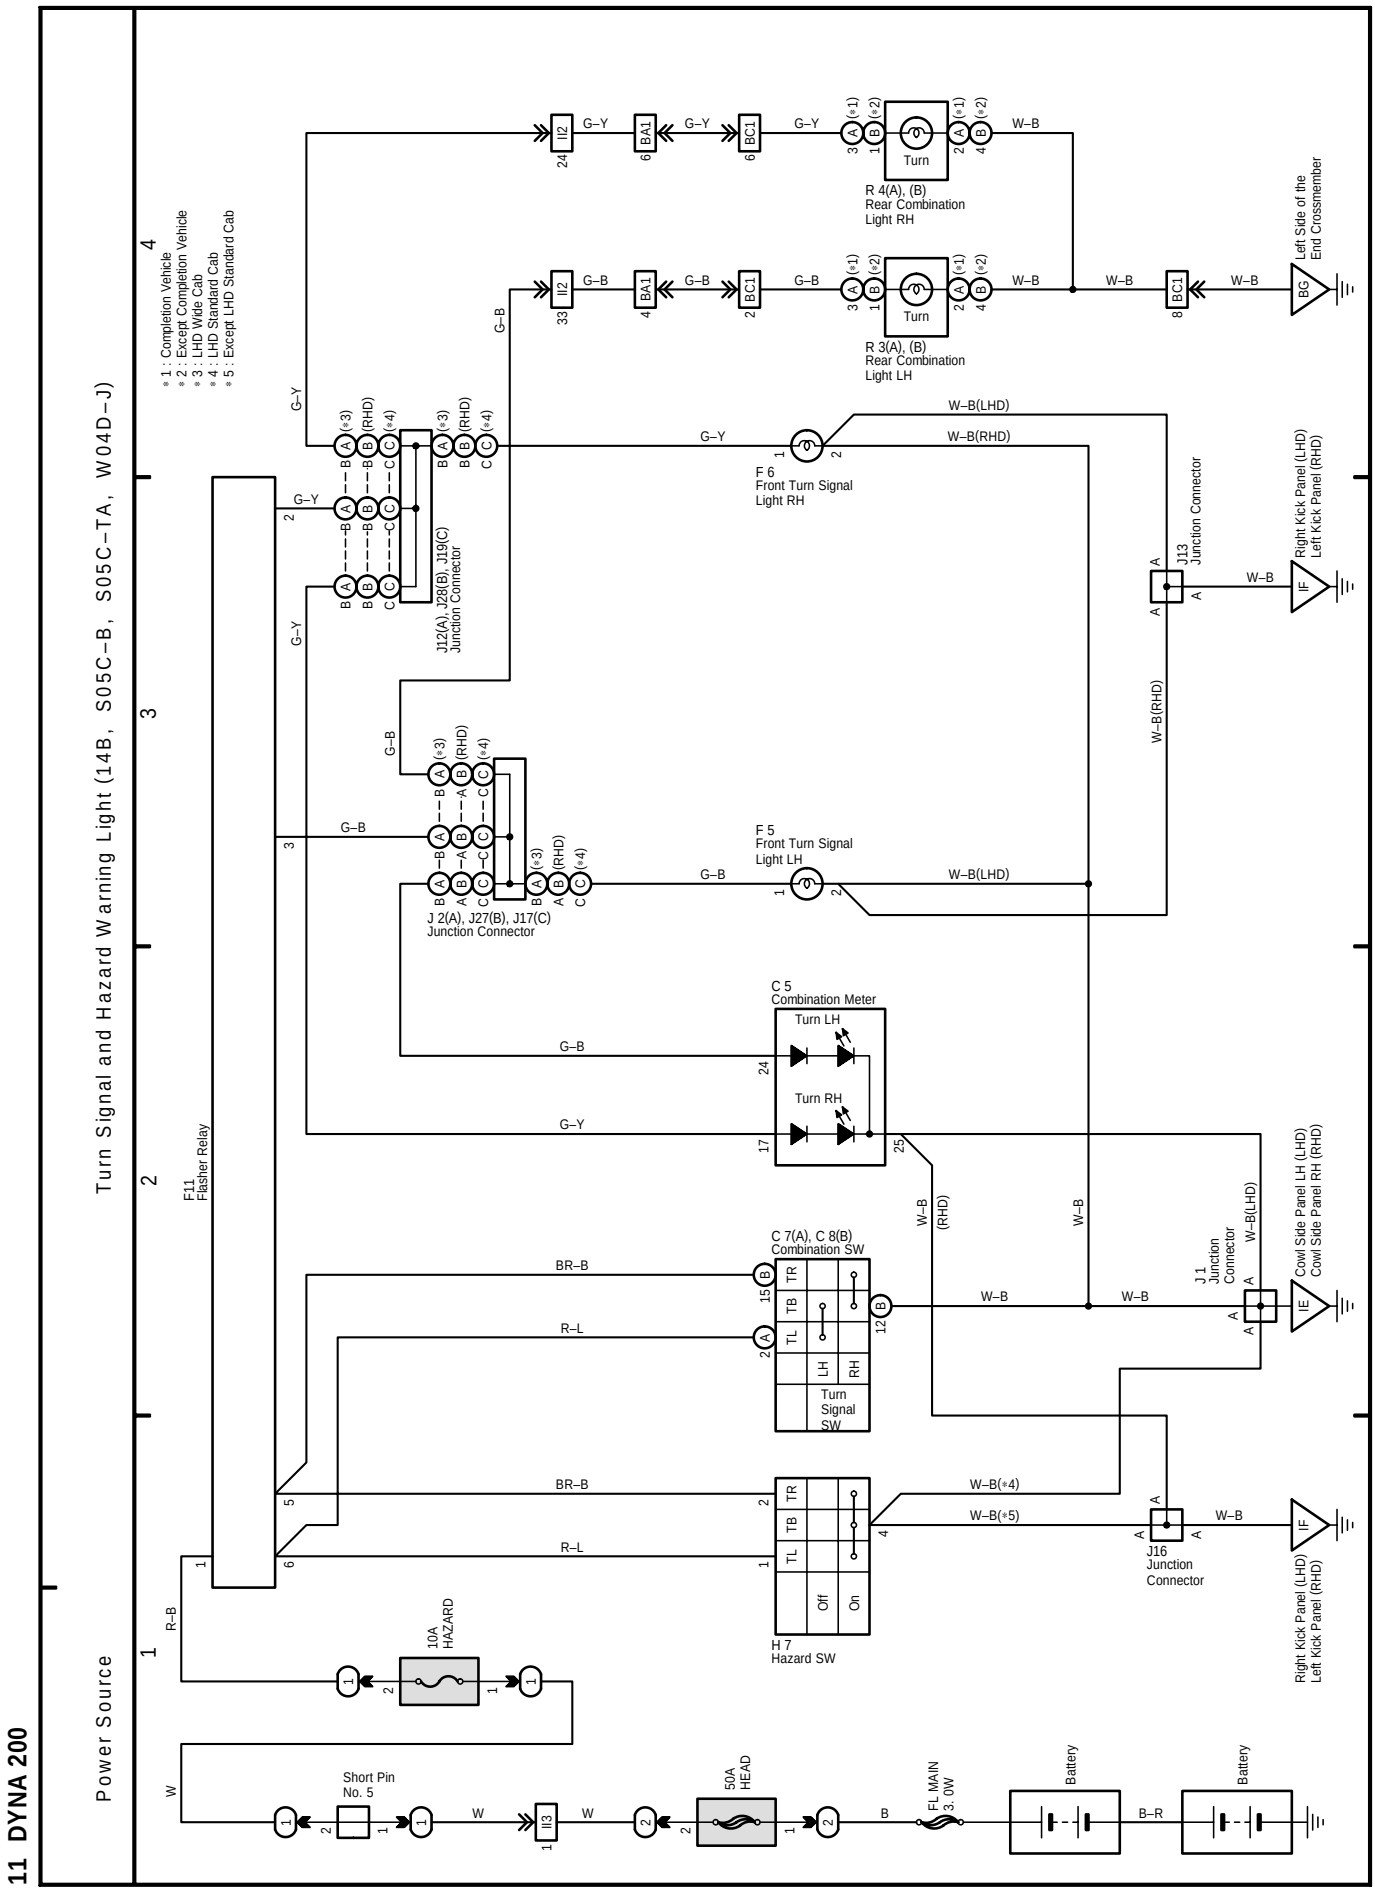

11 DYNA 200
Power Source
Turn Signal and Hazard Warning Light (14B, S05C–B, S05C–TA, W04D–J)
∗1 : Completion Vehicle
∗2 : Except Completion Vehicle
∗3 : LHD Wide Cab
∗4 : LHD Standard Cab
∗5 : Except LHD Standard Cab
R 4(A), (B) Rear Combination Light RH
R 3(A), (B) Rear Combination Light LH
Left Side of the End Crossmember
F 6 Front Turn Signal Light RH
F 5 Front Turn Signal Light LH
J12(A), J28(B), J19(C) Junction Connector
J 2(A), J27(B), J17(C) Junction Connector
J13 Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
C 5 Combination Meter
Turn LH
Turn RH
F11 Flasher Relay
C 7(A), C 8(B) Combination SW
Turn Signal SW
J1 Junction Connector
Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)
H 7 Hazard SW
J16 Junction Connector
10A HAZARD
Short Pin No. 5
50A HEAD
FL MAIN 3. 0W
Battery
Battery