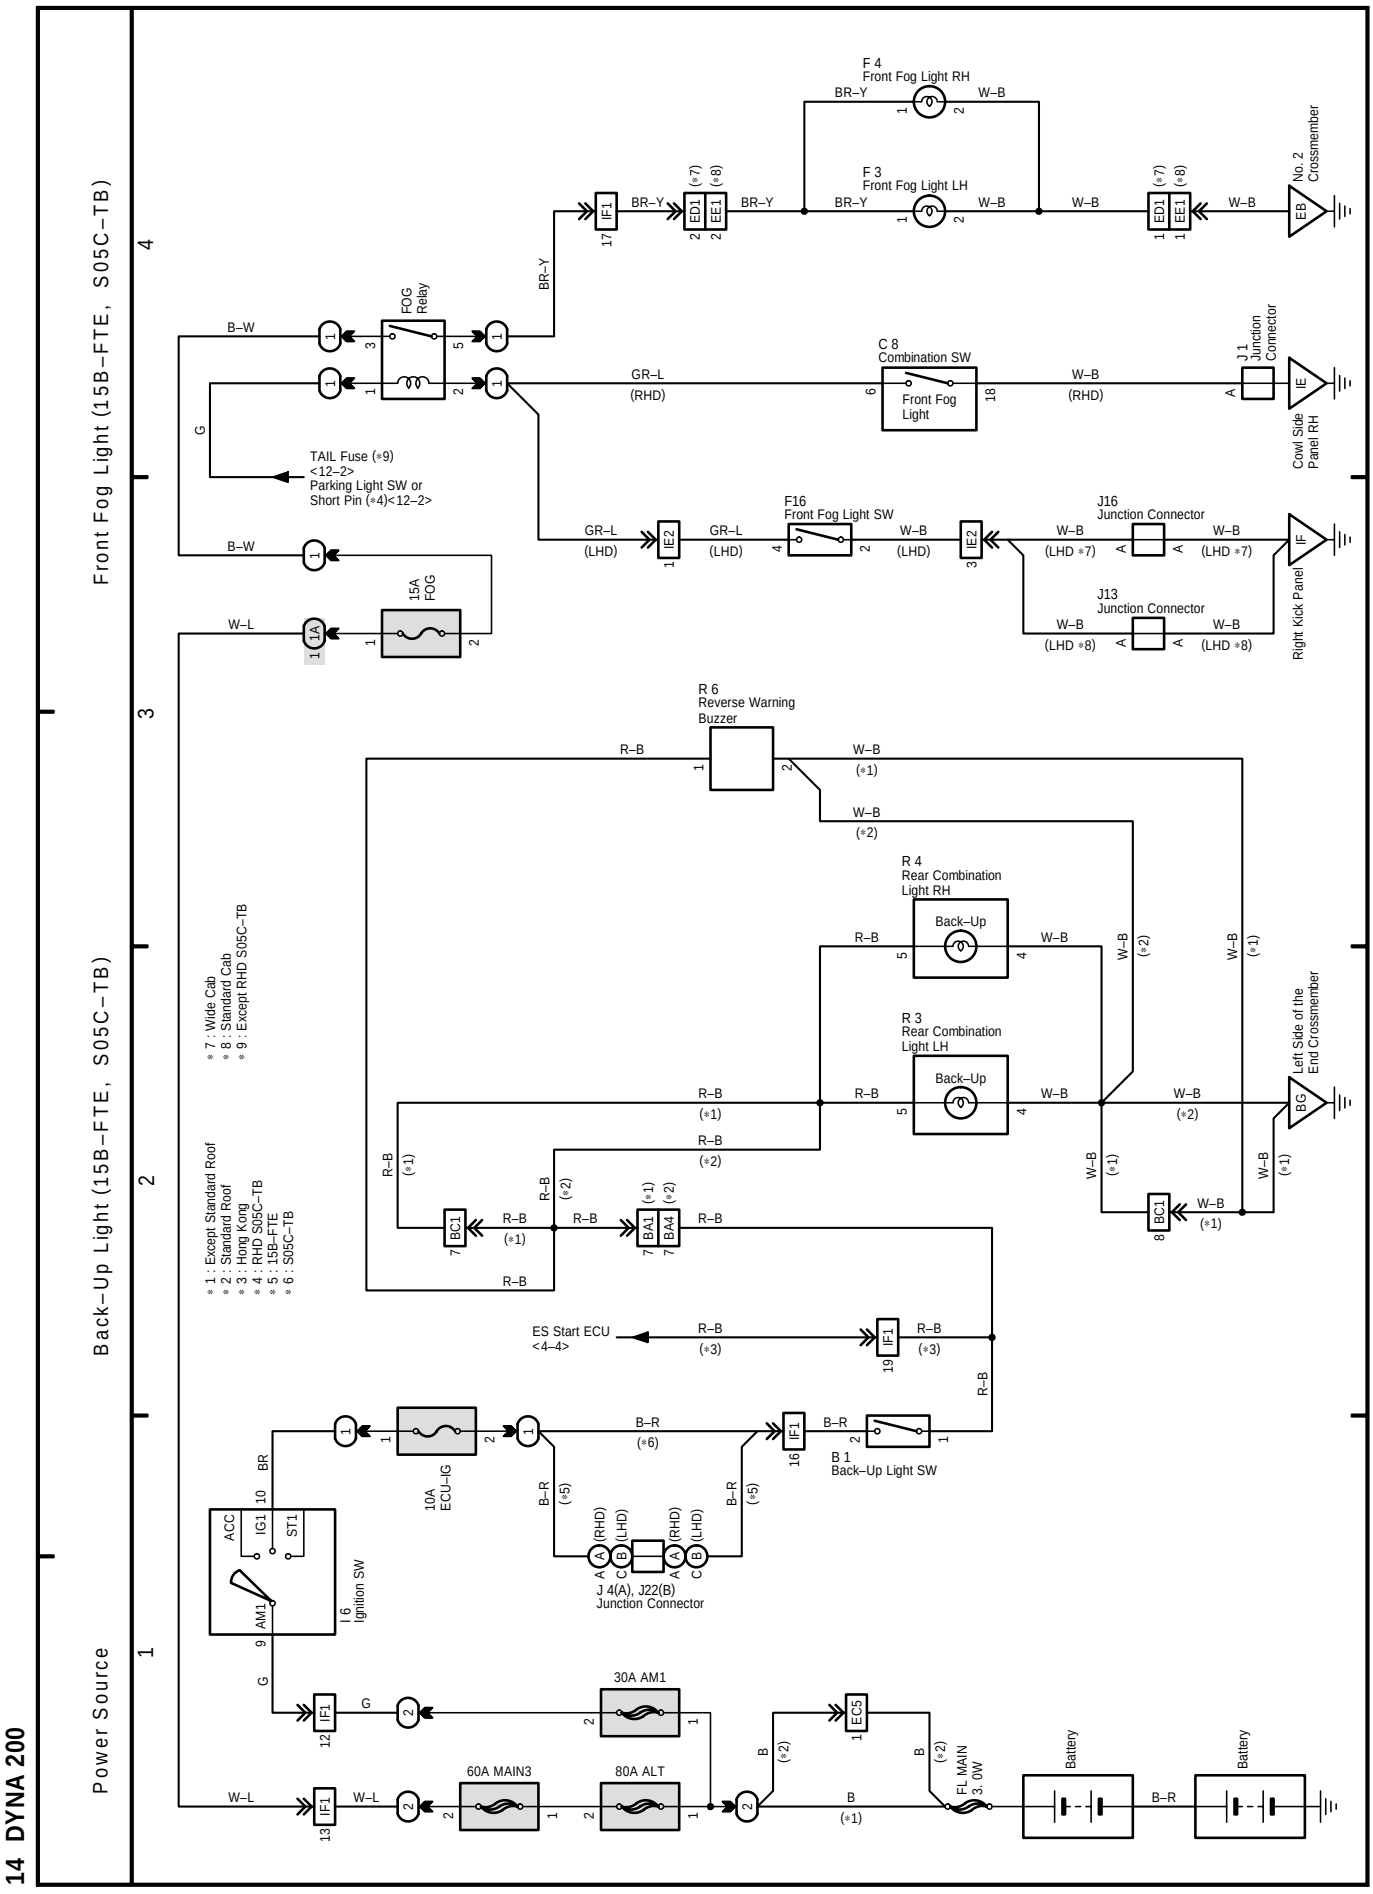

Front Fog Light (15B–FTE, S05C–TB)
Back–Up Light (15B–FTE, S05C–TB)
Power Source
F 4
Front Fog Light RH
F 3
Front Fog Light LH
No. 2
Crossmember
FOG
Relay
C 8
Combination SW
Front Fog
Light
J 1
Junction
Connector
Cowl Side
Panel RH
TAIL Fuse (*9)
<12–2>
Parking Light SW or
Short Pin (*4)<12–2>
F16
Front Fog Light SW
J16
Junction Connector
J13
Junction Connector
Right Kick Panel
15A
FOG
R 6
Reverse Warning
Buzzer
R 4
Rear Combination
Light RH
R 3
Rear Combination
Light LH
Back–Up
Left Side of the
End Crossmember
* 1 : Except Standard Roof
* 2 : Standard Roof
* 3 : Hong Kong
* 4 : RHD S05C–TB
* 5 : 15B–FTE
* 6 : S05C–TB
* 7 : Wide Cab
* 8 : Standard Cab
* 9 : Except RHD S05C–TB
ES Start ECU
<4–4>
10A
ECU–IG
B 1
Back–Up Light SW
I 6
Ignition SW
ACC
IG1
ST1
AM1
J 4(A), J22(B)
Junction Connector
30A AM1
60A MAIN3
80A ALT
FL MAIN
3. 0W
Battery
Battery