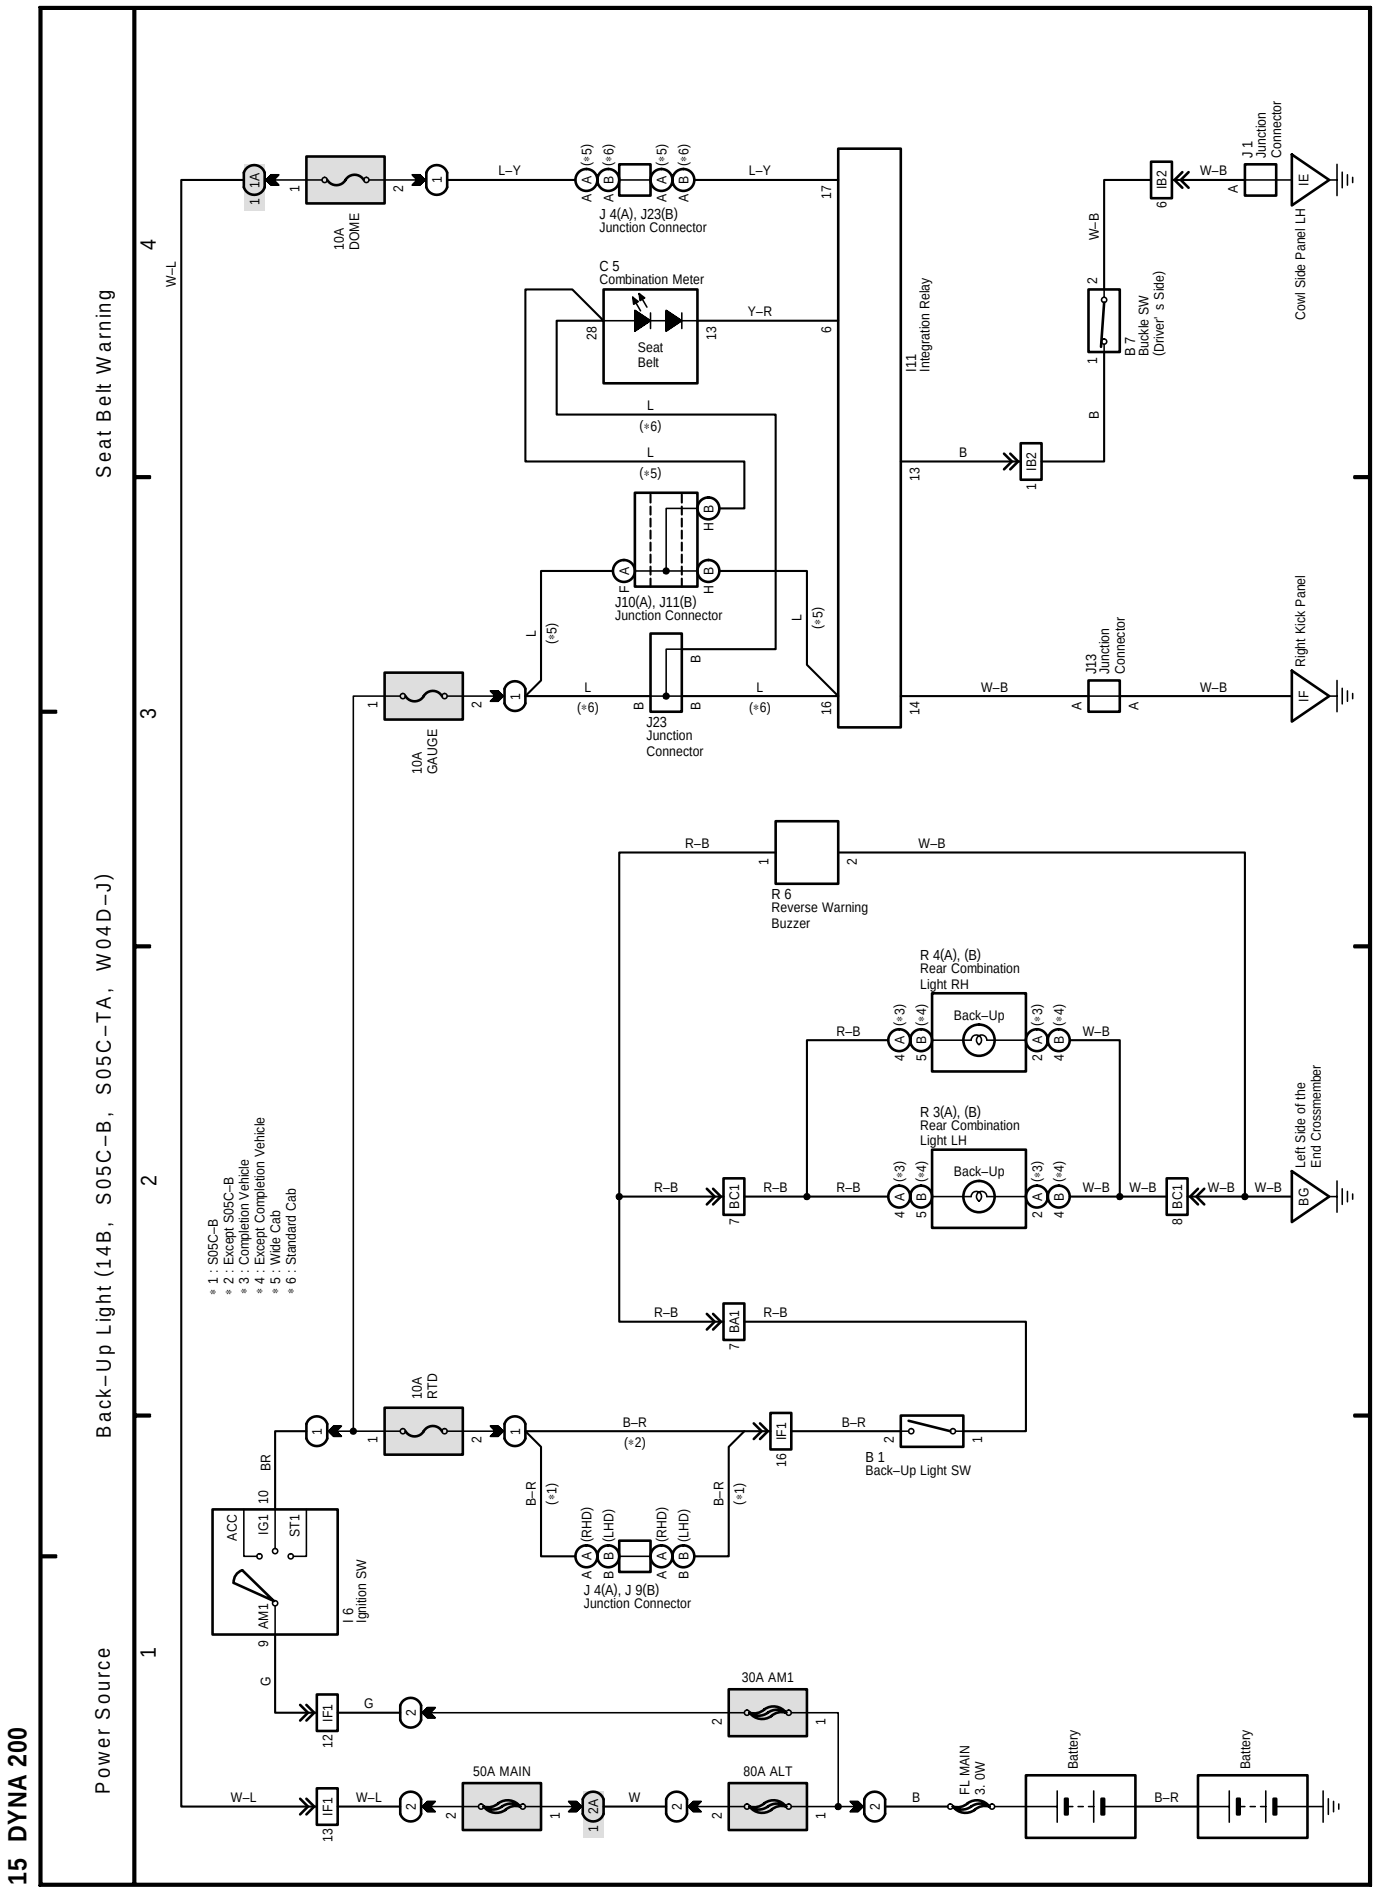

15 DYNA 200
Power Source
Back–Up Light (14B, S05C–B, S05C–TA, W04D–J)
Seat Belt Warning
1
2
3
4
W–L
1A
10A DOME
L–Y
J 4(A), J23(B) Junction Connector
C 5 Combination Meter
Seat Belt
Y–R
I11 Integration Relay
IB2
B 7 Buckle SW (Driver' s Side)
W–B
J 1 Junction Connector
IE
Cowl Side Panel LH
L
(*5)
(*6)
J10(A), J11(B) Junction Connector
J23 Junction Connector
10A GAUGE
J13 Junction Connector
IF
Right Kick Panel
R–B
R 6 Reverse Warning Buzzer
R 4(A), (B) Rear Combination Light RH
R 3(A), (B) Rear Combination Light LH
Back–Up
(*3)
(*4)
BC1
BG
Left Side of the End Crossmember
BA1
10A RTD
B–R
(*2)
(*1)
IF1
B 1 Back–Up Light SW
I 6 Ignition SW
ACC
IG1
ST1
AM1
BR
G
30A AM1
50A MAIN
80A ALT
2A
W
B
FL MAIN 3. 0W
Battery
(RHD)
(LHD)
J 4(A), J 9(B) Junction Connector
＊1 : S05C–B
＊2 : Except S05C–B
＊3 : Completion Vehicle
＊4 : Except Completion Vehicle
＊5 : Wide Cab
＊6 : Standard Cab