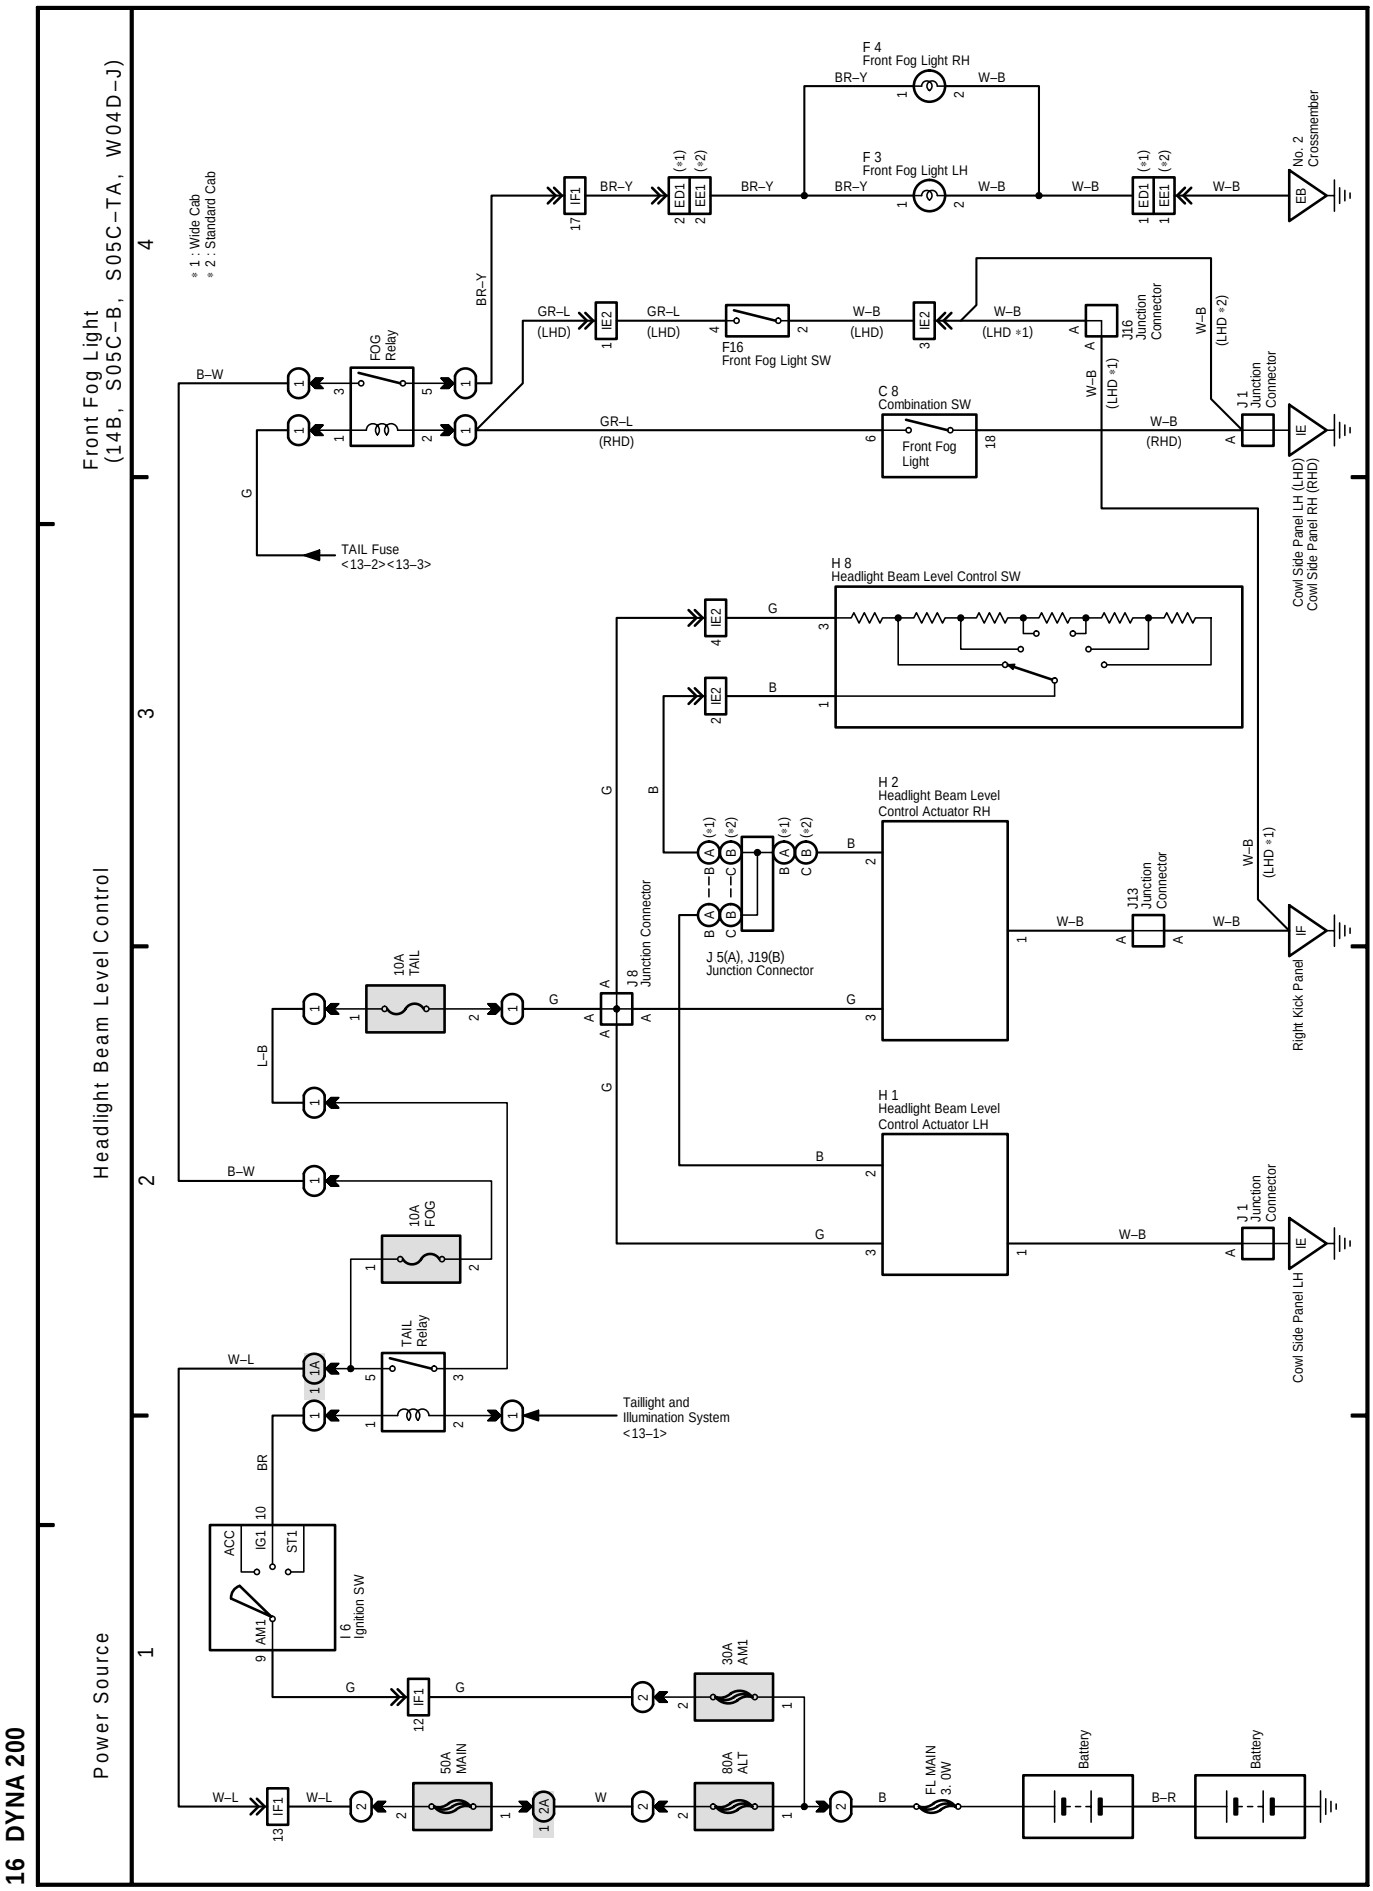

Front Fog Light (14B, S05C–B, S05C–TA, W04D–J)
Headlight Beam Level Control
Power Source
* 1 : Wide Cab
* 2 : Standard Cab
F 4 Front Fog Light RH
F 3 Front Fog Light LH
No. 2 Crossmember
FOG Relay
F16 Front Fog Light SW
C 8 Combination SW
Front Fog Light
J16 Junction Connector
J 1 Junction Connector
Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)
TAIL Fuse <13–2><13–3>
H 8 Headlight Beam Level Control SW
H 2 Headlight Beam Level Control Actuator RH
H 1 Headlight Beam Level Control Actuator LH
J13 Junction Connector
J 5(A), J19(B) Junction Connector
J 8 Junction Connector
Right Kick Panel
Cowl Side Panel LH
10A TAIL
10A FOG
TAIL Relay
Taillight and Illumination System <13–1>
I 6 Ignition SW
ACC
IG1
ST1
AM1
30A AM1
50A MAIN
80A ALT
2A
FL MAIN 3. 0W
Battery
Battery