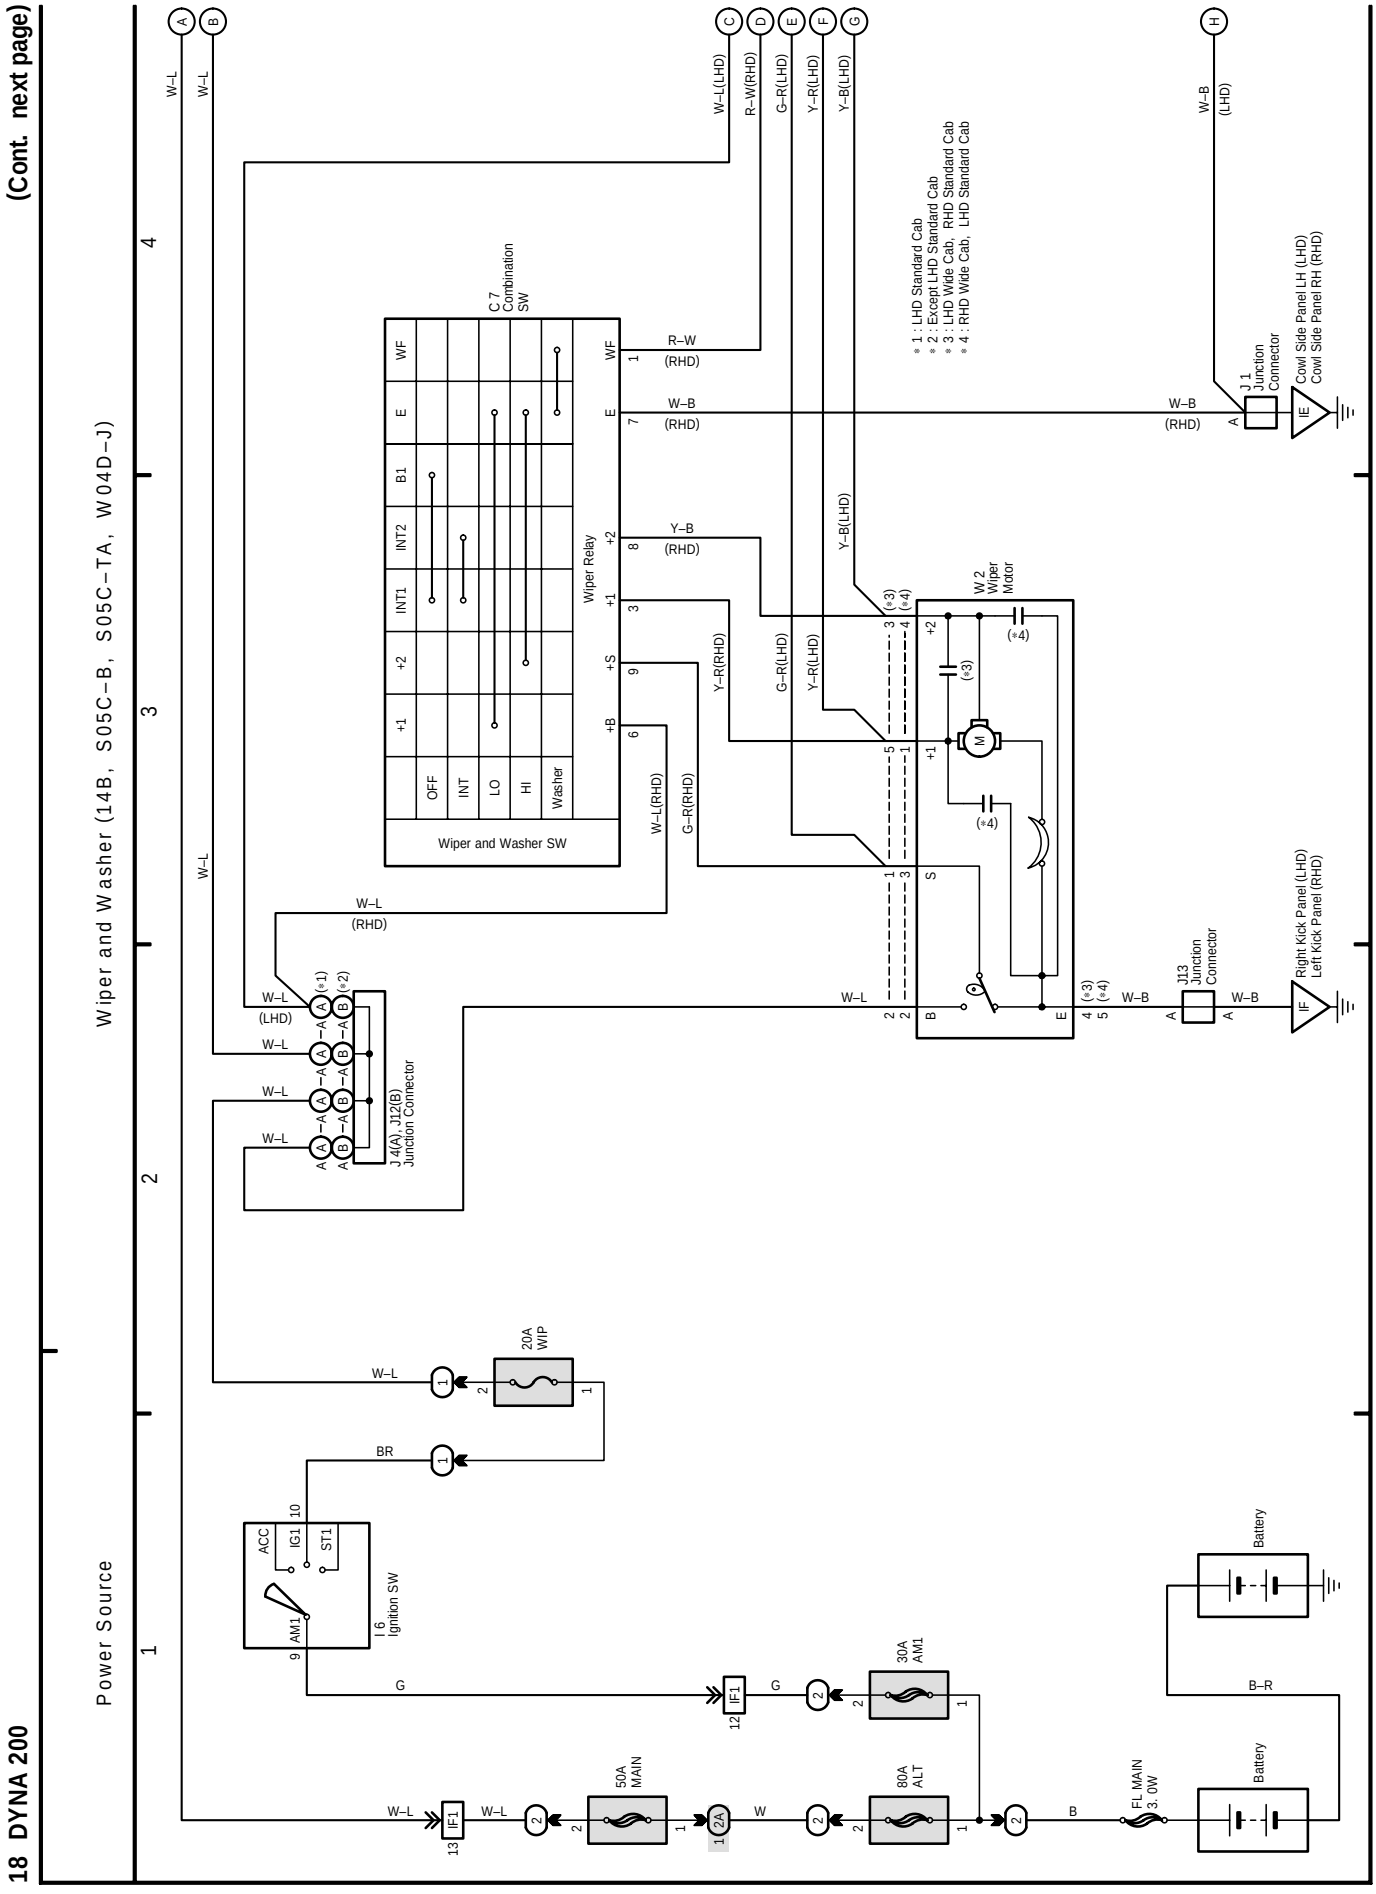
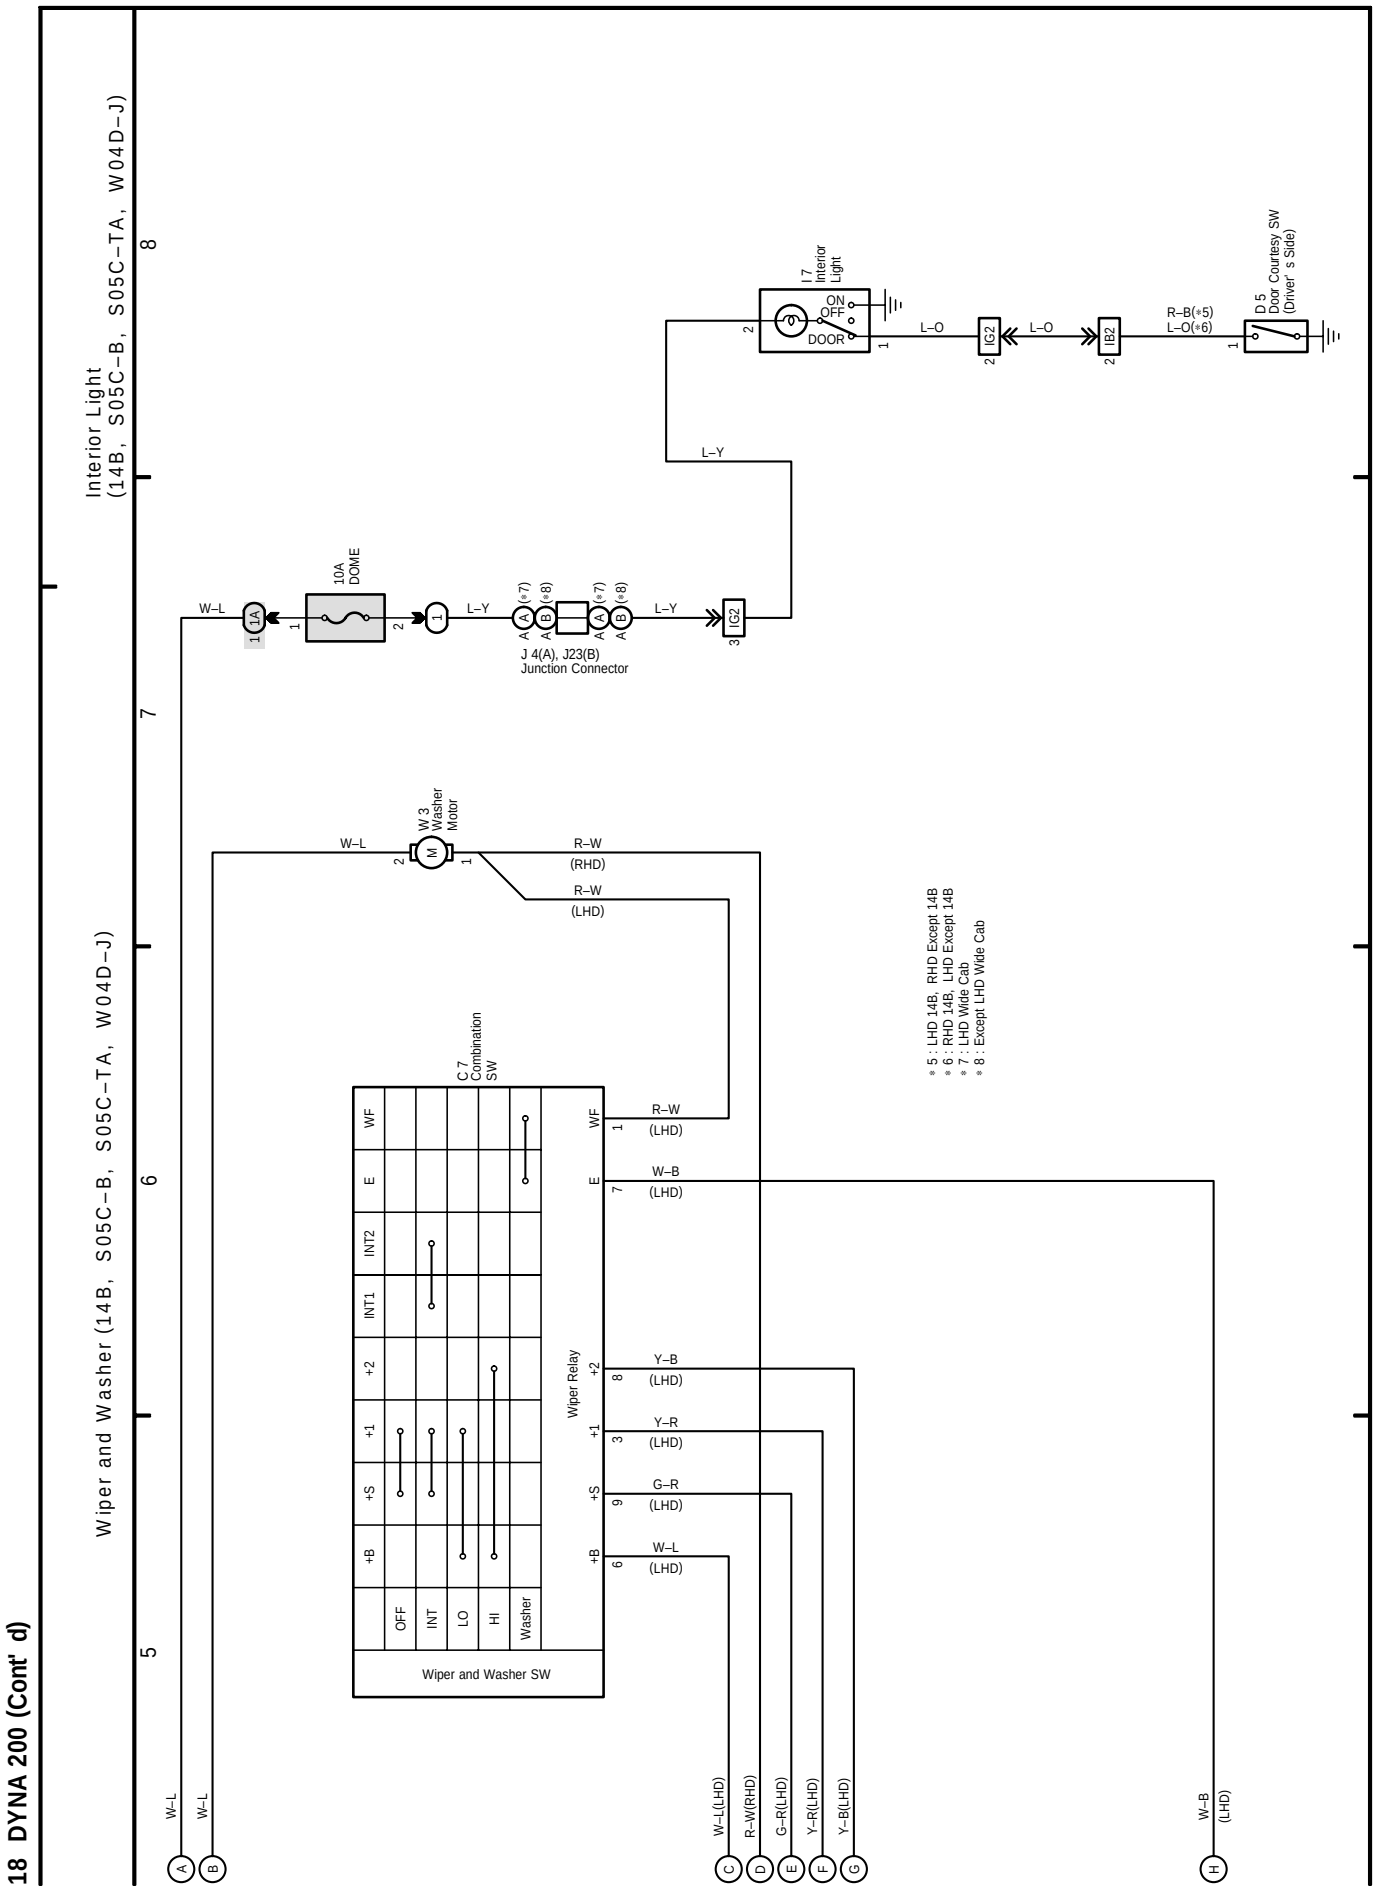

(Cont. next page)
18 DYNA 200
Power Source
Wiper and Washer (14B, S05C–B, S05C–TA, W04D–J)
1
2
3
4
C.7 Combination SW
Wiper and Washer SW
OFF
INT
LO
HI
Washer
INT1
INT2
B1
WF
E
+1
+2
+S
+B
Wiper Relay
W 2 Wiper Motor
J.4(A), J12(B) Junction Connector
J 1 Junction Connector
J13 Junction Connector
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
Right Kick Panel (LHD)
Left Kick Panel (RHD)
I 6 Ignition SW
ACC
IG1
ST1
AM1
20A WIP
30A AM1
50A MAIN
80A ALT
2A
FL MAIN 3. 0W
Battery
IF1
W–L
W–L(LHD)
R–W(RHD)
G–R(LHD)
Y–R(LHD)
Y–B(LHD)
W–B (LHD)
W–B (RHD)
R–W (RHD)
W–B (RHD)
Y–B (RHD)
Y–R(RHD)
G–R(RHD)
W–L(RHD)
W–L (RHD)
W–L (LHD)
BR
G
W
B
B–R
* 1 : LHD Standard Cab
* 2 : Except LHD Standard Cab
* 3 : LHD Wide Cab, RHD Standard Cab
* 4 : RHD Wide Cab, LHD Standard Cab


18 DYNA 200 (Cont' d)
Interior Light (14B, S05C–B, S05C–TA, W04D–J)
Wiper and Washer (14B, S05C–B, S05C–TA, W04D–J)
5
6
7
8
I 7 Interior Light
ON
OFF
DOOR
D 5 Door Courtesy SW (Driver' s Side)
R–B(*5)
L–O(*6)
L–O
L–O
L–Y
L–Y
L–Y
W–L
10A DOME
J 4(A), J23(B) Junction Connector
W 3 Washer Motor
R–W (RHD)
R–W (LHD)
C 7 Combination SW
Wiper and Washer SW
OFF
INT
LO
HI
Washer
INT1
INT2
Wiper Relay
R–W (LHD)
W–B (LHD)
Y–B (LHD)
Y–R (LHD)
G–R (LHD)
W–L (LHD)
* 5 : LHD 14B, RHD Except 14B
* 6 : RHD 14B, LHD Except 14B
* 7 : LHD Wide Cab
* 8 : Except LHD Wide Cab
W–L(LHD)
R–W(RHD)
G–R(LHD)
Y–R(LHD)
Y–B(LHD)
W–B (LHD)