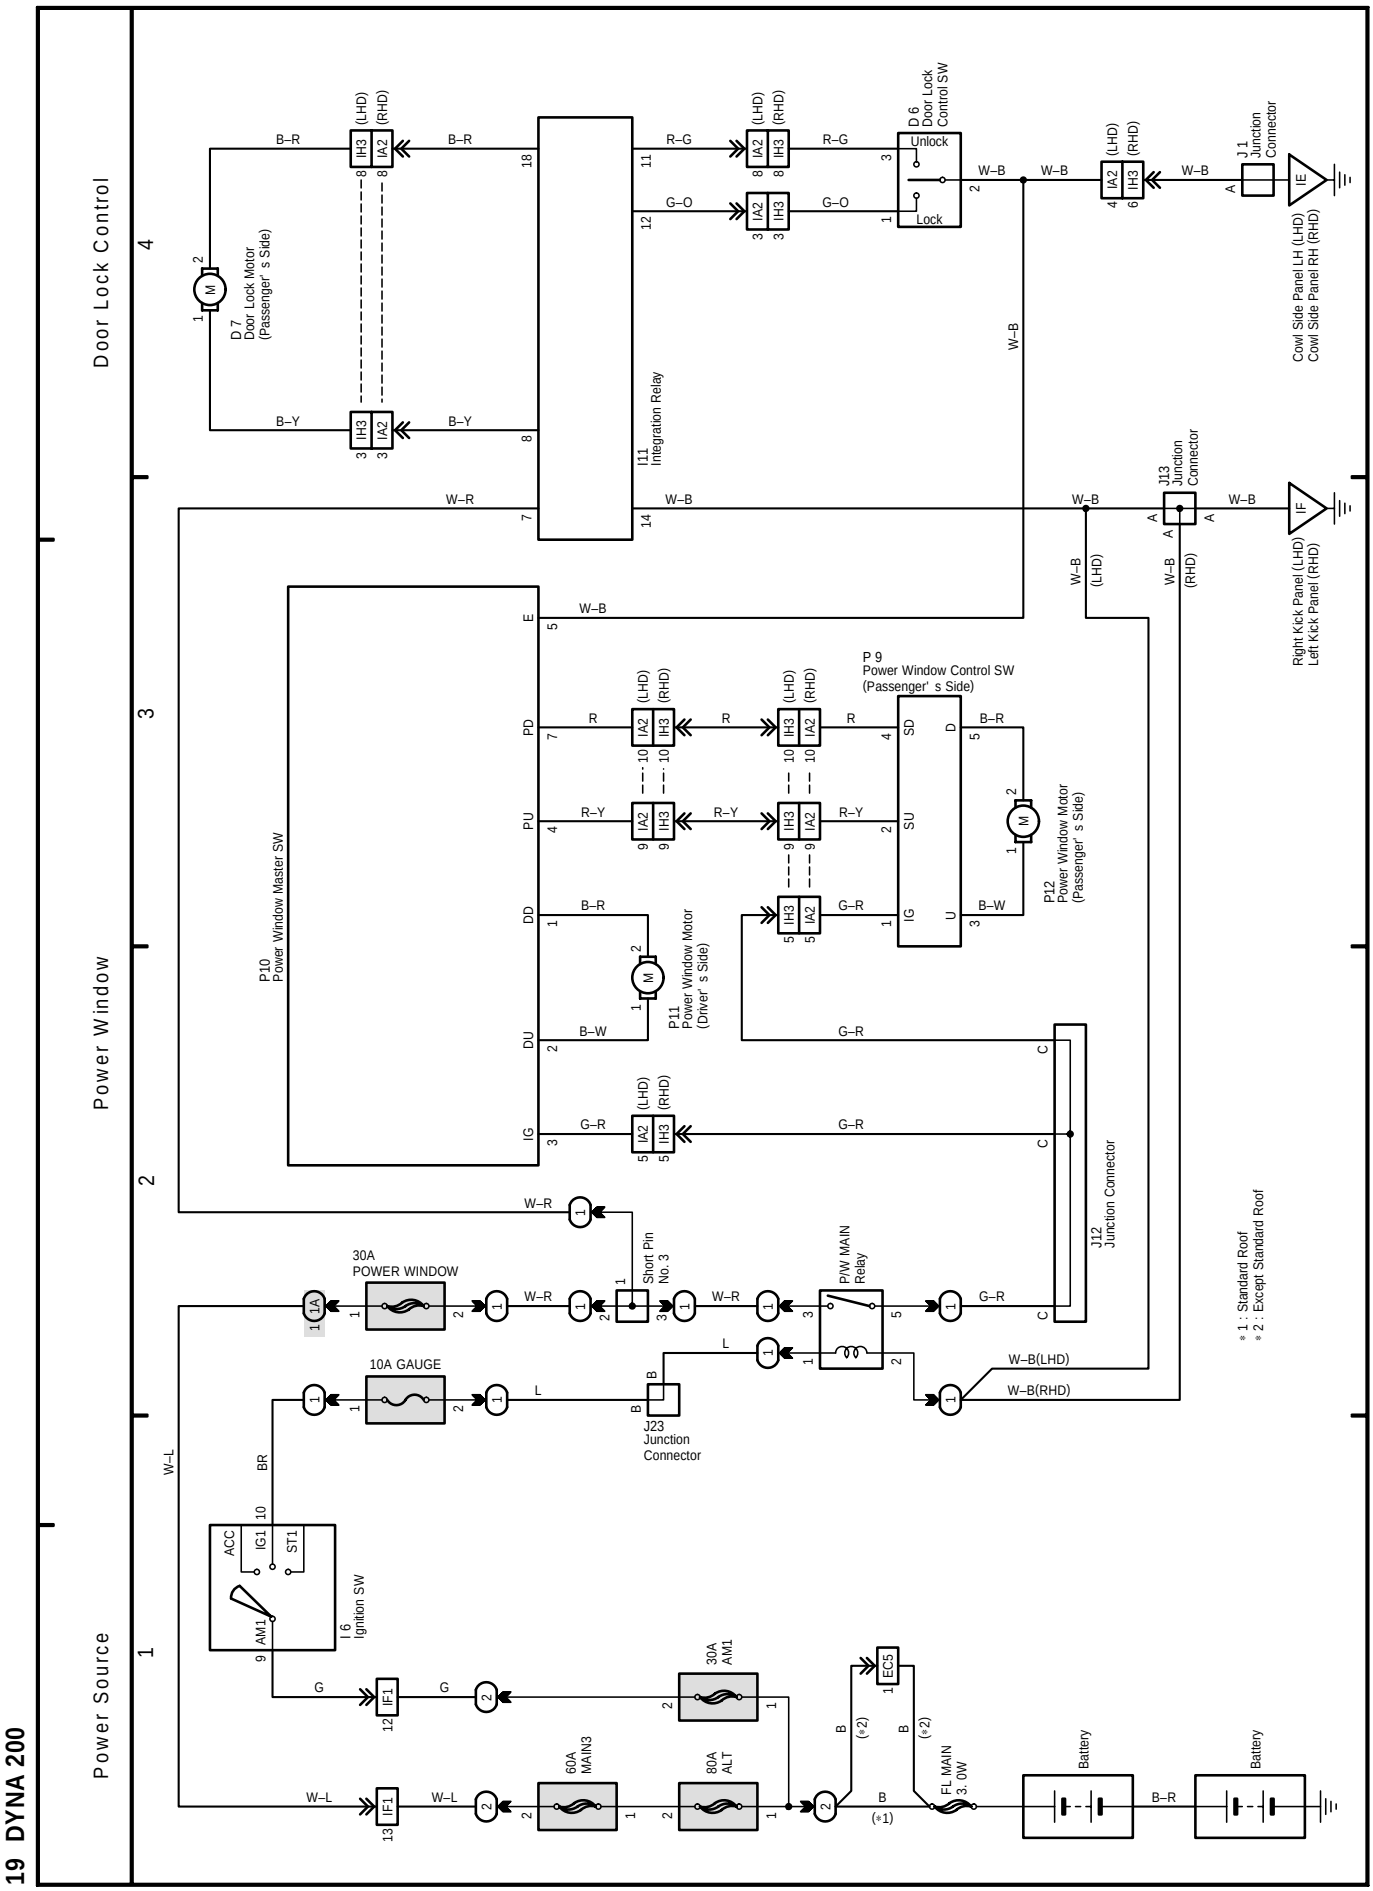

Door Lock Control
Power Window
Power Source
D 7
Door Lock Motor
(Passenger' s Side)
D 6
Door Lock
Control SW
Unlock
Lock
J 1
Junction
Connector
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
I11
Integration Relay
J13
Junction
Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
P 9
Power Window Control SW
(Passenger' s Side)
P10
Power Window Master SW
P11
Power Window Motor
(Driver' s Side)
P12
Power Window Motor
(Passenger' s Side)
J12
Junction Connector
30A
POWER WINDOW
Short Pin
No. 3
P/W MAIN
Relay
10A GAUGE
J23
Junction
Connector
I 6
Ignition SW
ACC
IG1
ST1
AM1
30A
AM1
60A
MAIN3
80A
ALT
EC5
FL MAIN
3. 0W
Battery
Battery
(LHD)
(RHD)
W–B(LHD)
W–B(RHD)
* 1 : Standard Roof
* 2 : Except Standard Roof