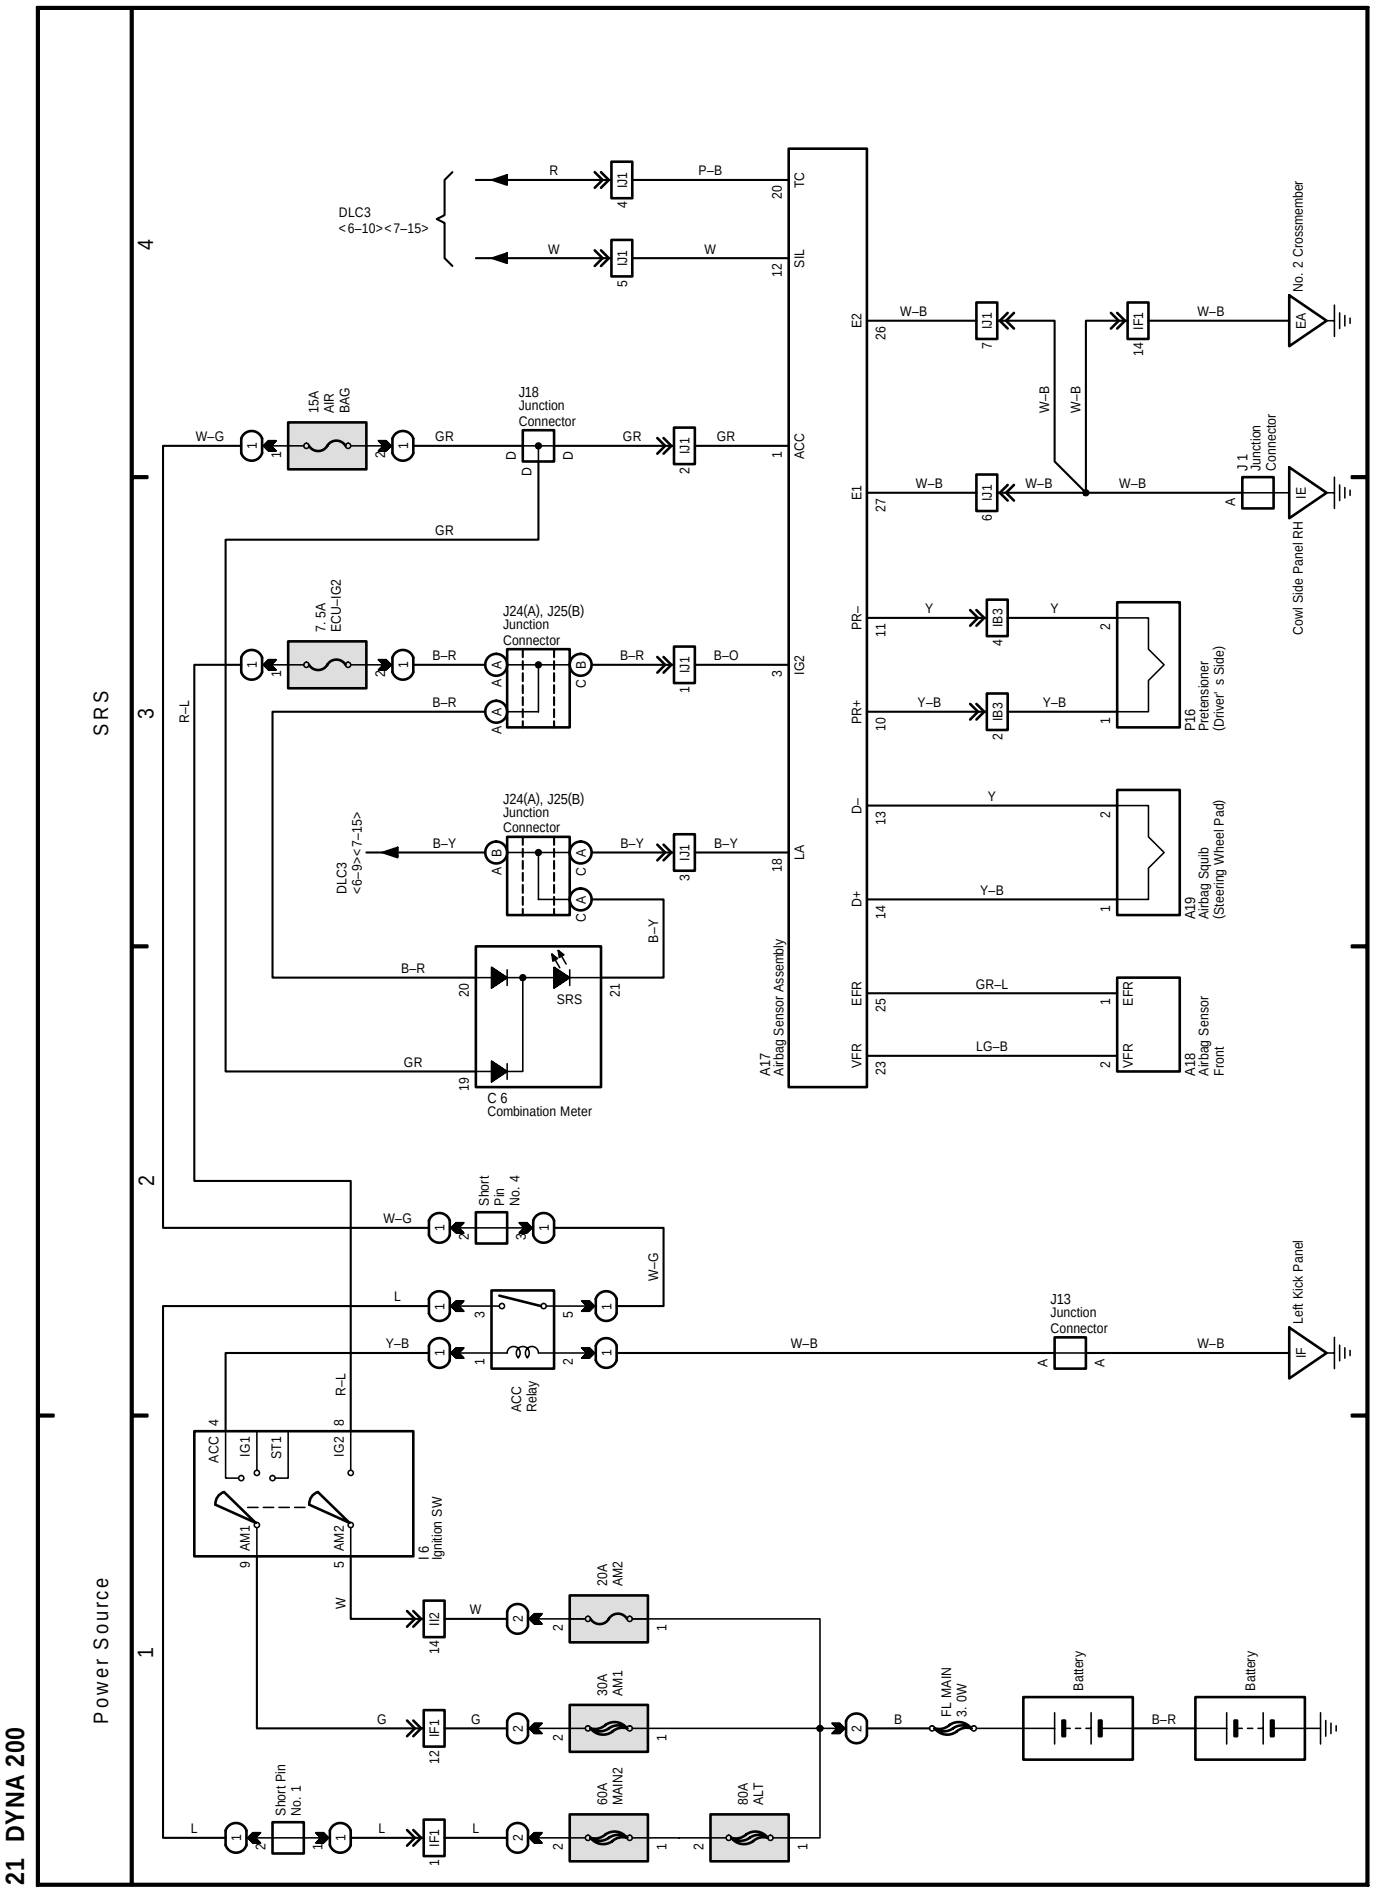

21 DYNA 200
Power Source
SRS
DLC3
<6–10><7–15>
J18
Junction
Connector
15A
AIR
BAG
7.5A
ECU–IG2
J24(A), J25(B)
Junction
Connector
DLC3
<6–9><7–15>
SRS
C 6
Combination Meter
A17
Airbag Sensor Assembly
No. 2 Crossmember
Cowl Side Panel RH
J1
Junction
Connector
P16
Pretensioner
(Driver' s Side)
A19
Airbag Squib
(Steering Wheel Pad)
A18
Airbag Sensor
Front
Short
Pin
No. 4
ACC
Relay
J13
Junction
Connector
Left Kick Panel
I6
Ignition SW
20A
AM2
30A
AM1
60A
MAIN2
80A
ALT
Short Pin
No. 1
FL MAIN
3. 0W
Battery
Battery