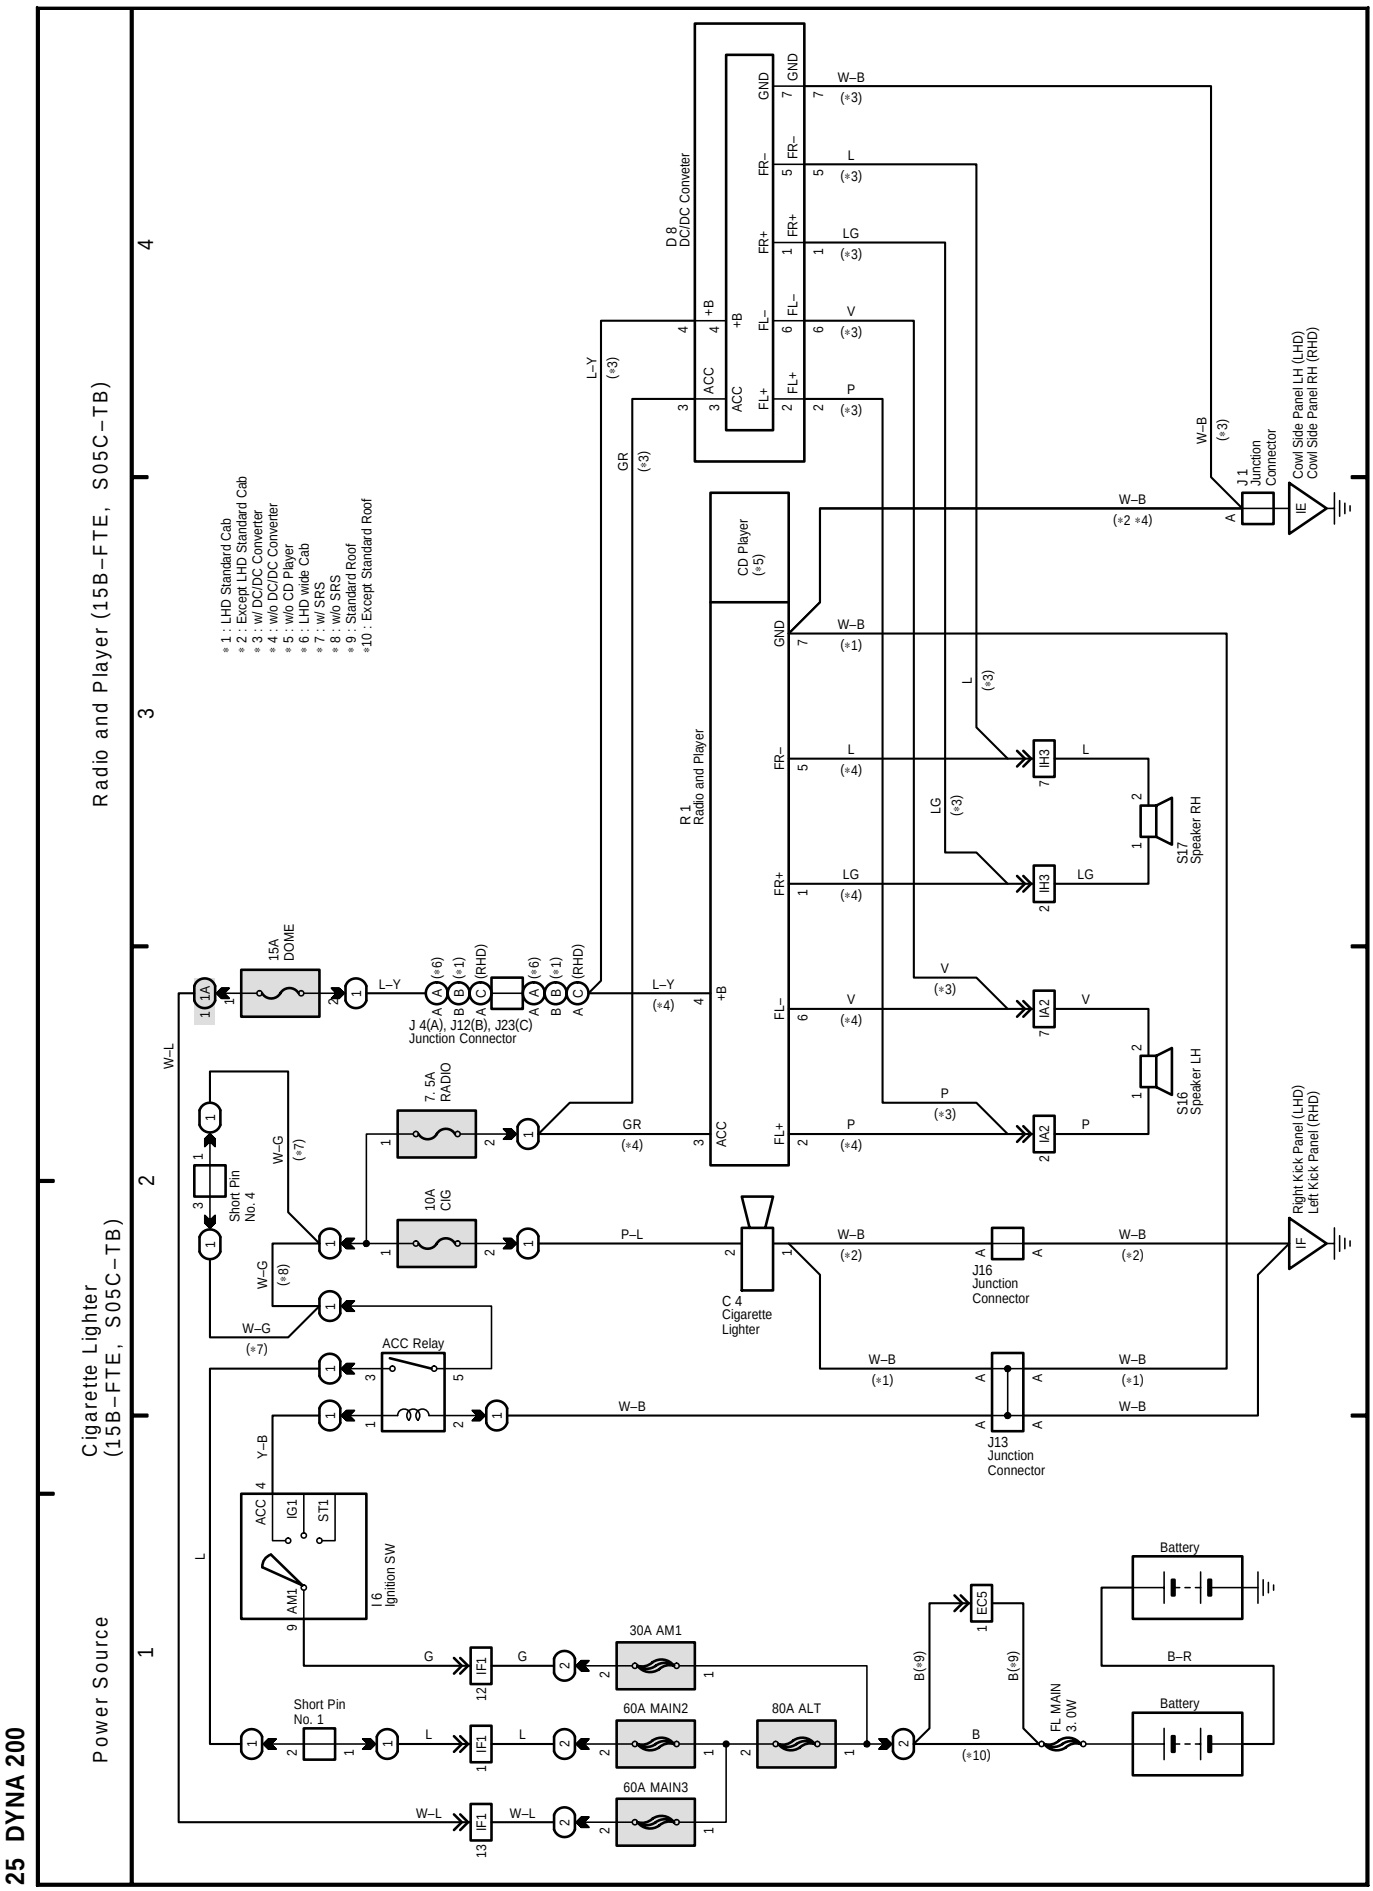

Power Source
Cigarette Lighter (15B–FTE, S05C–TB)
Radio and Player (15B–FTE, S05C–TB)
25 DYNA 200
∗1 : LHD Standard Cab
∗2 : Except LHD Standard Cab
∗3 : w/ DC/DC Converter
∗4 : w/o DC/DC Converter
∗5 : w/o CD Player
∗6 : LHD wide Cab
∗7 : w/ SRS
∗8 : w/o SRS
∗9 : Standard Roof
∗10 : Except Standard Roof
D 8 DC/DC Conveter
R 1 Radio and Player
CD Player (∗5)
J 1 Junction Connector
Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)
J 4(A), J12(B), J23(C) Junction Connector
15A DOME
7. 5A RADIO
10A CIG
ACC Relay
Short Pin No. 4
Short Pin No. 1
I 6 Ignition SW
C 4 Cigarette Lighter
J16 Junction Connector
J13 Junction Connector
S17 Speaker RH
S16 Speaker LH
Right Kick Panel (LHD) Left Kick Panel (RHD)
30A AM1
60A MAIN2
60A MAIN3
80A ALT
FL MAIN 3. 0W
Battery
Battery