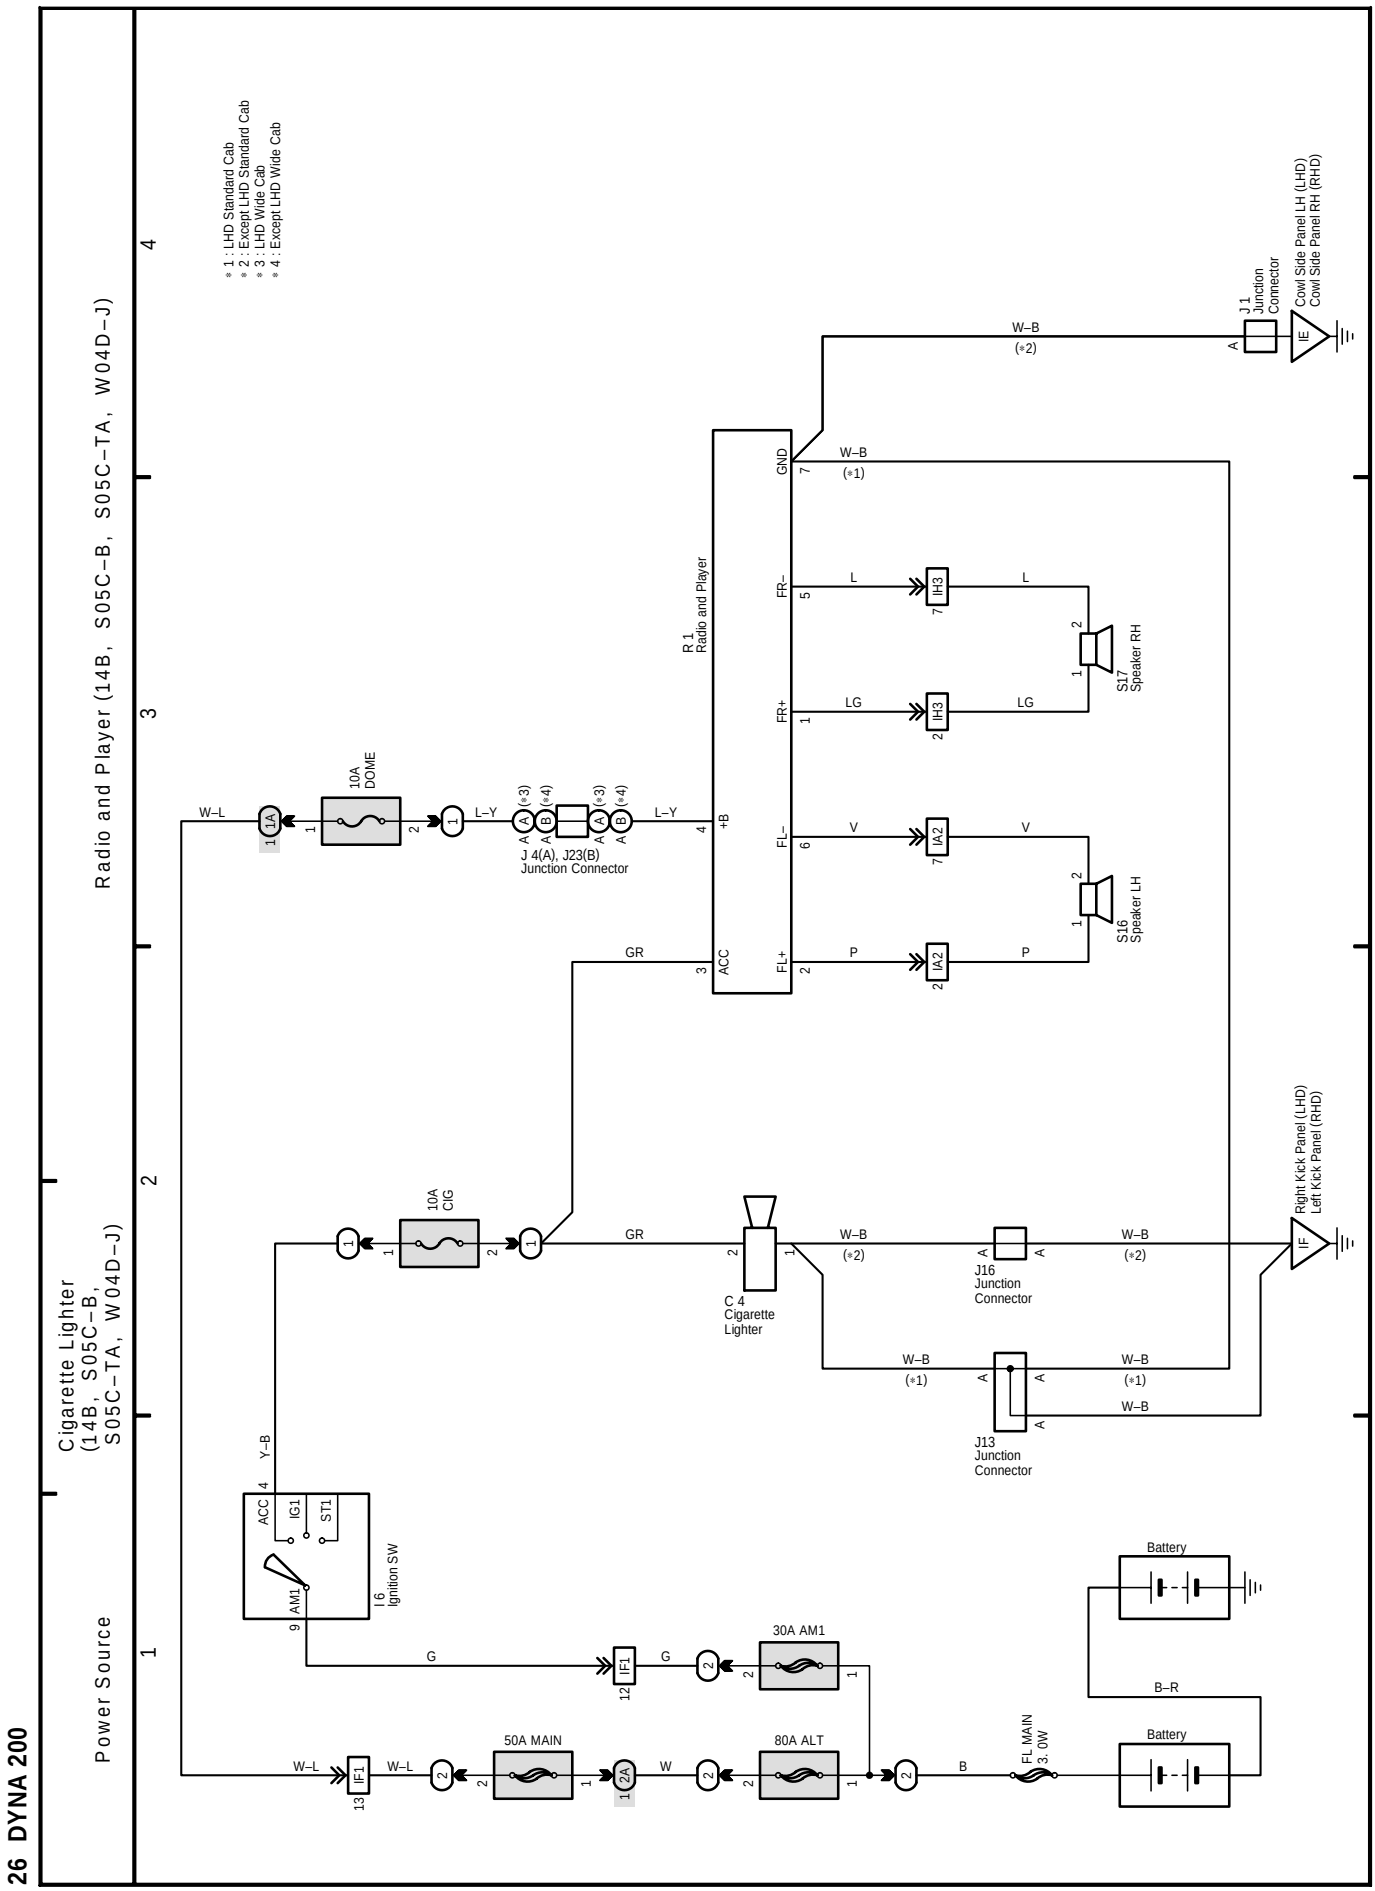

26 DYNA 200
Power Source
Cigarette Lighter (14B, S05C–B, S05C–TA, W04D–J)
Radio and Player (14B, S05C–B, S05C–TA, W04D–J)
1
2
3
4
* 1 : LHD Standard Cab
* 2 : Except LHD Standard Cab
* 3 : LHD Wide Cab
* 4 : Except LHD Wide Cab
J1 Junction Connector
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
W–B
(*2)
W–B
(*1)
R 1
Radio and Player
GND
FR–
FR+
FL–
FL+
+B
ACC
L
LG
V
P
H3
IA2
S17
Speaker RH
S16
Speaker LH
10A
DOME
1A
W–L
L–Y
(*3)
(*4)
J 4(A), J23(B)
Junction Connector
GR
10A
CIG
C 4
Cigarette
Lighter
J16
Junction
Connector
J13
Junction
Connector
IF
Right Kick Panel (LHD)
Left Kick Panel (RHD)
Y–B
I 6
Ignition SW
ACC
IG1
ST1
AM1
G
IF1
30A AM1
50A MAIN
80A ALT
2A
W
B
B–R
FL MAIN
3. 0W
Battery