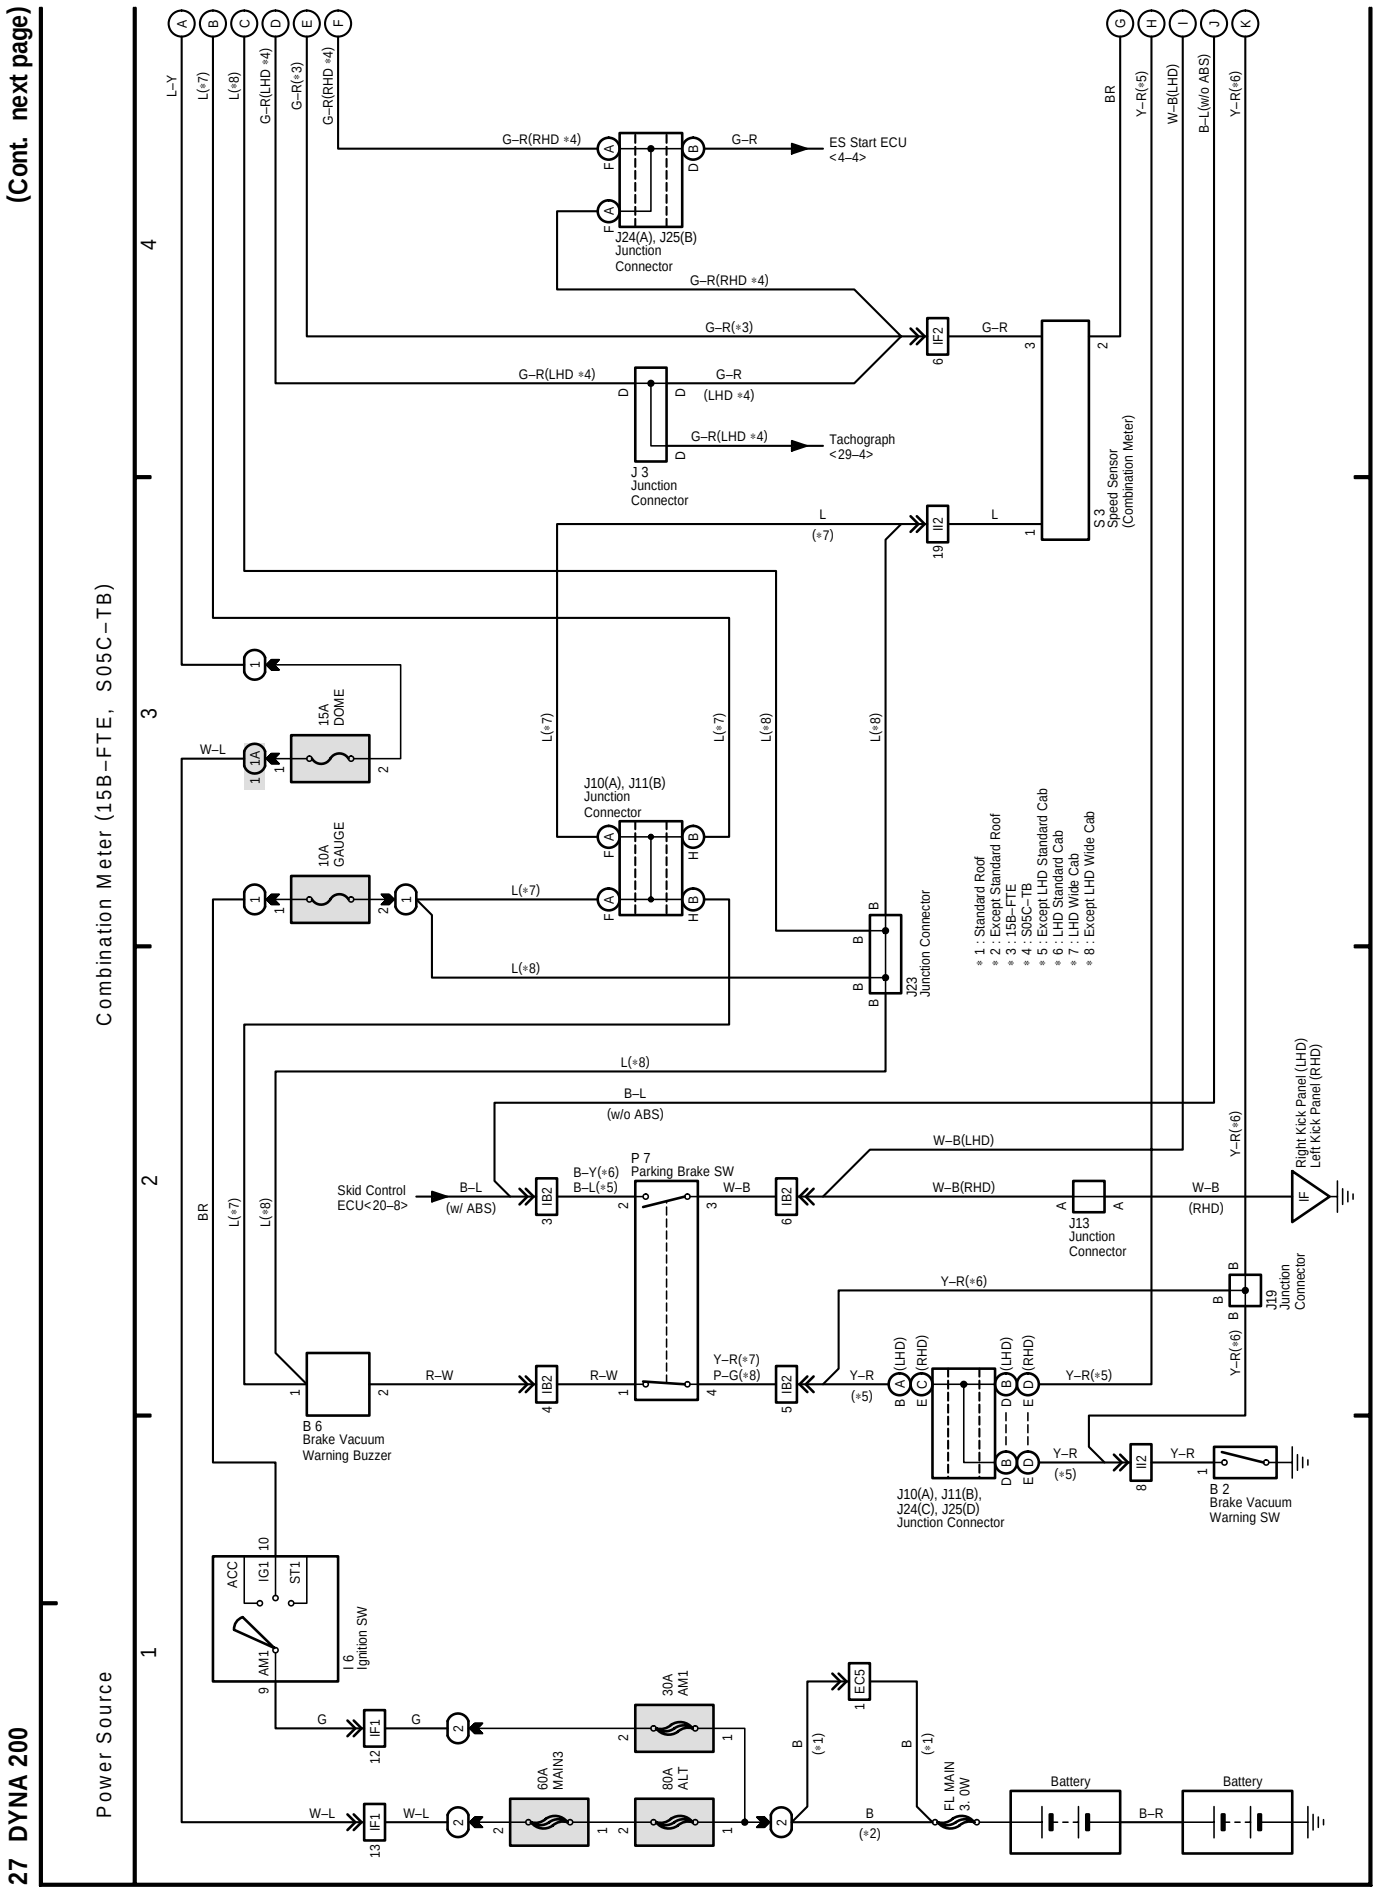
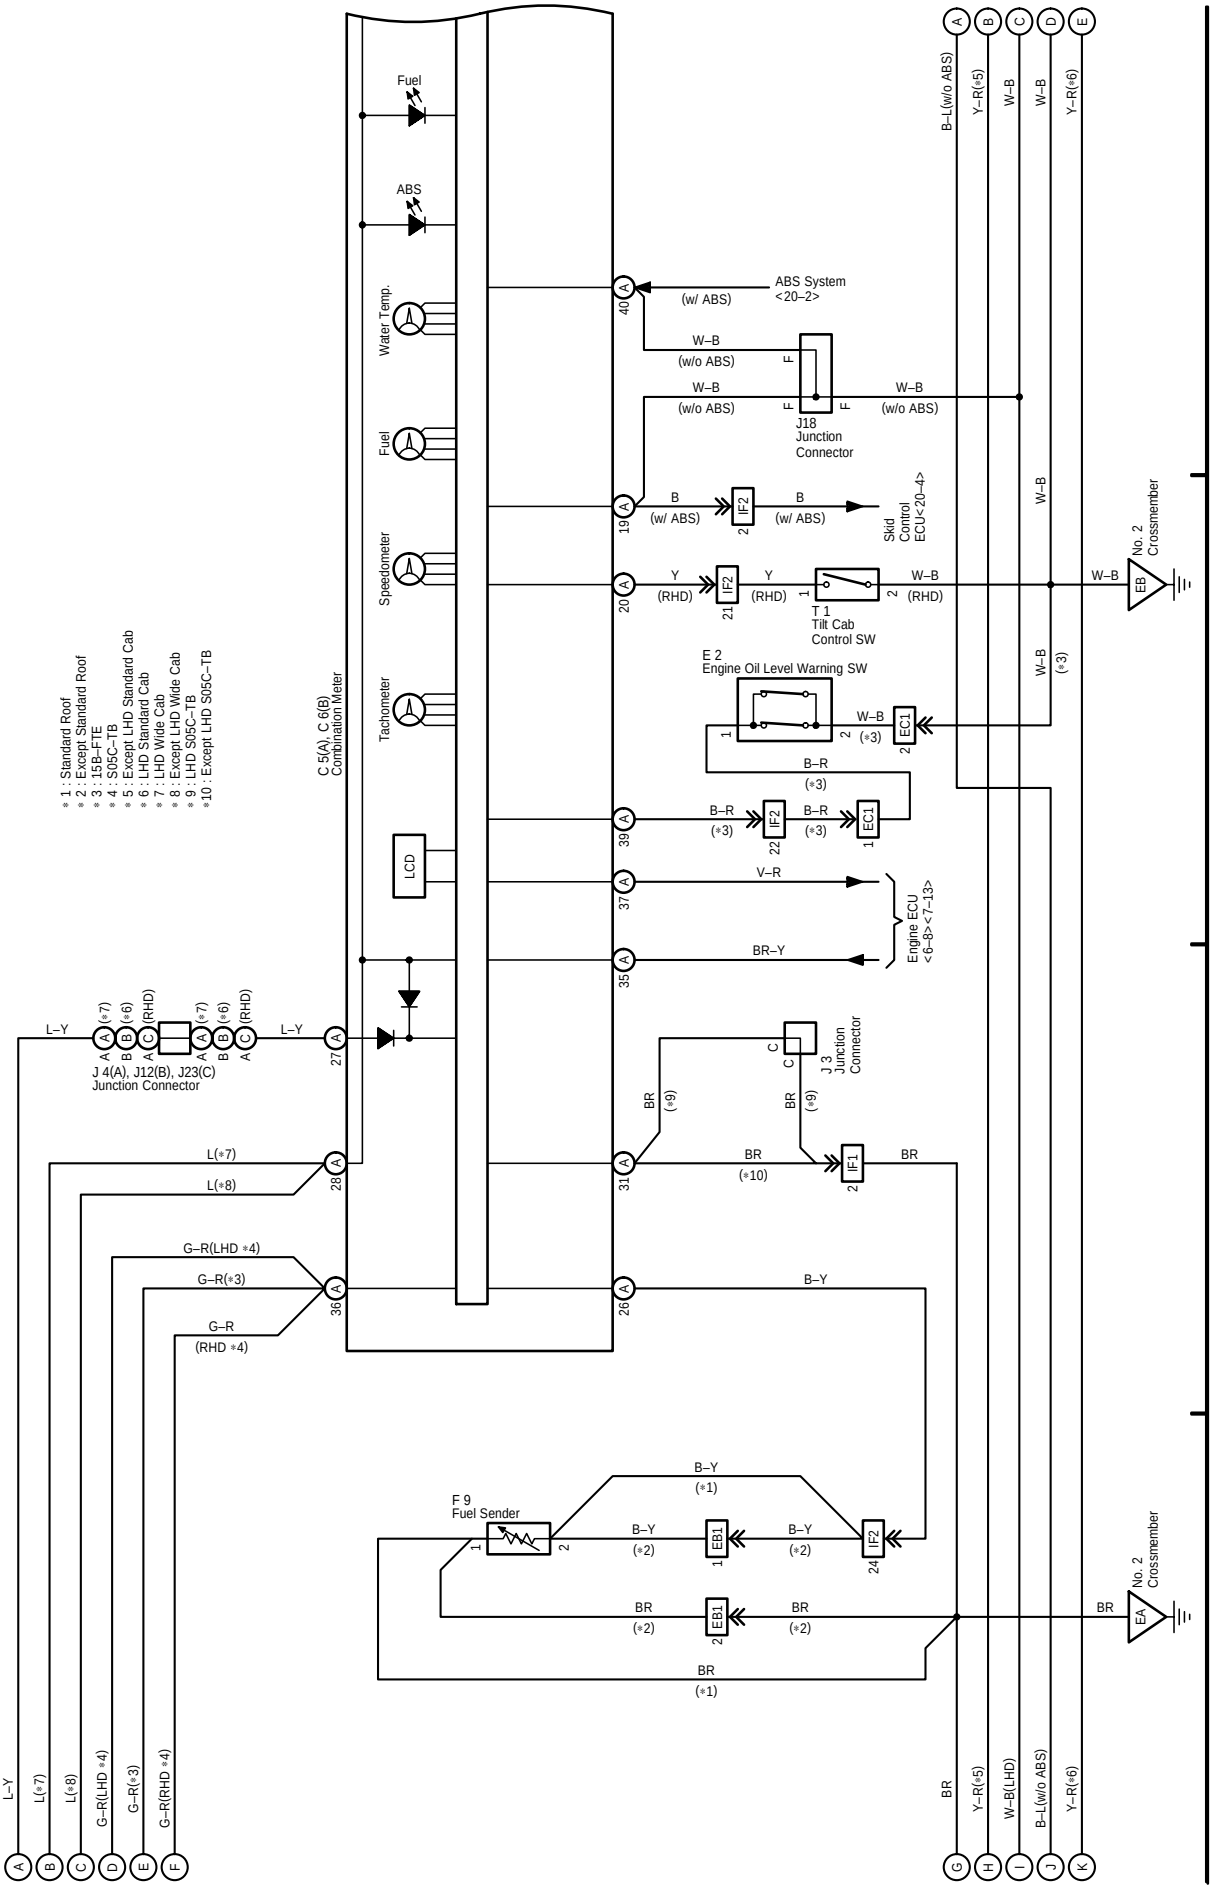
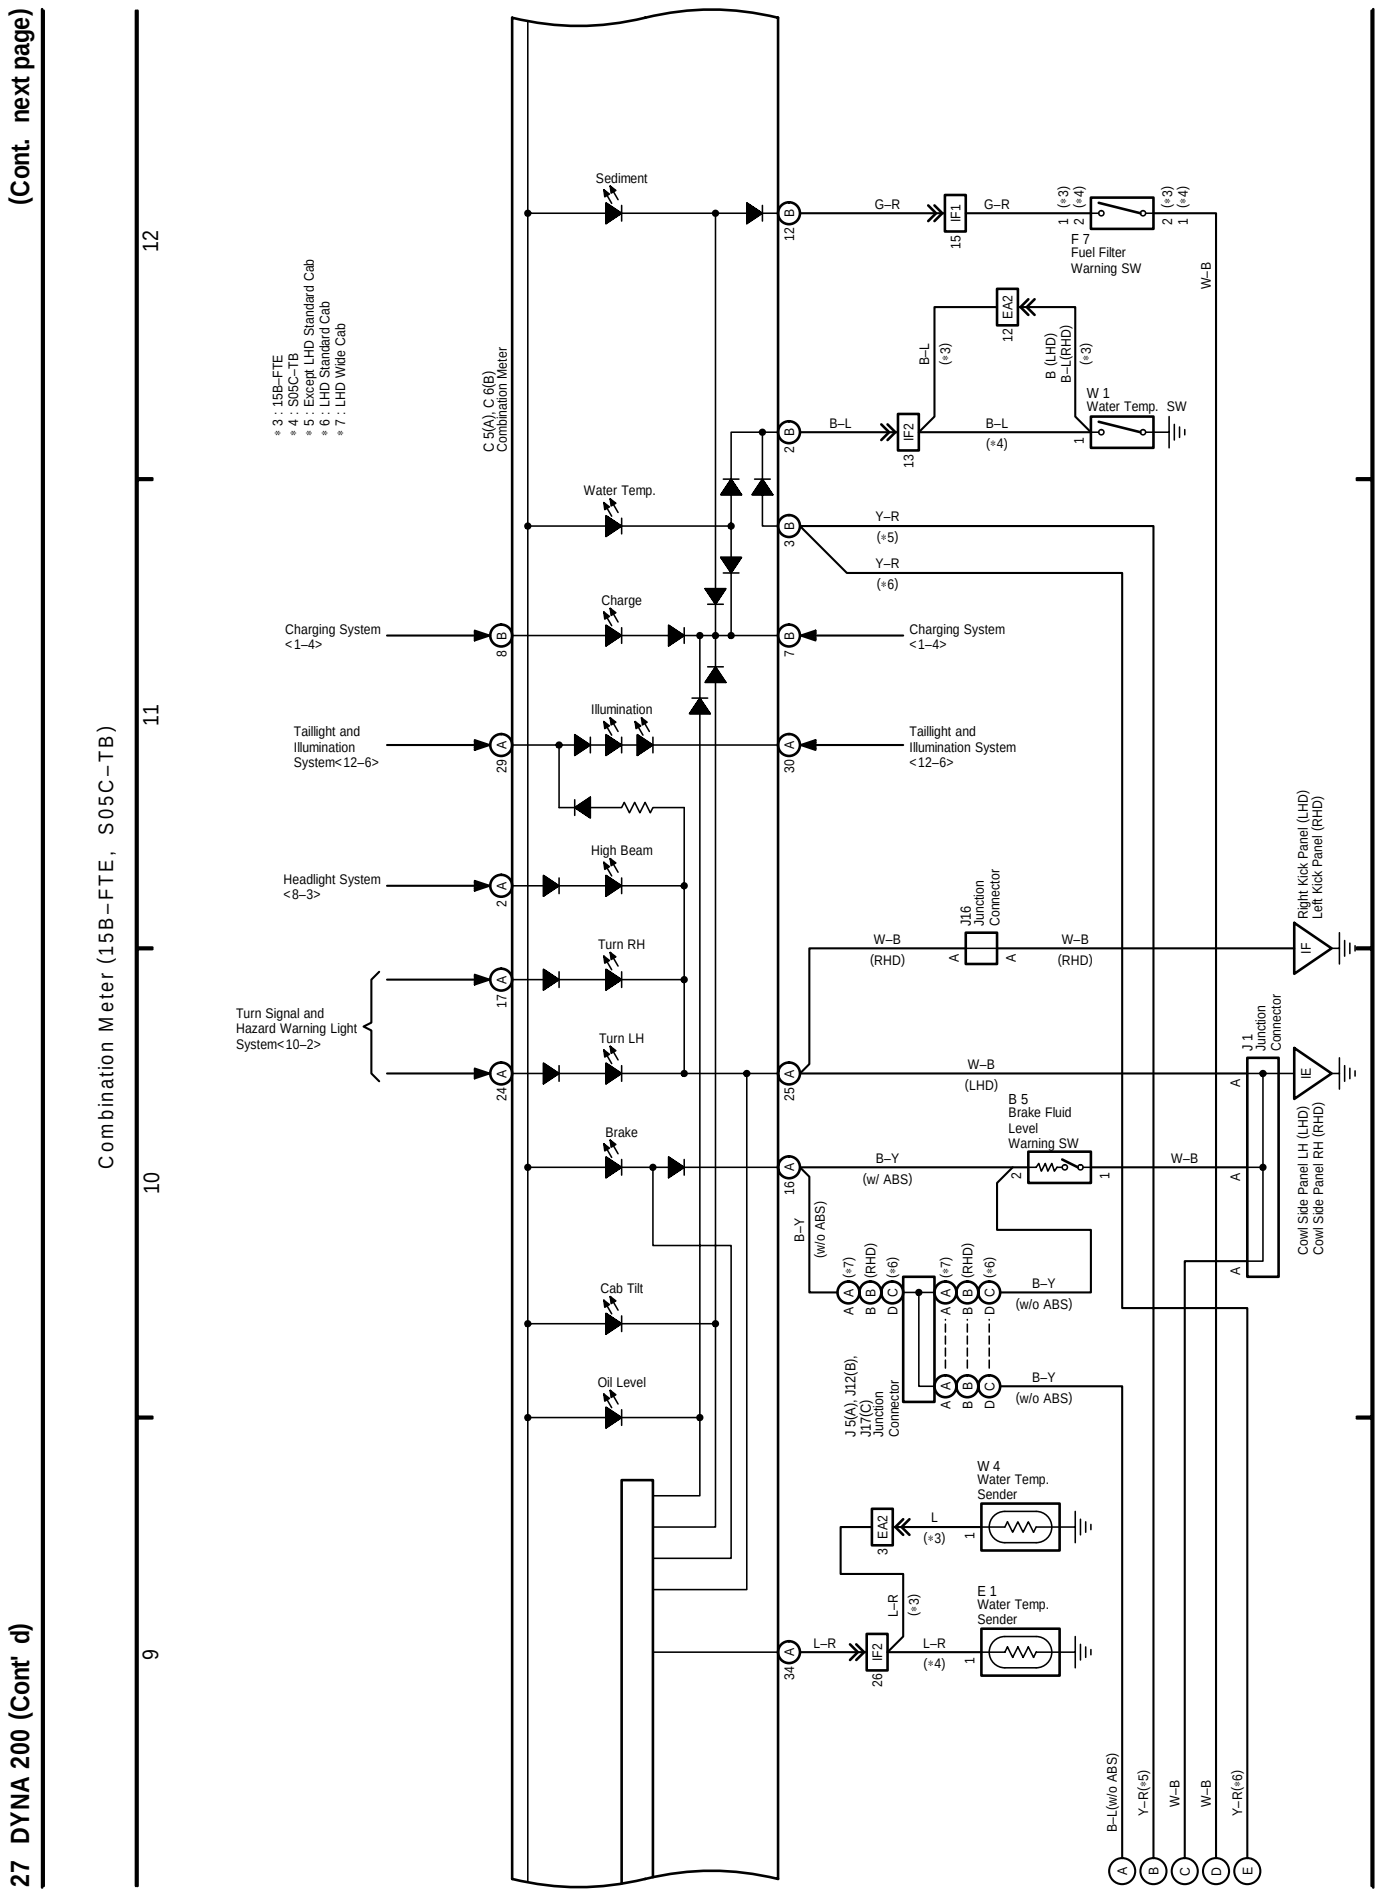

(Cont. next page)
Combination Meter (15B–FTE, S05C–TB)
Power Source
27 DYNA 200
ES Start ECU <4–4>
J24(A), J25(B) Junction Connector
J 3 Junction Connector
Tachograph <29–4>
S 3 Speed Sensor (Combination Meter)
15A DOME
10A GAUGE
J10(A), J11(B) Junction Connector
J23 Junction Connector
* 1 : Standard Roof
* 2 : Except Standard Roof
* 3 : 15B–FTE
* 4 : S05C–TB
* 5 : Except LHD Standard Cab
* 6 : LHD Standard Cab
* 7 : LHD Wide Cab
* 8 : Except LHD Wide Cab
Skid Control ECU<20–8>
P 7 Parking Brake SW
J13 Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
J19 Junction Connector
B 6 Brake Vacuum Warning Buzzer
J10(A), J11(B), J24(C), J25(D) Junction Connector
B 2 Brake Vacuum Warning SW
I 6 Ignition SW
ACC
IG1
ST1
AM1
30A AM1
60A MAIN3
80A ALT
FL MAIN 3. 0W
Battery
Battery

27 DYNA 200 (Cont' d)

(Cont. next page)




(Cont. next page)
27 DYNA 200 (Cont' d)
Combination Meter (15B–FTE, S05C–TB)
12
11
10
9
* 3 : 15B–FTE
* 4 : S05C–TB
* 5 : Except LHD Standard Cab
* 6 : LHD Standard Cab
* 7 : LHD Wide Cab
C 5(A), C 6(B) Combination Meter
Sediment
Water Temp.
Charge
Illumination
High Beam
Turn RH
Turn LH
Brake
Cab Tilt
Oil Level
Charging System <1–4>
Taillight and Illumination System<12–6>
Headlight System <8–3>
Turn Signal and Hazard Warning Light System<10–2>
G–R
B–L
Y–R
(*5)
Y–R
(*6)
W–B
(RHD)
W–B
(LHD)
B–Y
(w/ ABS)
B–Y
(w/o ABS)
L–R
F 7 Fuel Filter Warning SW
W 1 Water Temp. SW
W 4 Water Temp. Sender
E 1 Water Temp. Sender
B 5 Brake Fluid Level Warning SW
J16 Junction Connector
J 1 Junction Connector
J 5(A), J12(B), J17(C) Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)
B–L(w/o ABS)
Y–R(*5)
W–B
W–B
Y–R(*6)

27 DYNA 200 (Cont' d)

