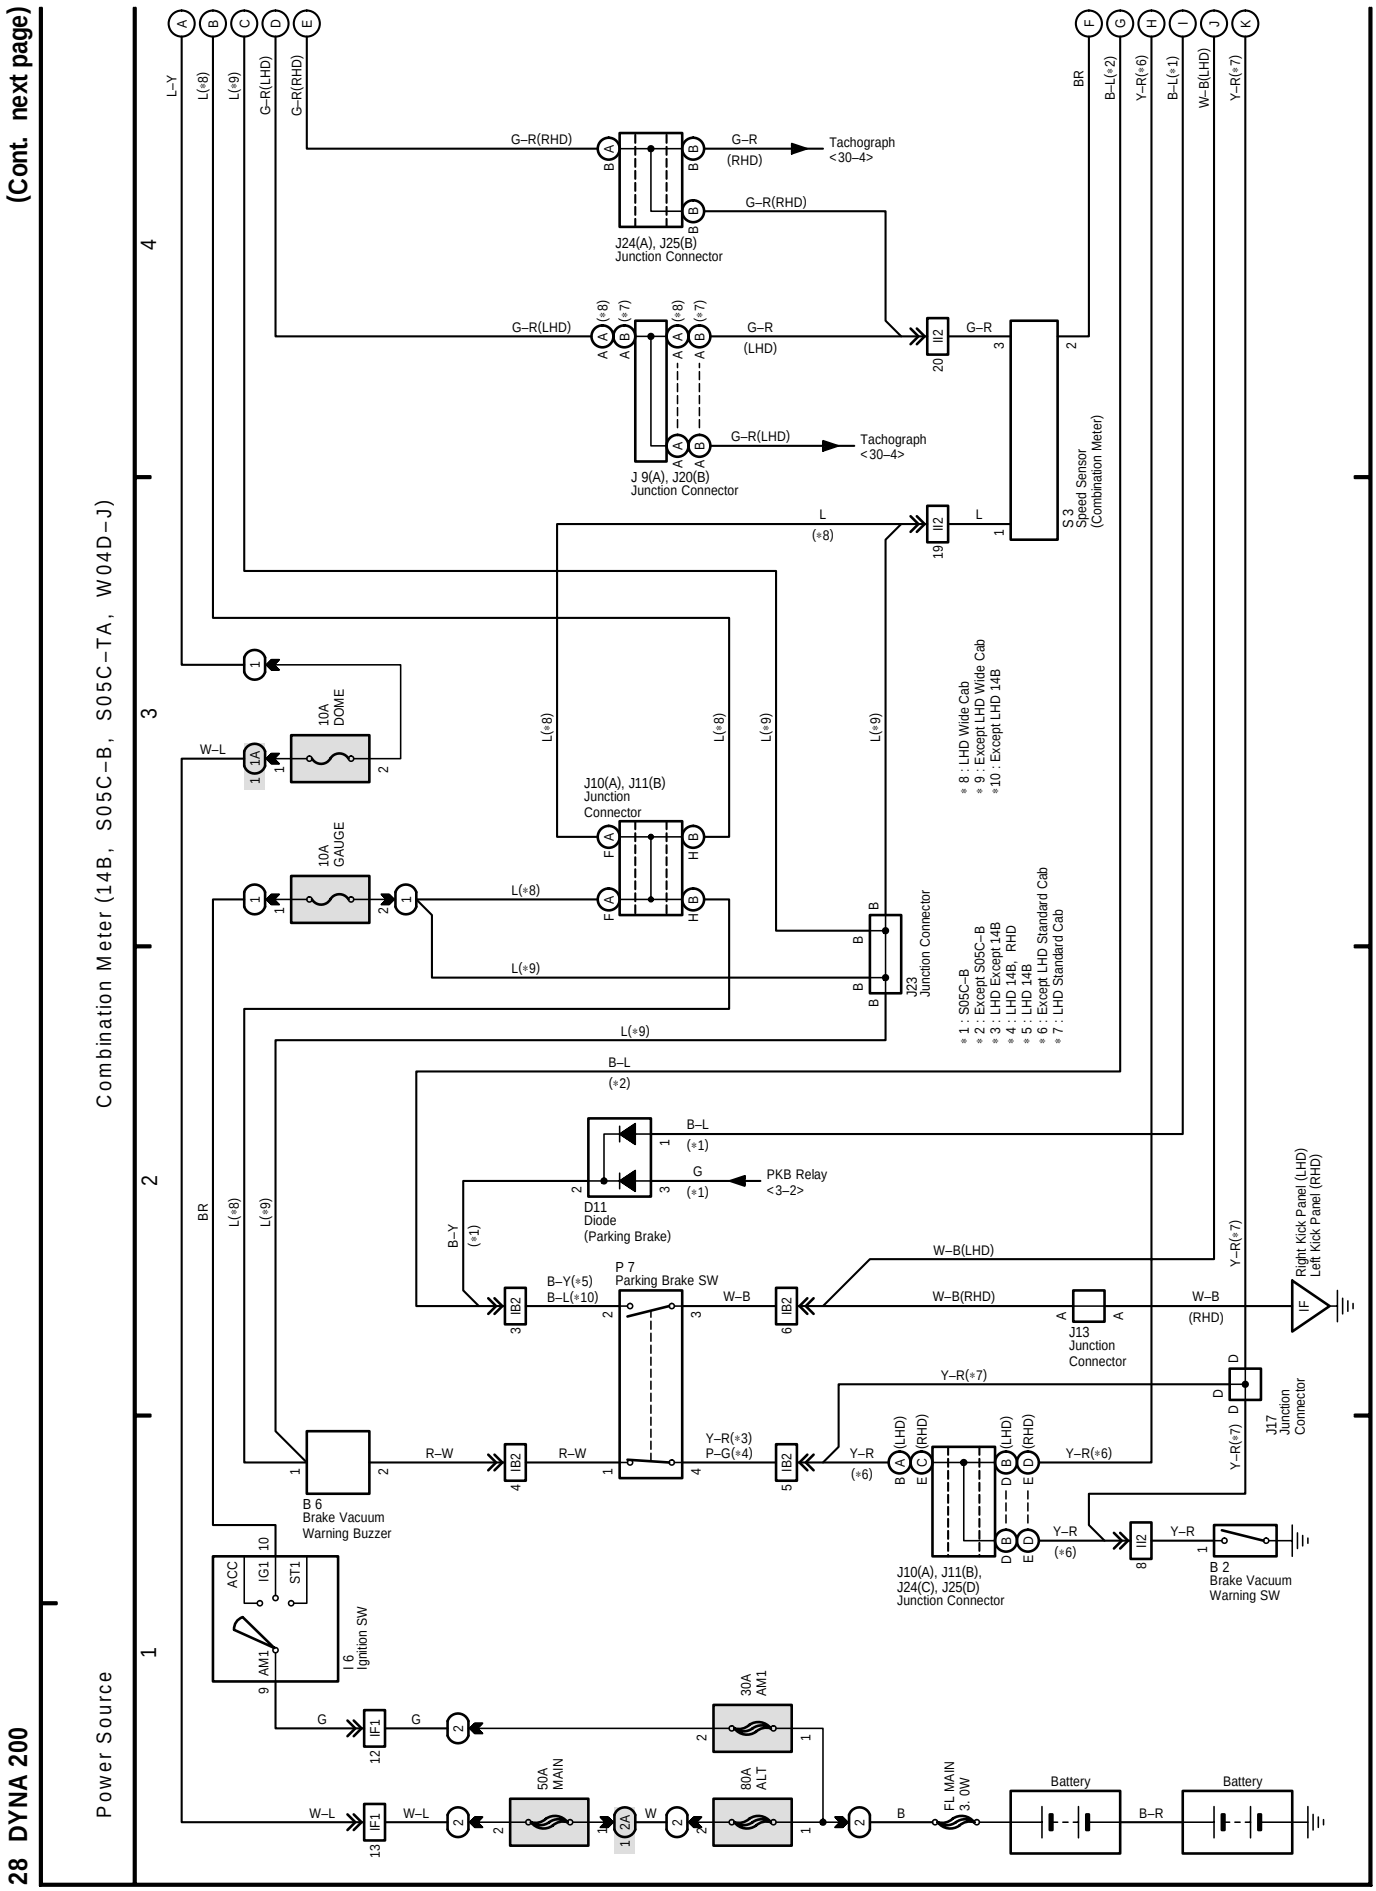
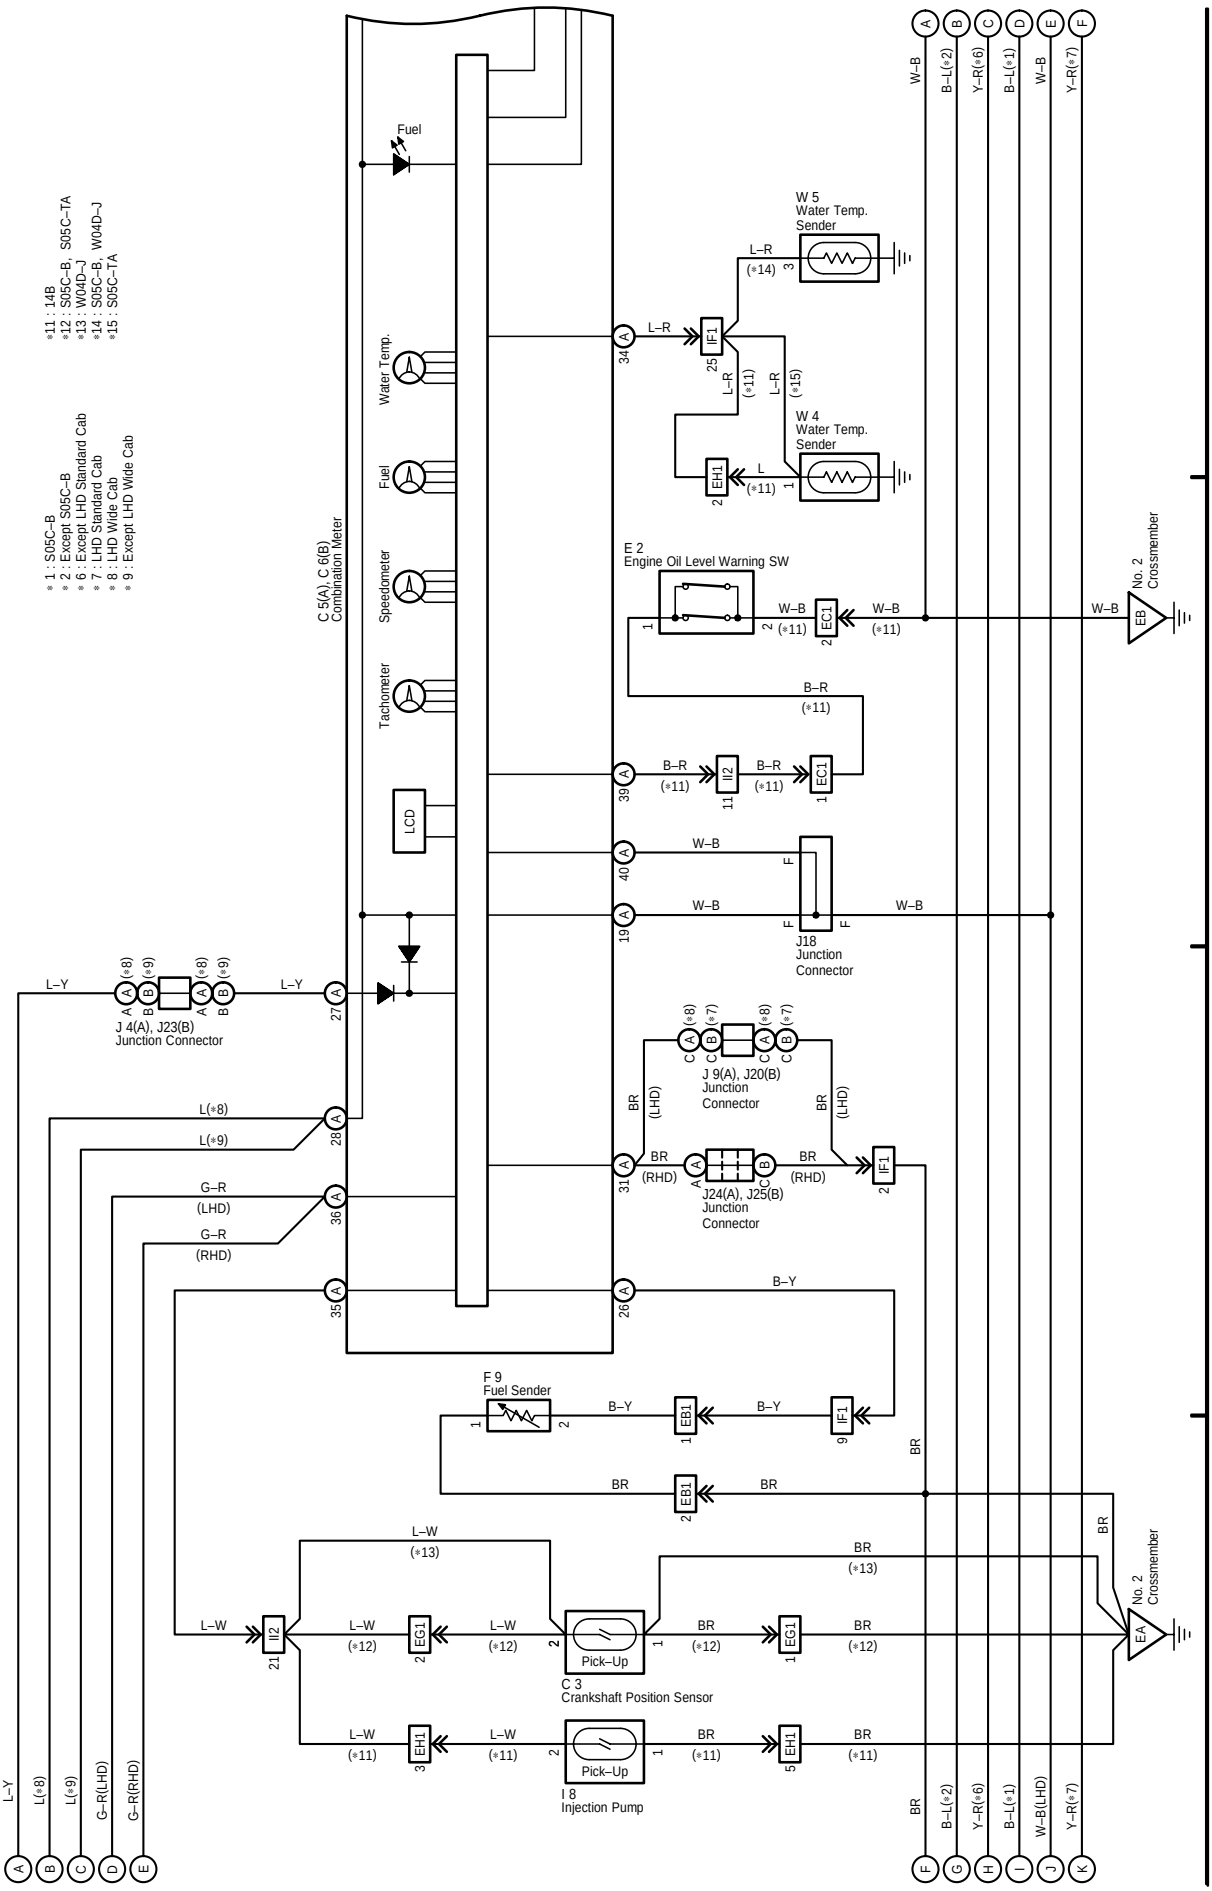
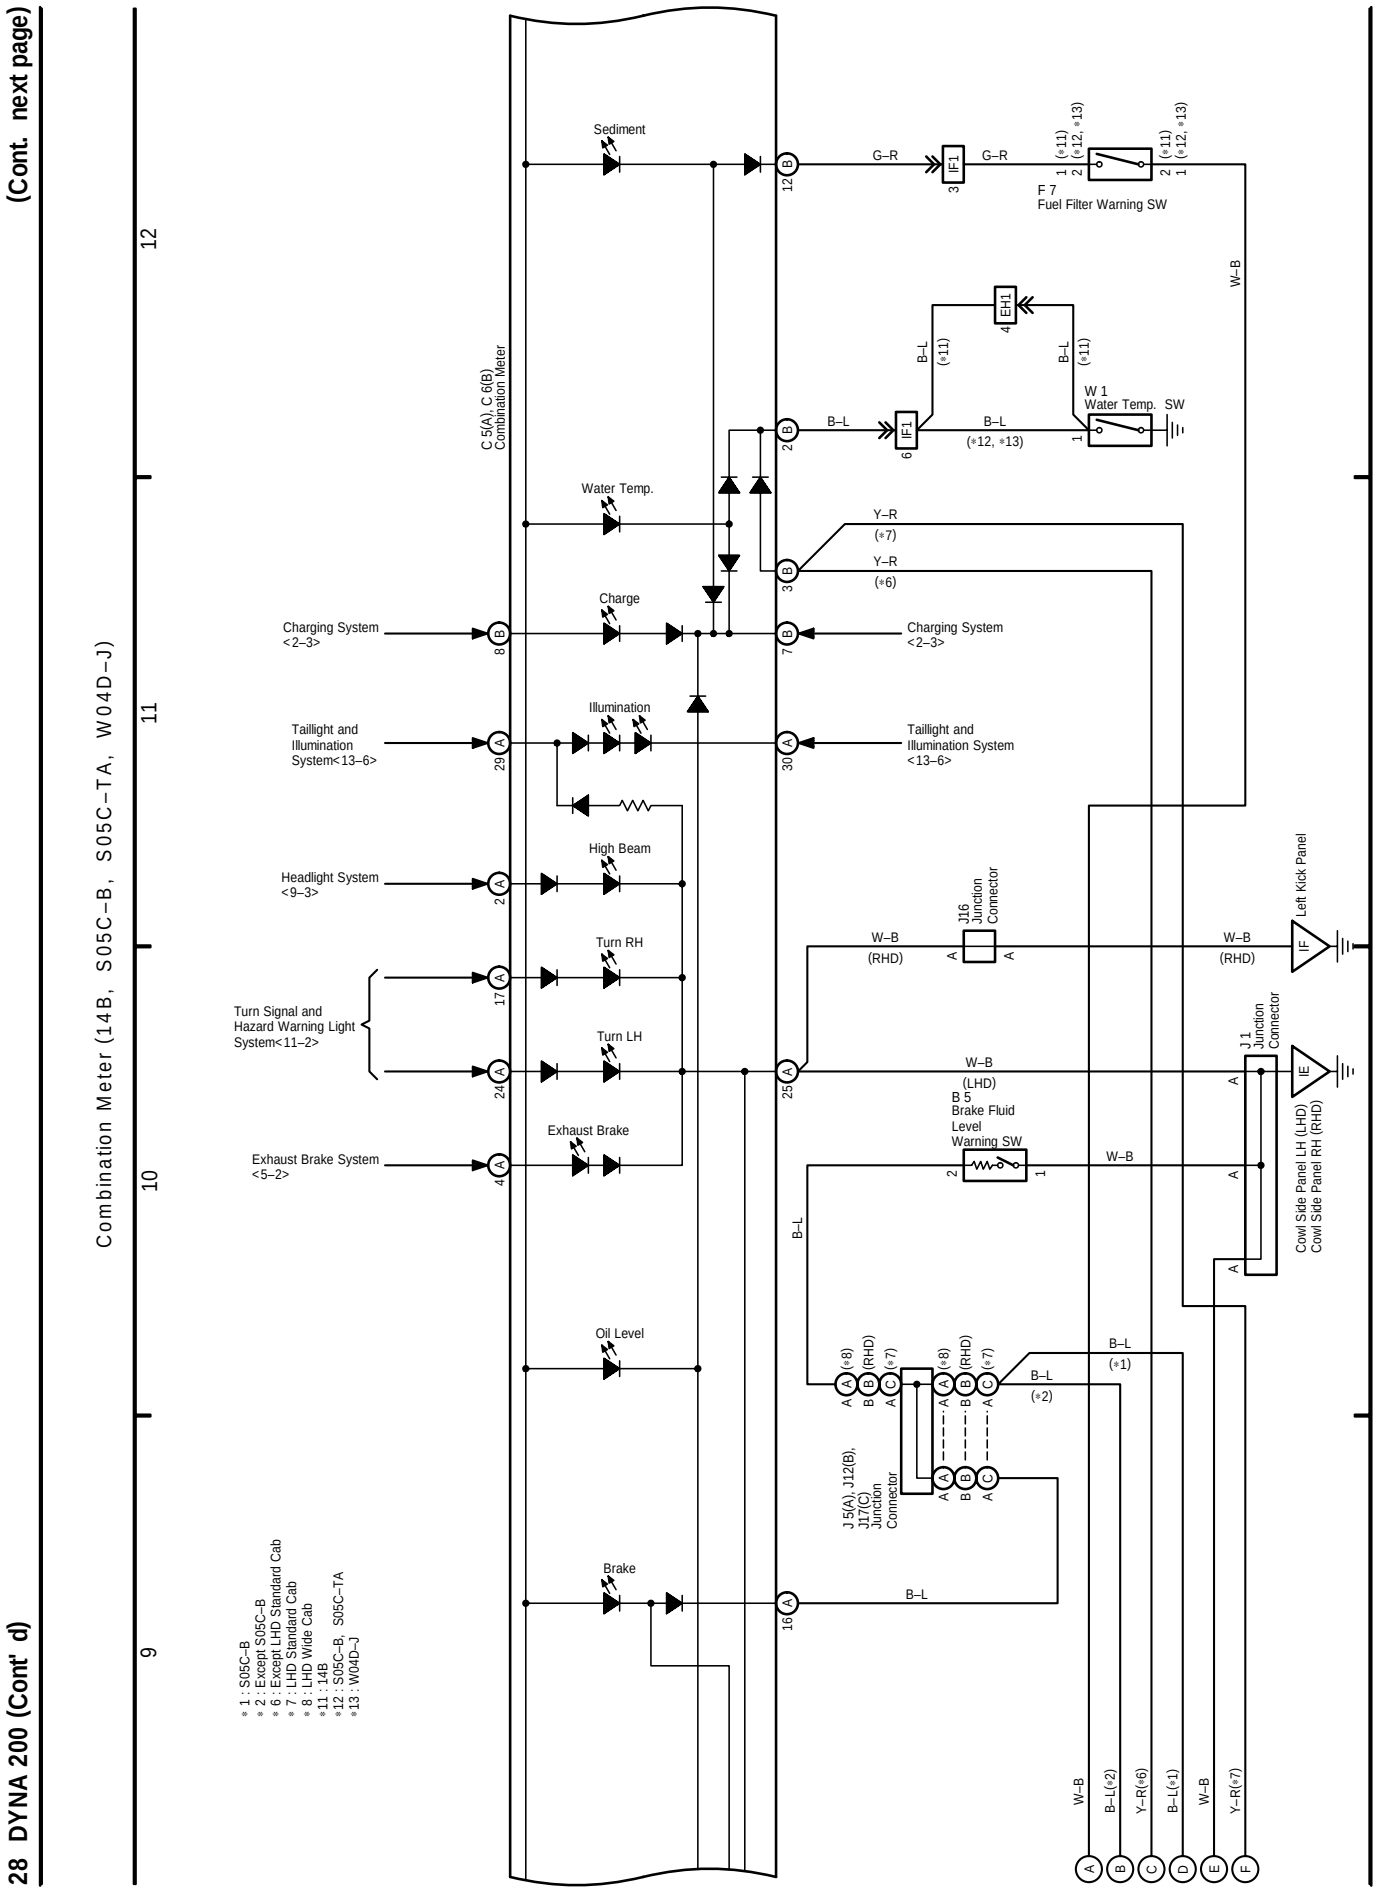

(Cont. next page)
Combination Meter (14B, S05C–B, S05C–TA, W04D–J)
Power Source
28 DYNA 200
Tachograph <30–4>
J24(A), J25(B) Junction Connector
J 9(A), J20(B) Junction Connector
S 3 Speed Sensor (Combination Meter)
10A DOME
10A GAUGE
J10(A), J11(B) Junction Connector
J23 Junction Connector
* 1 : S05C–B
* 2 : Except S05C–B
* 3 : LHD Except 14B
* 4 : LHD 14B, RHD
* 5 : LHD 14B
* 6 : Except LHD Standard Cab
* 7 : LHD Standard Cab
* 8 : LHD Wide Cab
* 9 : Except LHD Wide Cab
*10 : Except LHD 14B
D11 Diode (Parking Brake)
PKB Relay <3–2>
P 7 Parking Brake SW
J13 Junction Connector
J17 Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
B 6 Brake Vacuum Warning Buzzer
I 6 Ignition SW
B 2 Brake Vacuum Warning SW
J10(A), J11(B), J24(C), J25(D) Junction Connector
30A AM1
50A MAIN
80A ALT
2A
FL MAIN 3. 0W
Battery
Battery

28 DYNA 200 (Cont' d)

(Cont. next page)




(Cont. next page)
28 DYNA 200 (Cont' d)
Combination Meter (14B, S05C–B, S05C–TA, W04D–J)
9
10
11
12
C 5(A), C 6(B) Combination Meter
Sediment
Water Temp.
Charge
Illumination
High Beam
Turn RH
Turn LH
Oil Level
Brake
Exhaust Brake
Charging System <2–3>
Taillight and Illumination System<13–6>
Headlight System <9–3>
Turn Signal and Hazard Warning Light System<11–2>
Exhaust Brake System <5–2>
F 7 Fuel Filter Warning SW
W 1 Water Temp. SW
EH1
IF-1
B 5 Brake Fluid Level Warning SW
J16 Junction Connector
J1 Junction Connector
J 5(A), J12(B), J17(C) Junction Connector
Left Kick Panel
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
G–R
B–L
W–B
Y–R
(*1) : S05C–B
(*2) : Except S05C–B
(*6) : Except LHD Standard Cab
(*7) : LHD Standard Cab
(*8) : LHD Wide Cab
(*11) : 14B
(*12) : S05C–B, S05C–TA
(*13) : W04D–J

28 DYNA 200 (Cont' d)

Combination Meter (14B, S05C–B, S05C–TA, W04D–J)

16 15 14 13

