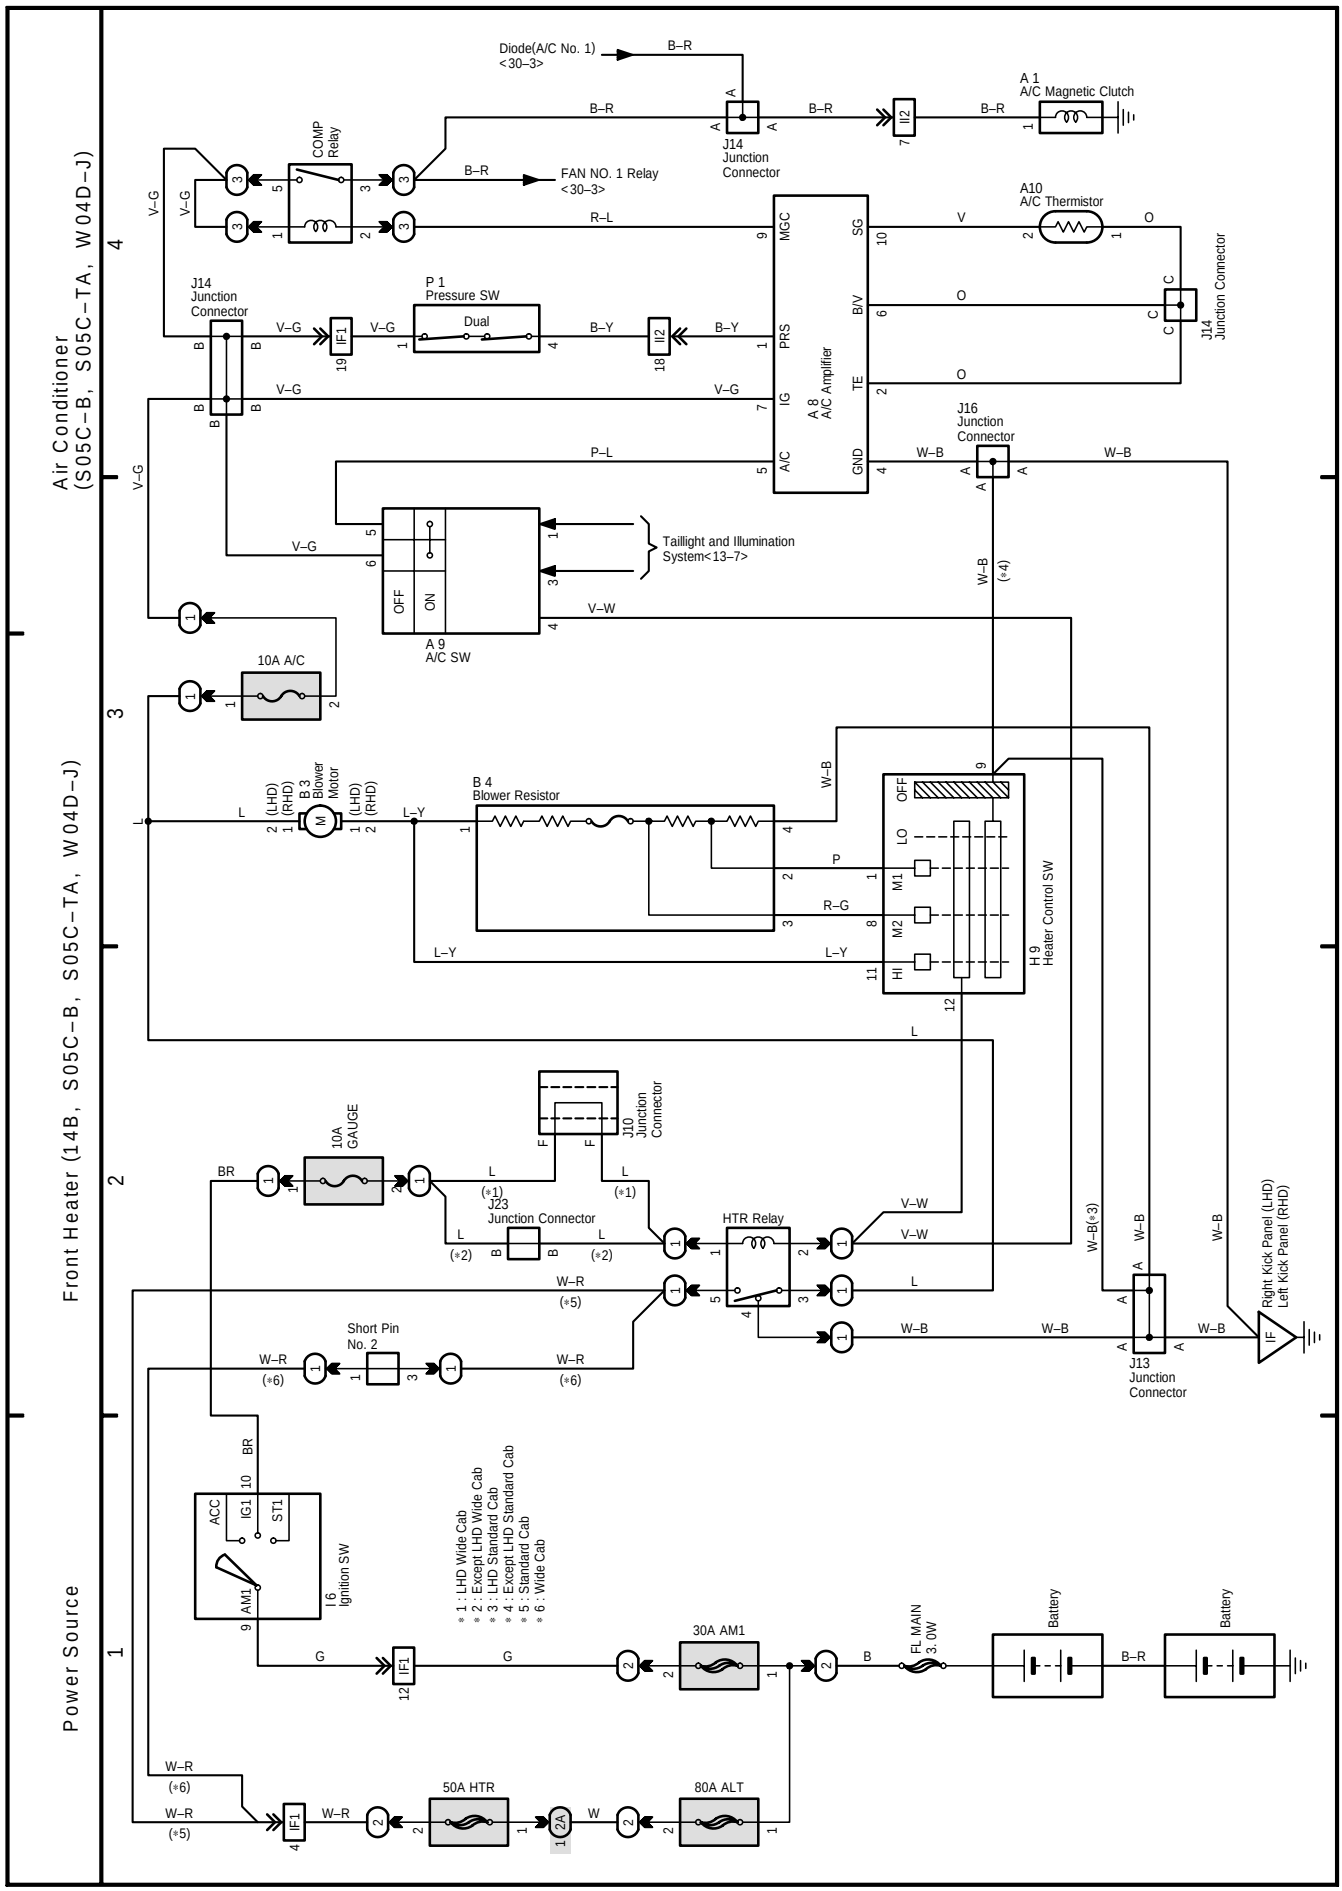

Air Conditioner (S05C–B, S05C–TA, W04D–J)
Front Heater (14B, S05C–B, S05C–TA, W04D–J)
Power Source
Diode(A/C No. 1) <30–3>
A 1 A/C Magnetic Clutch
COMP Relay
FAN NO. 1 Relay <30–3>
J14 Junction Connector
A10 A/C Thermistor
P 1 Pressure SW
Dual
A 8 A/C Amplifier
J16 Junction Connector
Taillight and Illumination System<13–7>
A 9 A/C SW
10A A/C
B 3 Blower Motor
B 4 Blower Resistor
H 9 Heater Control SW
10A GAUGE
J10 Junction Connector
J23 Junction Connector
HTR Relay
Short Pin No. 2
J13 Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
I 6 Ignition SW
ACC
IG1
ST1
AM1
* 1 : LHD Wide Cab
* 2 : Except LHD Wide Cab
* 3 : LHD Standard Cab
* 4 : Except LHD Standard Cab
* 5 : Standard Cab
* 6 : Wide Cab
30A AM1
FL MAIN 3.0W
Battery
50A HTR
80A ALT