
Connector Joining Wire Harness and Wire Harness

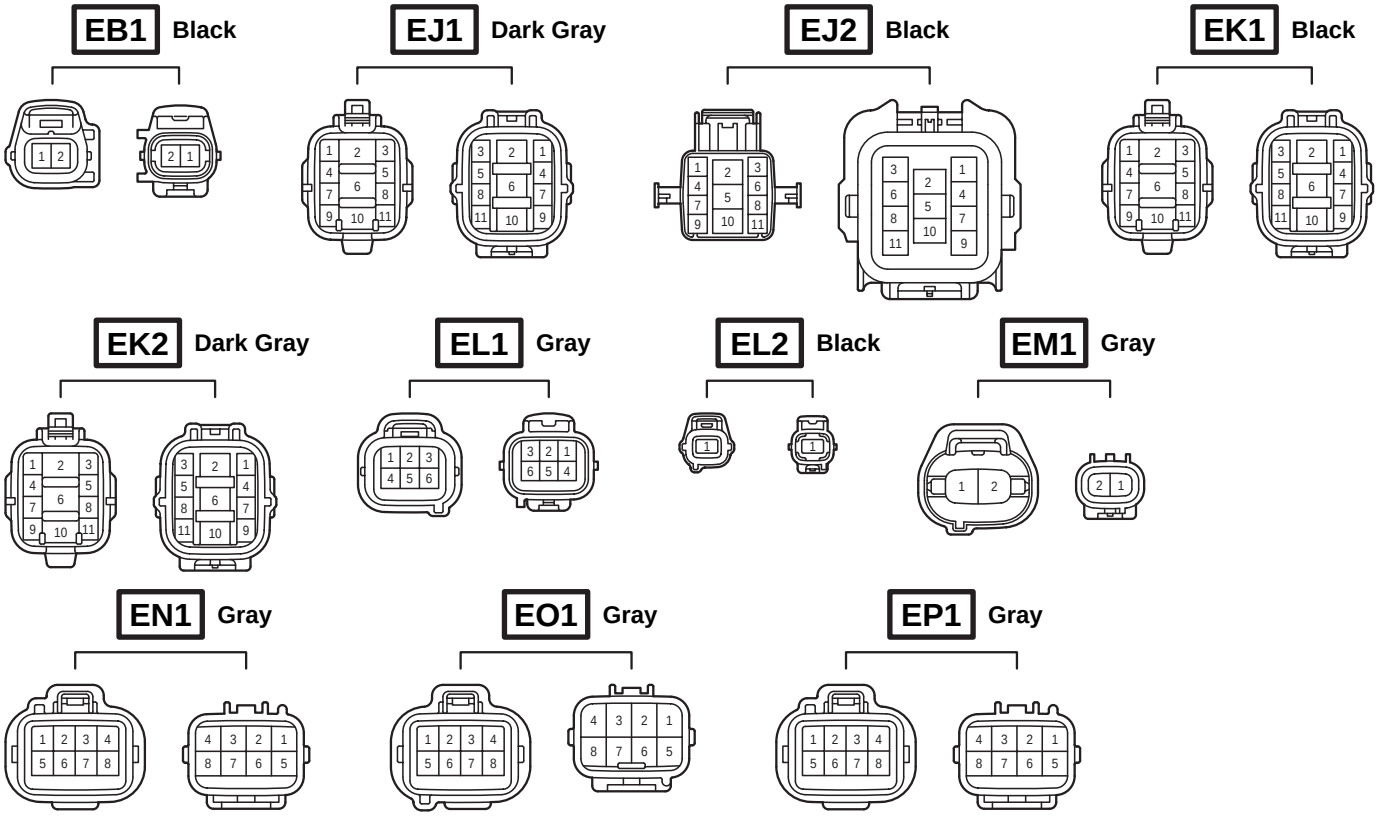

Code	Joining Wire Harness and Wire Harness (Connector Location)
EB1	Frame No.3 Wire and Engine Room Main Wire (Right Side of the No.3 Crossmember)
EJ1	Engine Room Main Wire and Chassis Sub Wire (Front Side of the No.2 Crossmember)
EJ2	
EK1	Cowl Wire and Engine Room Main Wire (Left Side of the No.2 Crossmember)
EK2	
EL1	Engine Room Main Wire and Engine No.2 Wire (Left Side of the No.3 Crossmember)
EL2	
EM1	Engine Room Main Wire and Oil Pressure SW Wire (Front Side of the Alternator)
EN1	Engine Room Main Wire and Engine Wire No.1 (Rear Upper Side of the Engine Unit)
EO1	Engine Room Main Wire and Engine Wire No.2 (Left Side of the Engine Unit)
EP1	Engine Room Main Wire and Engine Wire No.3 (Left Side of the Engine Unit)