
Connector Joining Wire Harness and Wire Harness

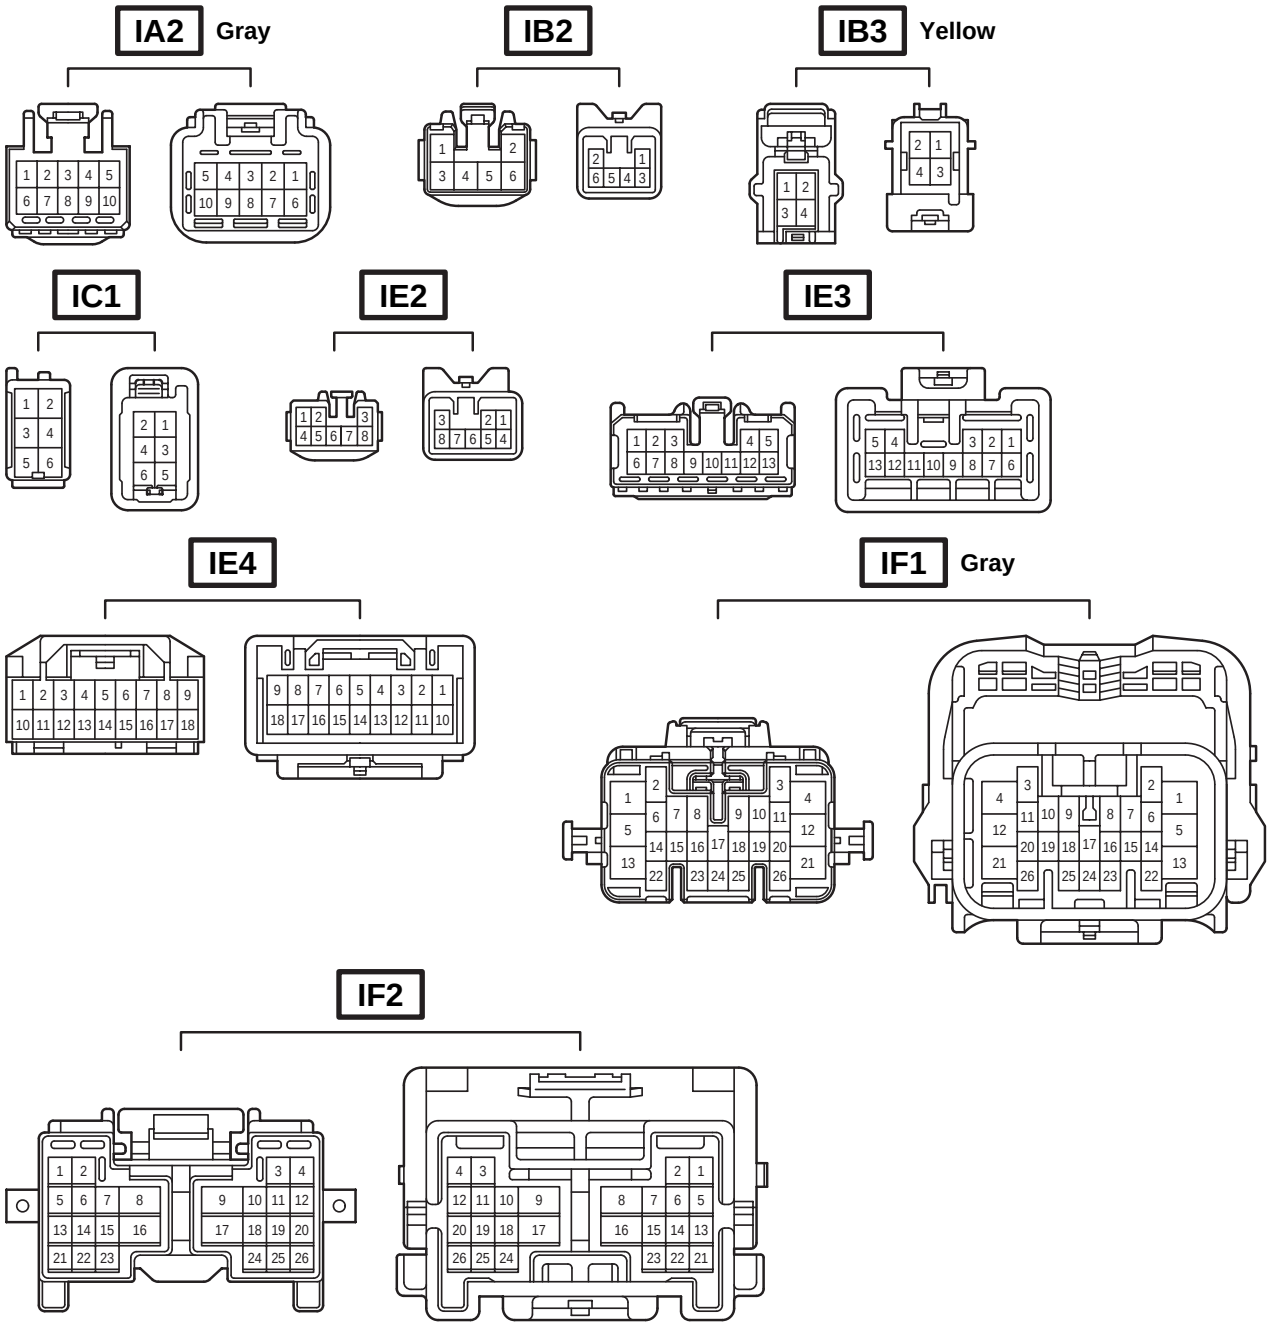

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA2	Front Door LH Wire and Cowl Wire (Cowl Side Panel LH)
IB2	Floor Wire and Cowl Wire (Cowl Side Panel LH)
IB3	
IC1	Cowl Wire and Sensor Wire (Behind the Combination Meter)
IE2	Instrument Panel Wire and Cowl Wire (Instrument Panel Brace RH)
IE3	
IE4	
IF1	Engine Room Main Wire and Cowl Wire (Left Side of the Clutch Pedal)
IF2	