
Connector Joining Wire Harness and Wire Harness

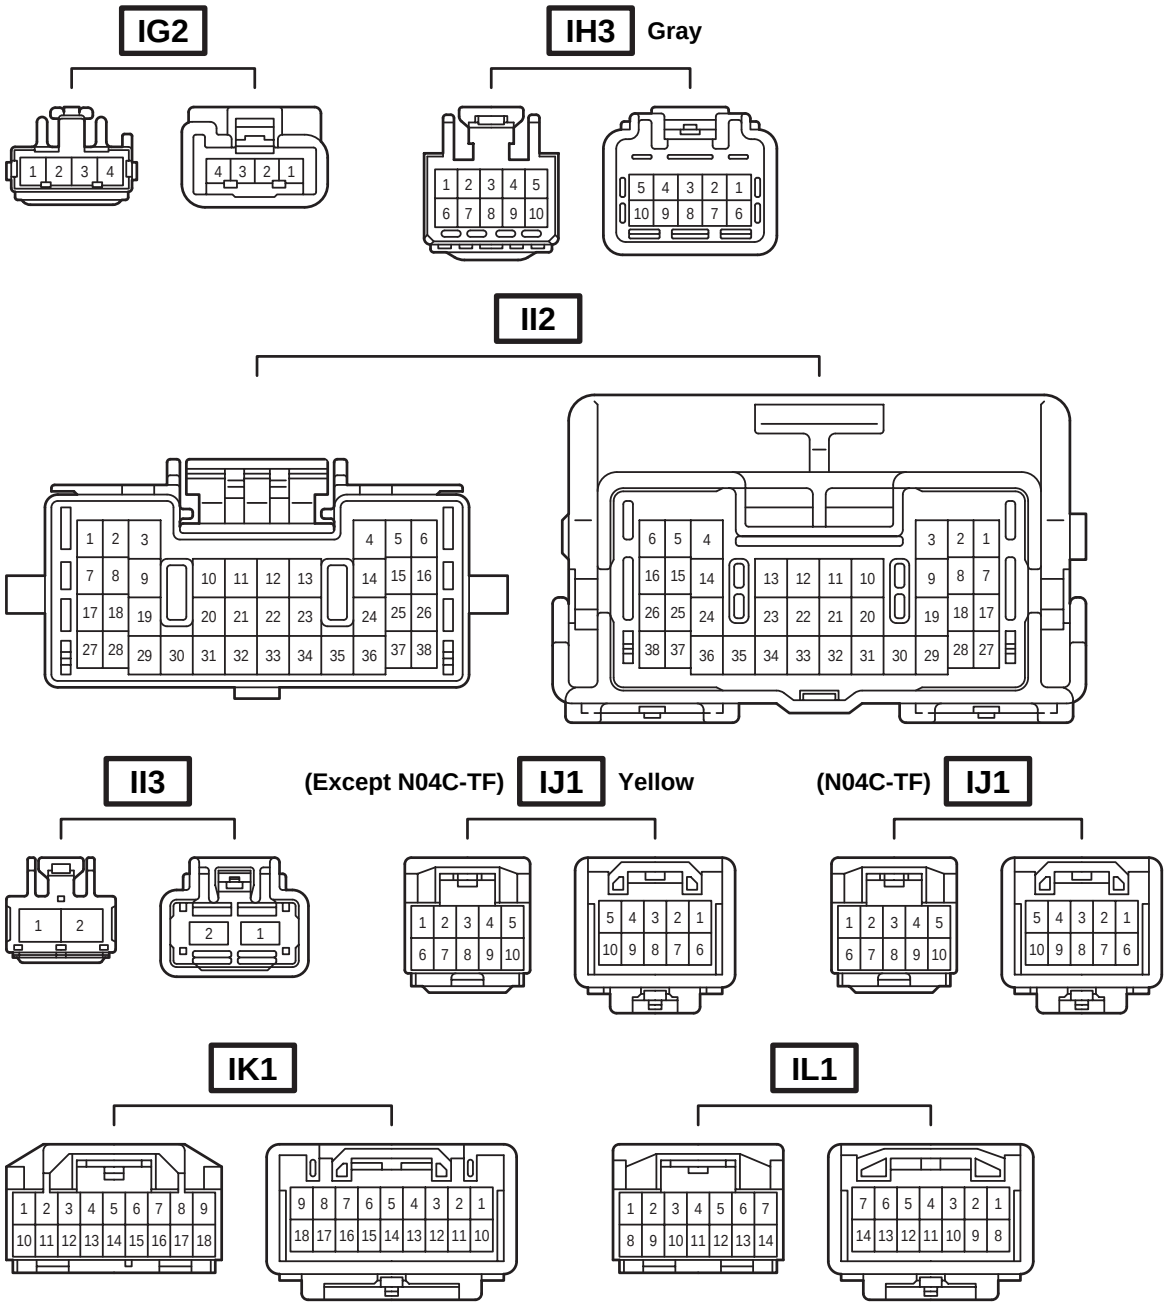

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG2	Roof Wire and Cowl Wire (Cowl Side Panel LH)
IH3	Front Door RH Wire and Cowl Wire (Cowl Side Panel RH)
II2	Engine Room Main Wire and Cowl Wire (Instrument Panel Brace RH)
II3	
IJ1	Cowl Wire and Cowl Wire (Left Side of the Combination Meter)
IK1	Engine Room Main Wire and Engine Room Main Wire (Instrument Panel Brace RH)
IL1	Cowl Wire and Cowl Wire (Left Side of the Clutch Pedal)