
Position of Parts in Engine Compartment

[RHD : N04C–TF]

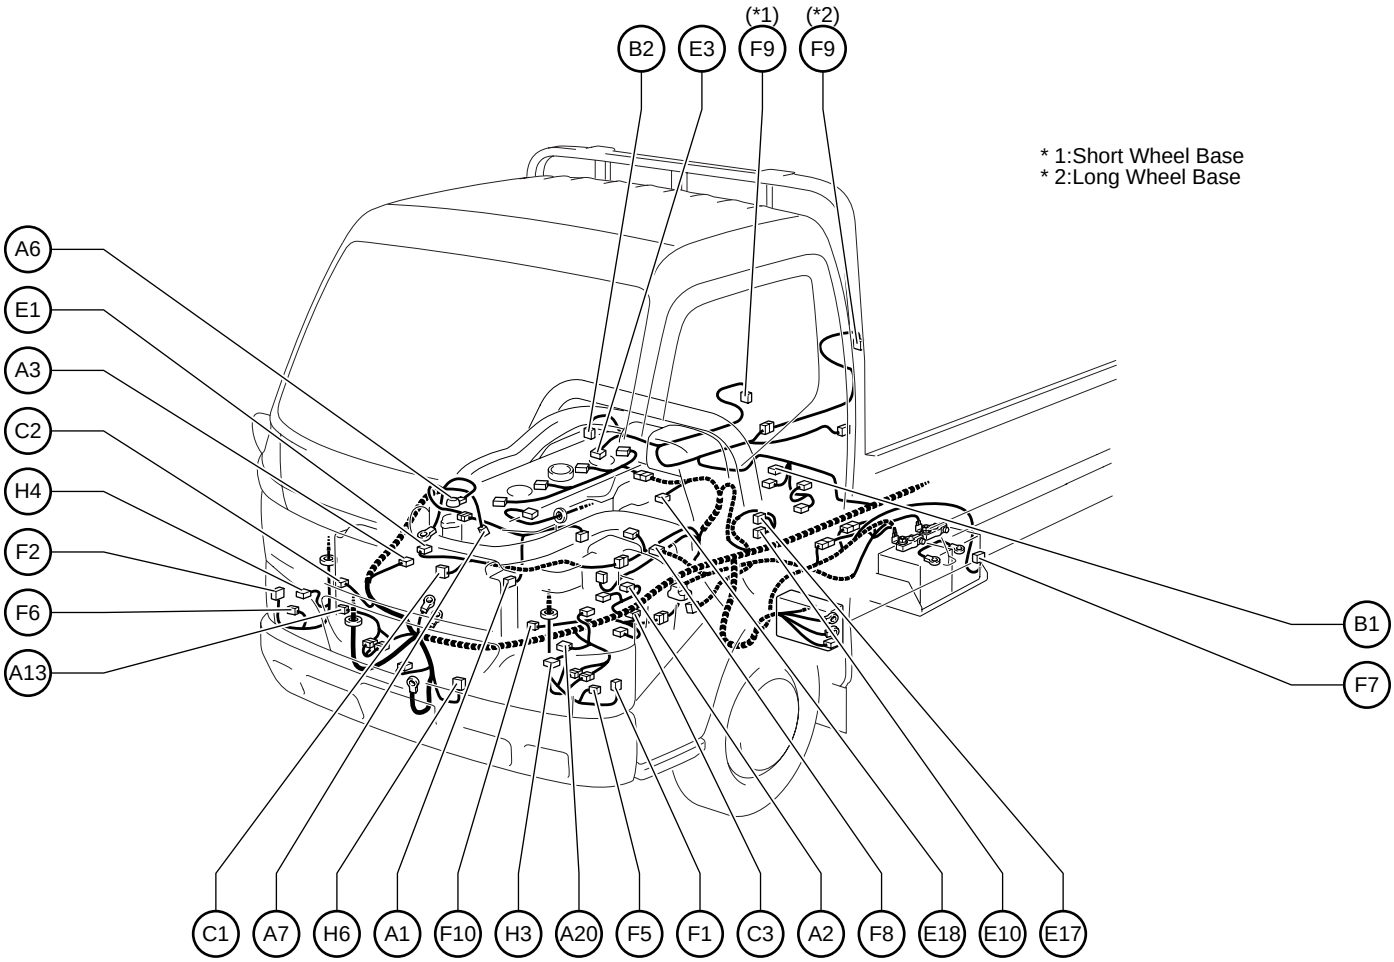

A 1 A/C Magnetic Clutch
A 2 ABS Speed Sensor Front LH
A 3 ABS Speed Sensor Front RH
A 6 Alternator
A 7 Alternator
A13 ABS Actuator
A20 Air Flow Meter

B 1 Back–Up Light SW
B 2 Brake Vacuum Warning SW

C 1 Camshaft Position Sensor
C 2 Condenser Fan Motor and Resistor
C 3 Crankshaft Position Sensor

E 1 EFI Water Temp. Sensor
Water Temp. Sender
E 3 Exhaust Brake Solenoid
E10 EDU
E17 EDU
E18 EGR Valve Position Sensor

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 5 Front Turn Signal Light LH
F 6 Front Turn Signal Light RH
F 7 Fuel Filter Warning SW
F 8 Fuel Pressure Sensor
F 9 Fuel Sender
F10 Fuel Temp. Sensor

H 3 Headlight LH
H 4 Headlight RH
H 6 Horn (Low)