
Position of Parts in Engine Compartment

[RHD : N04C–TF]

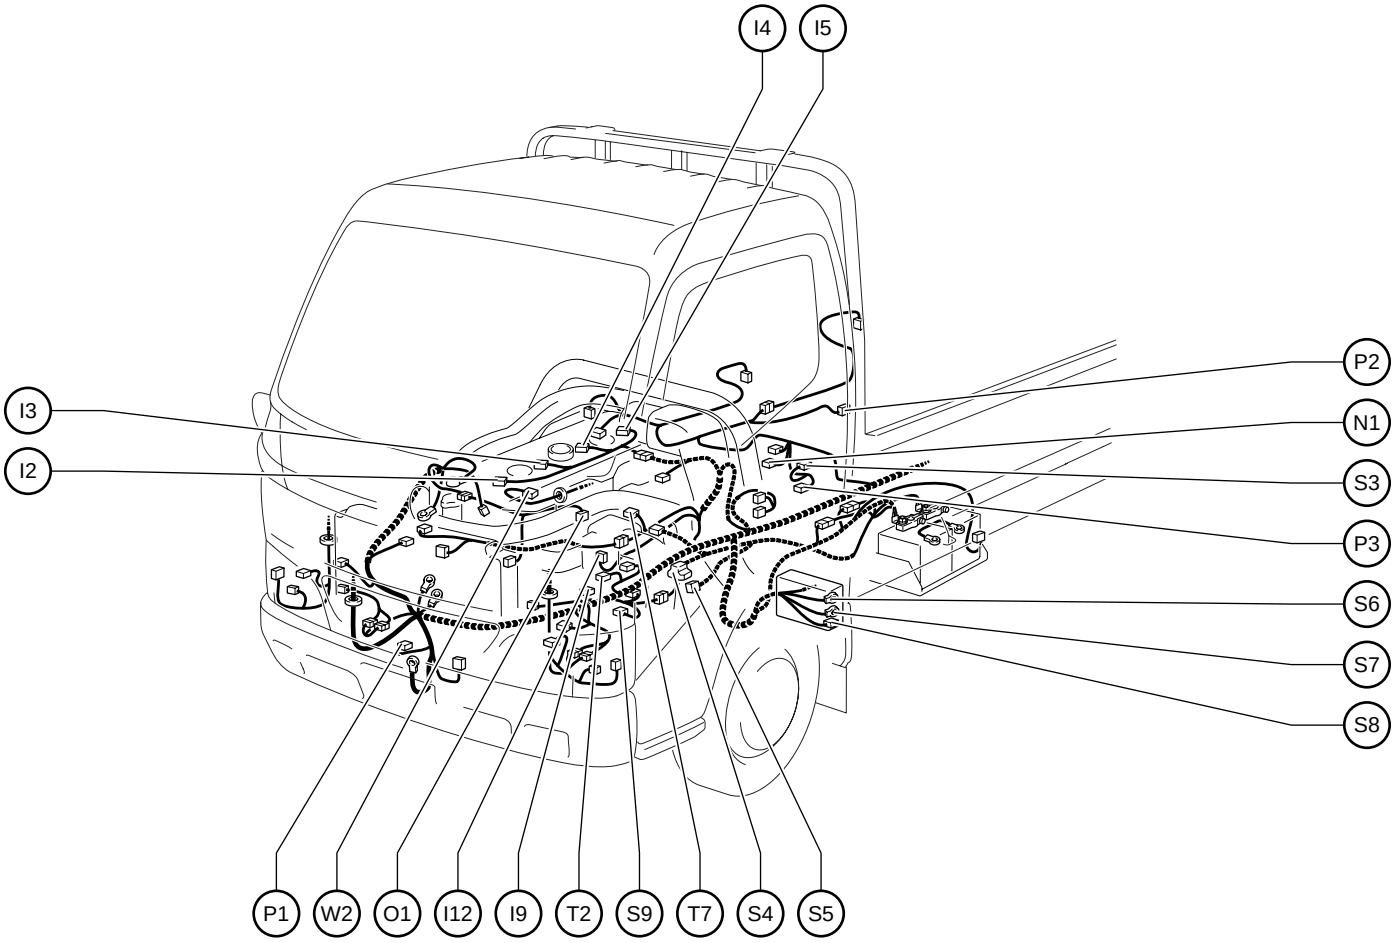

I 2 Injector No.1
I 3 Injector No.2
I 4 Injector No.3
I 5 Injector No.4
I 9 Intake Air Temp. Sensor
I 12 ISC Valve

N 1 Neutral Position SW

O 1 Oil Pressure SW

P 1 Pressure SW
P 2 PTO Solenoid Valve
P 3 PTO Transmission Neutral Position SW

S 3 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter
S 6 STARTER Relay
S 7 STARTER Relay
S 8 STARTER Relay
S 9 Suction Control Valve No.1

T 2 Turbo Pressure Sensor
T 7 Throttle Position Sensor

W 2 Wiper Motor