
Position of Parts in Instrument Panel

[RHD]

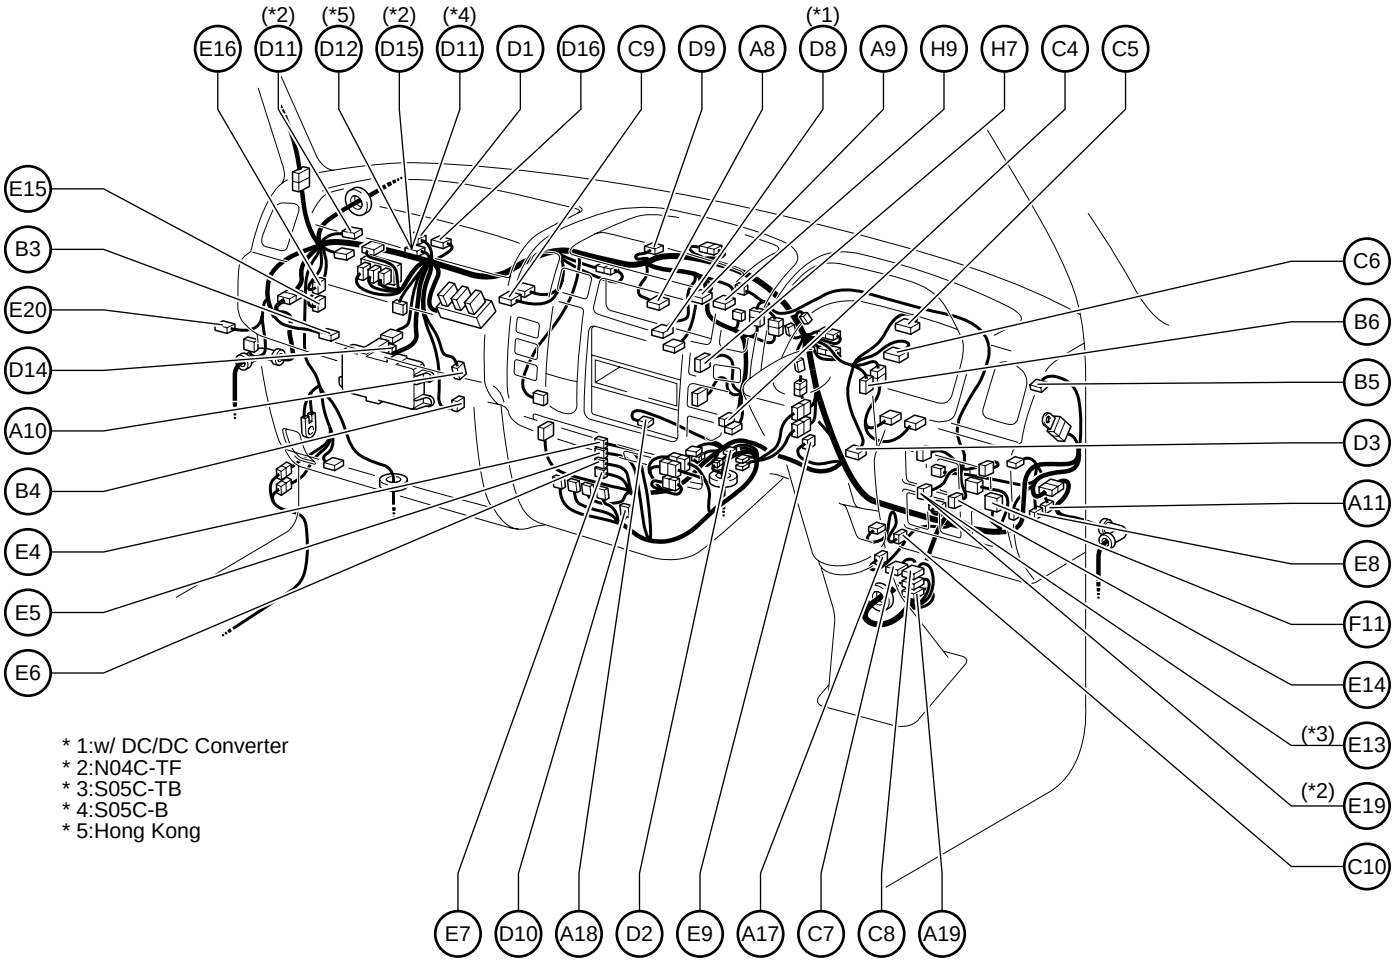

A 8 A/C Amplifier
A 9 A/C SW
A10 A/C Thermistor
A11 Accelerator Pedal Position Sensor
A17 Airbag Sensor Assembly
A18 Airbag Sensor Front
A19 Airbag Squib (Steering Wheel Pad)

B 3 Blower Motor
B 4 Blower Resistor
B 5 Brake Fluid Level Warning SW
B 6 Brake Vacuum Warning Buzzer

C 4 Cigarette Lighter
C 5 Combination Meter
C 6 Combination Meter
C 7 Combination SW
C 8 Combination SW
C 9 Condenser Fan Fuse
C10 Clutch Pedal Stroke Sensor

D 1 Diode (A/C No.1)
D 2 Diode (Pressure Charge Valve)
D 3 DLC3
D 8 DC/DC Converter
D 9 Diode (A/C No.2)
D10 Diode (ES Start)
D11 Diode (Parking Brake)
D12 Diode (Stop)
D14 Diode (Parking)
D15 Diode (Stop 1)
D16 Diode (Stop 2)

E 4 Engine ECU
E 5 Engine ECU
E 6 Engine ECU
E 7 Engine ECU
E 8 Exhaust Brake Accelerator Pedal SW
E 9 Exhaust Brake Clutch SW
E13 ES Start Main SW
E14 ES Start Timing SW
E15 ES Start ECU
E16 ES Start ECU
E19 ES Start Main SW
E20 ES Starting System Warning Buzzer
F 11 Flasher Relay

H 7 Hazard SW
H 9 Heater Control SW