
Position of Parts in Instrument Panel

[RHD]

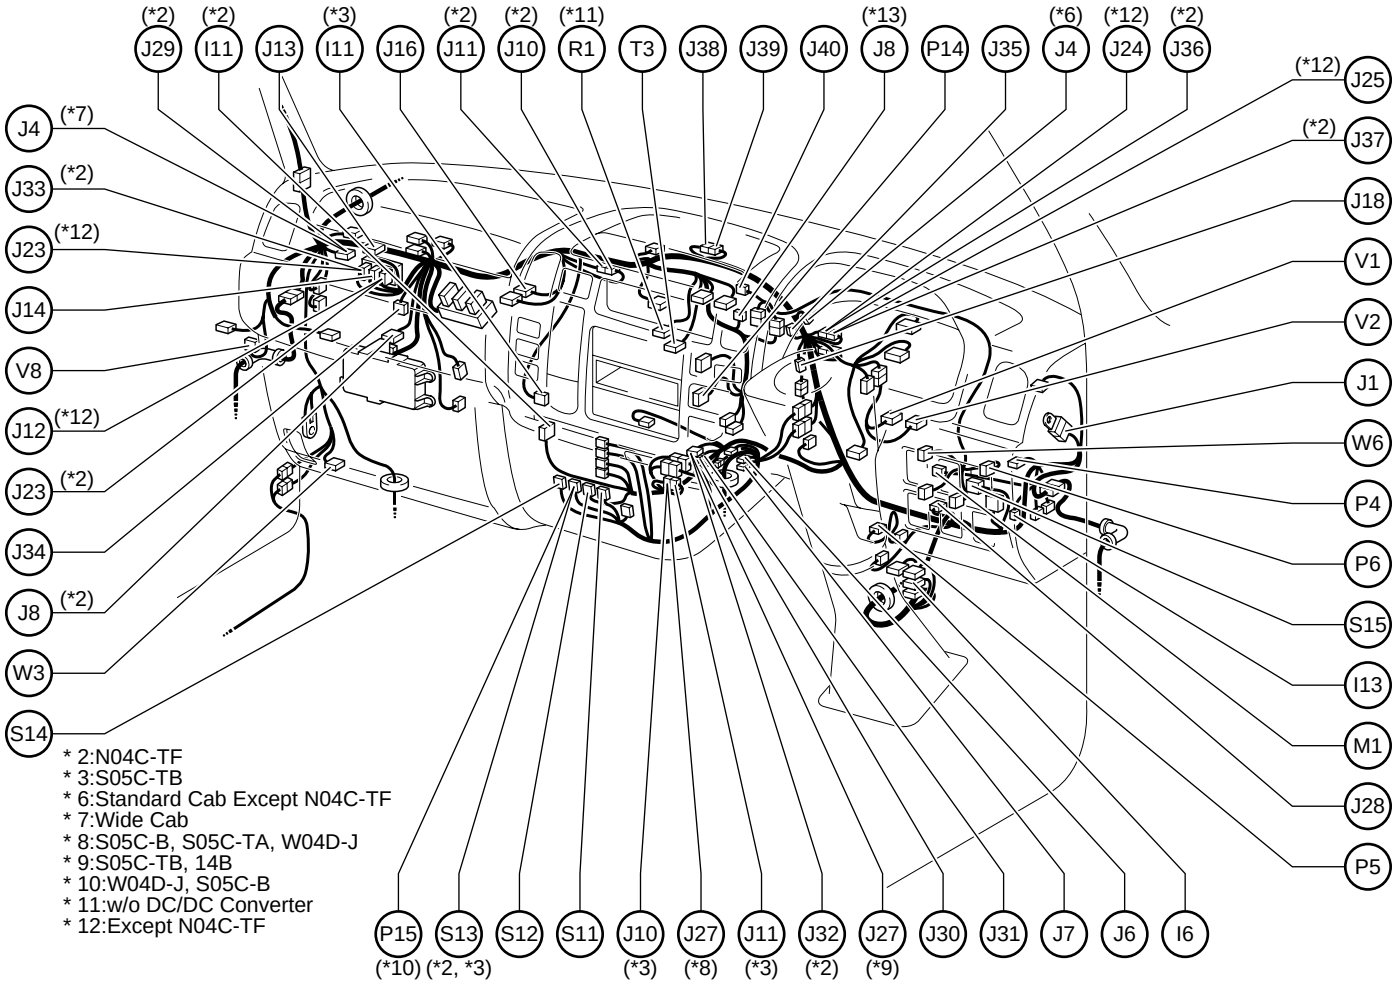

* 2:N04C-TF
* 3:S05C-TB
* 6:Standard Cab Except N04C-TF
* 7:Wide Cab
* 8:S05C-B, S05C-TA, W04D-J
* 9:S05C-TB, 14B
* 10:W04D-J, S05C-B
* 11:w/o DC/DC Converter
* 12:Except N04C-TF

I 6 Ignition SW
I 11 Integration Relay
I 13 Idle Variable Resistor SW

J 1 Junction Connector
J 4 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 16 Junction Connector
J 18 Junction Connector
J 23 Junction Connector
J 24 Junction Connector
J 25 Junction Connector
J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector
J 30 Junction Connector
J 31 Junction Connector
J 32 Junction Connector
J 33 Junction Connector
J 34 Junction Connector
J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector
J 39 Junction Connector
J 40 Junction Connector

M 1 Master Cylinder Pressure Sensor

P 4 Power Outlet (Room)
P 5 PTO Clutch SW
P 6 PTO SW or Short Pin
P 14 Parking Light SW or Short Pin
P 15 Pre–Heating Timer

R 1 Radio and Player

S 11 Skid Control ECU
S 12 Skid Control ECU
S 13 Skid Control ECU
S 14 Skid Control ECU
S 15 Stop Light SW

T 3 Tachograph

V 1 Vacuum Sensor No.1
V 2 Vacuum Sensor No.2
V 8 Voltage Converter

W 3 Washer Motor
W 6 Warm Up SW