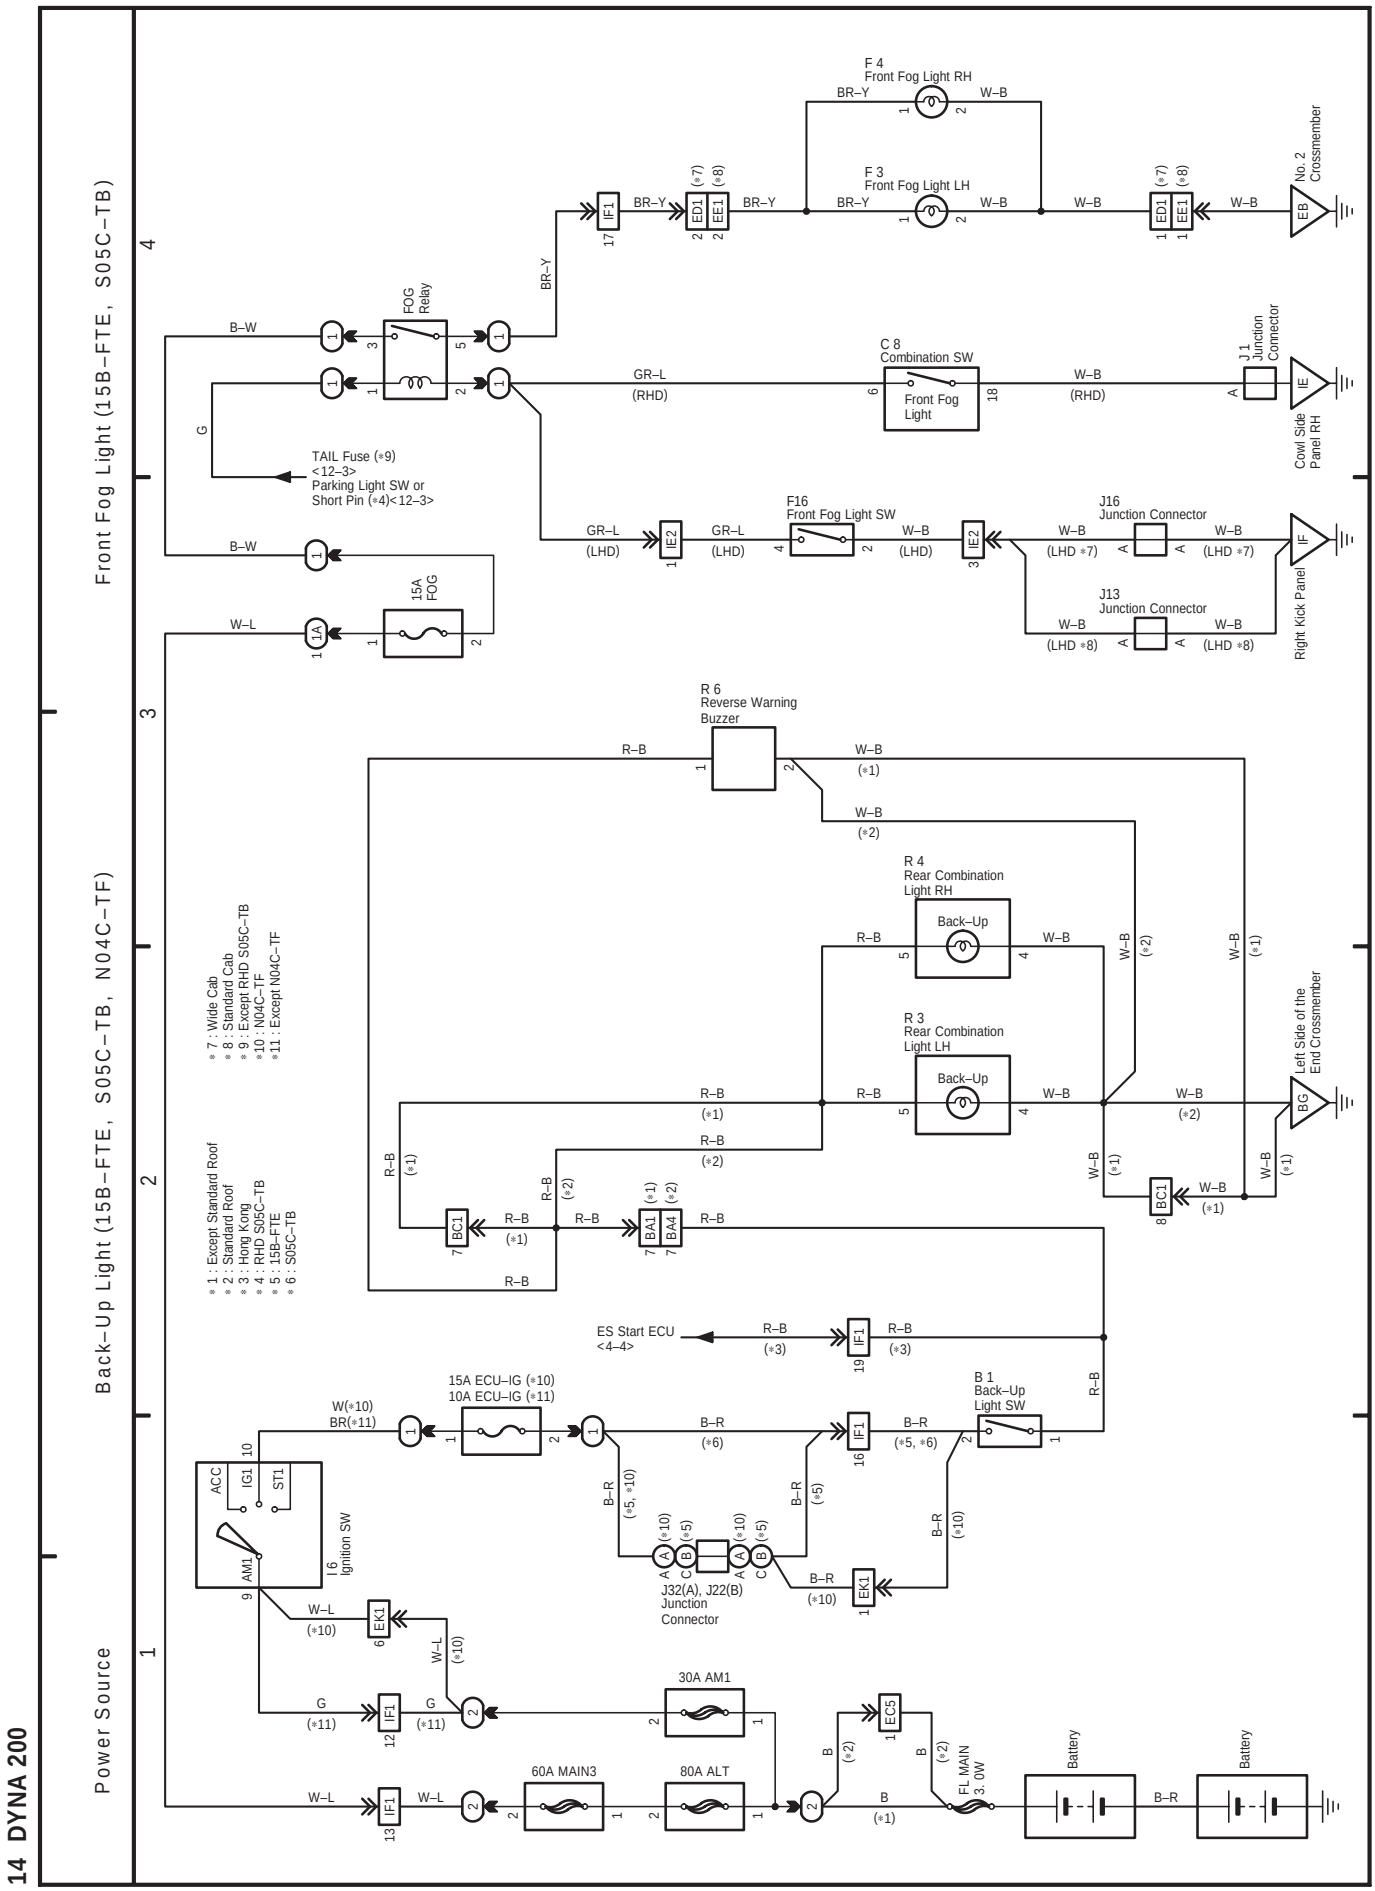

Front Fog Light (15B–FTE, S05C–TB)
Back–Up Light (15B–FTE, S05C–TB, N04C–TF)
Power Source
F 4 Front Fog Light RH
F 3 Front Fog Light LH
No. 2 Crossmember
FOG Relay
C 8 Combination SW
Front Fog Light
J 1 Junction Connector
Cowl Side Panel RH
TAIL Fuse (*9)
<12–3> Parking Light SW or Short Pin (*4)<12–3>
F16 Front Fog Light SW
J16 Junction Connector
J13 Junction Connector
Right Kick Panel
15A FOG
R 6 Reverse Warning Buzzer
R 4 Rear Combination Light RH
R 3 Rear Combination Light LH
Back–Up
Left Side of the End Crossmember
* 1 : Except Standard Roof
* 2 : Standard Roof
* 3 : Hong Kong
* 4 : RHD S05C–TB
* 5 : 15B–FTE
* 6 : S05C–TB
* 7 : Wide Cab
* 8 : Standard Cab
* 9 : Except RHD S05C–TB
*10 : N04C–TF
*11 : Except N04C–TF
ES Start ECU <4–4>
15A ECU–IG (*10)
10A ECU–IG (*11)
B 1 Back–Up Light SW
I 6 Ignition SW
ACC
IG1
ST1
AM1
J32(A), J22(B) Junction Connector
30A AM1
60A MAIN3
80A ALT
FL MAIN 3.0W
Battery
Battery