

OVERALL ELECTRICAL WIRING DIAGRAM

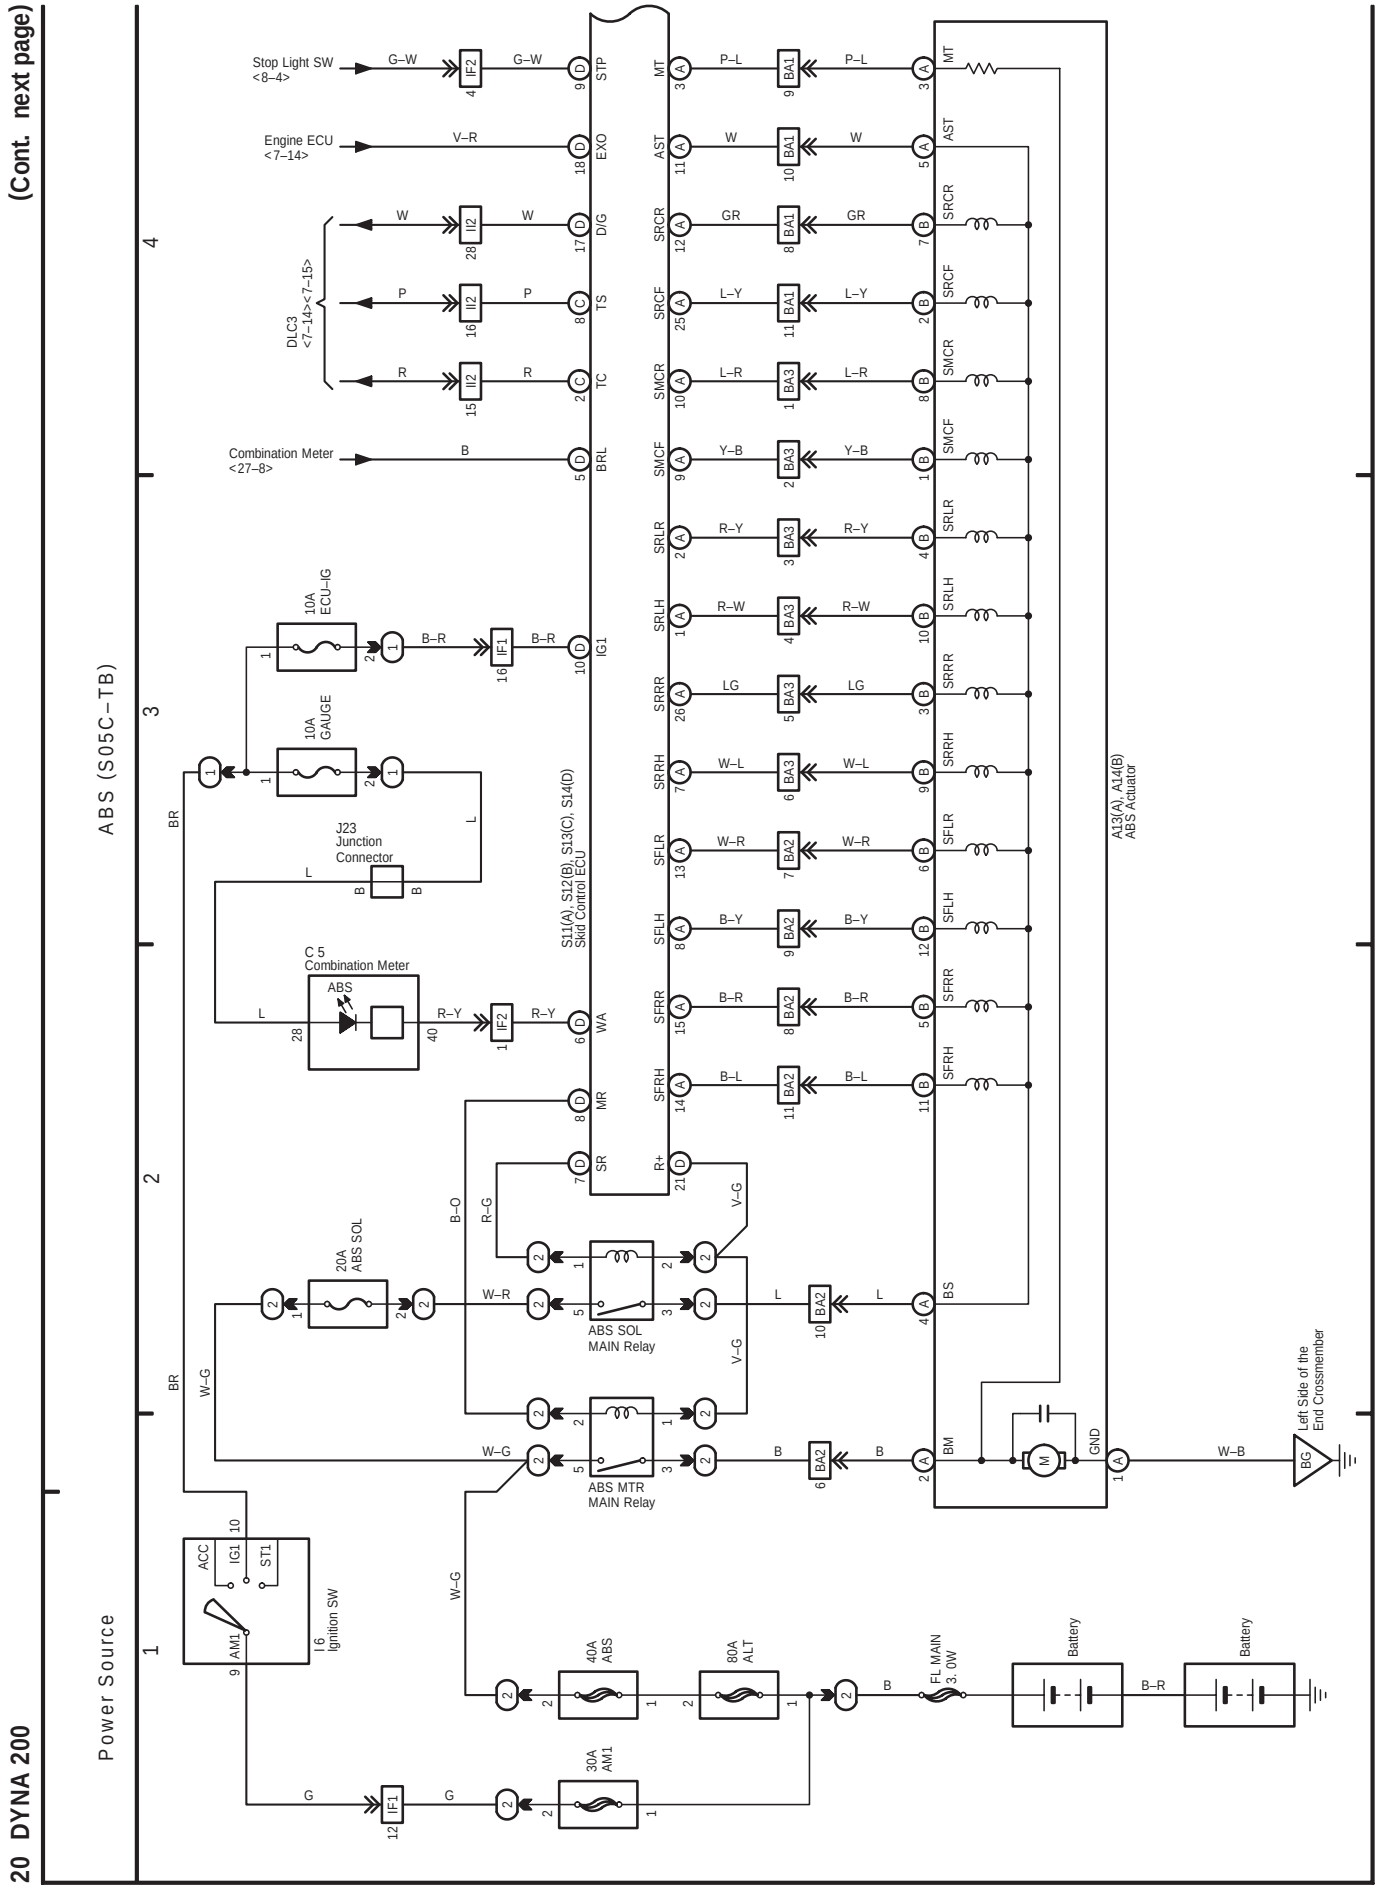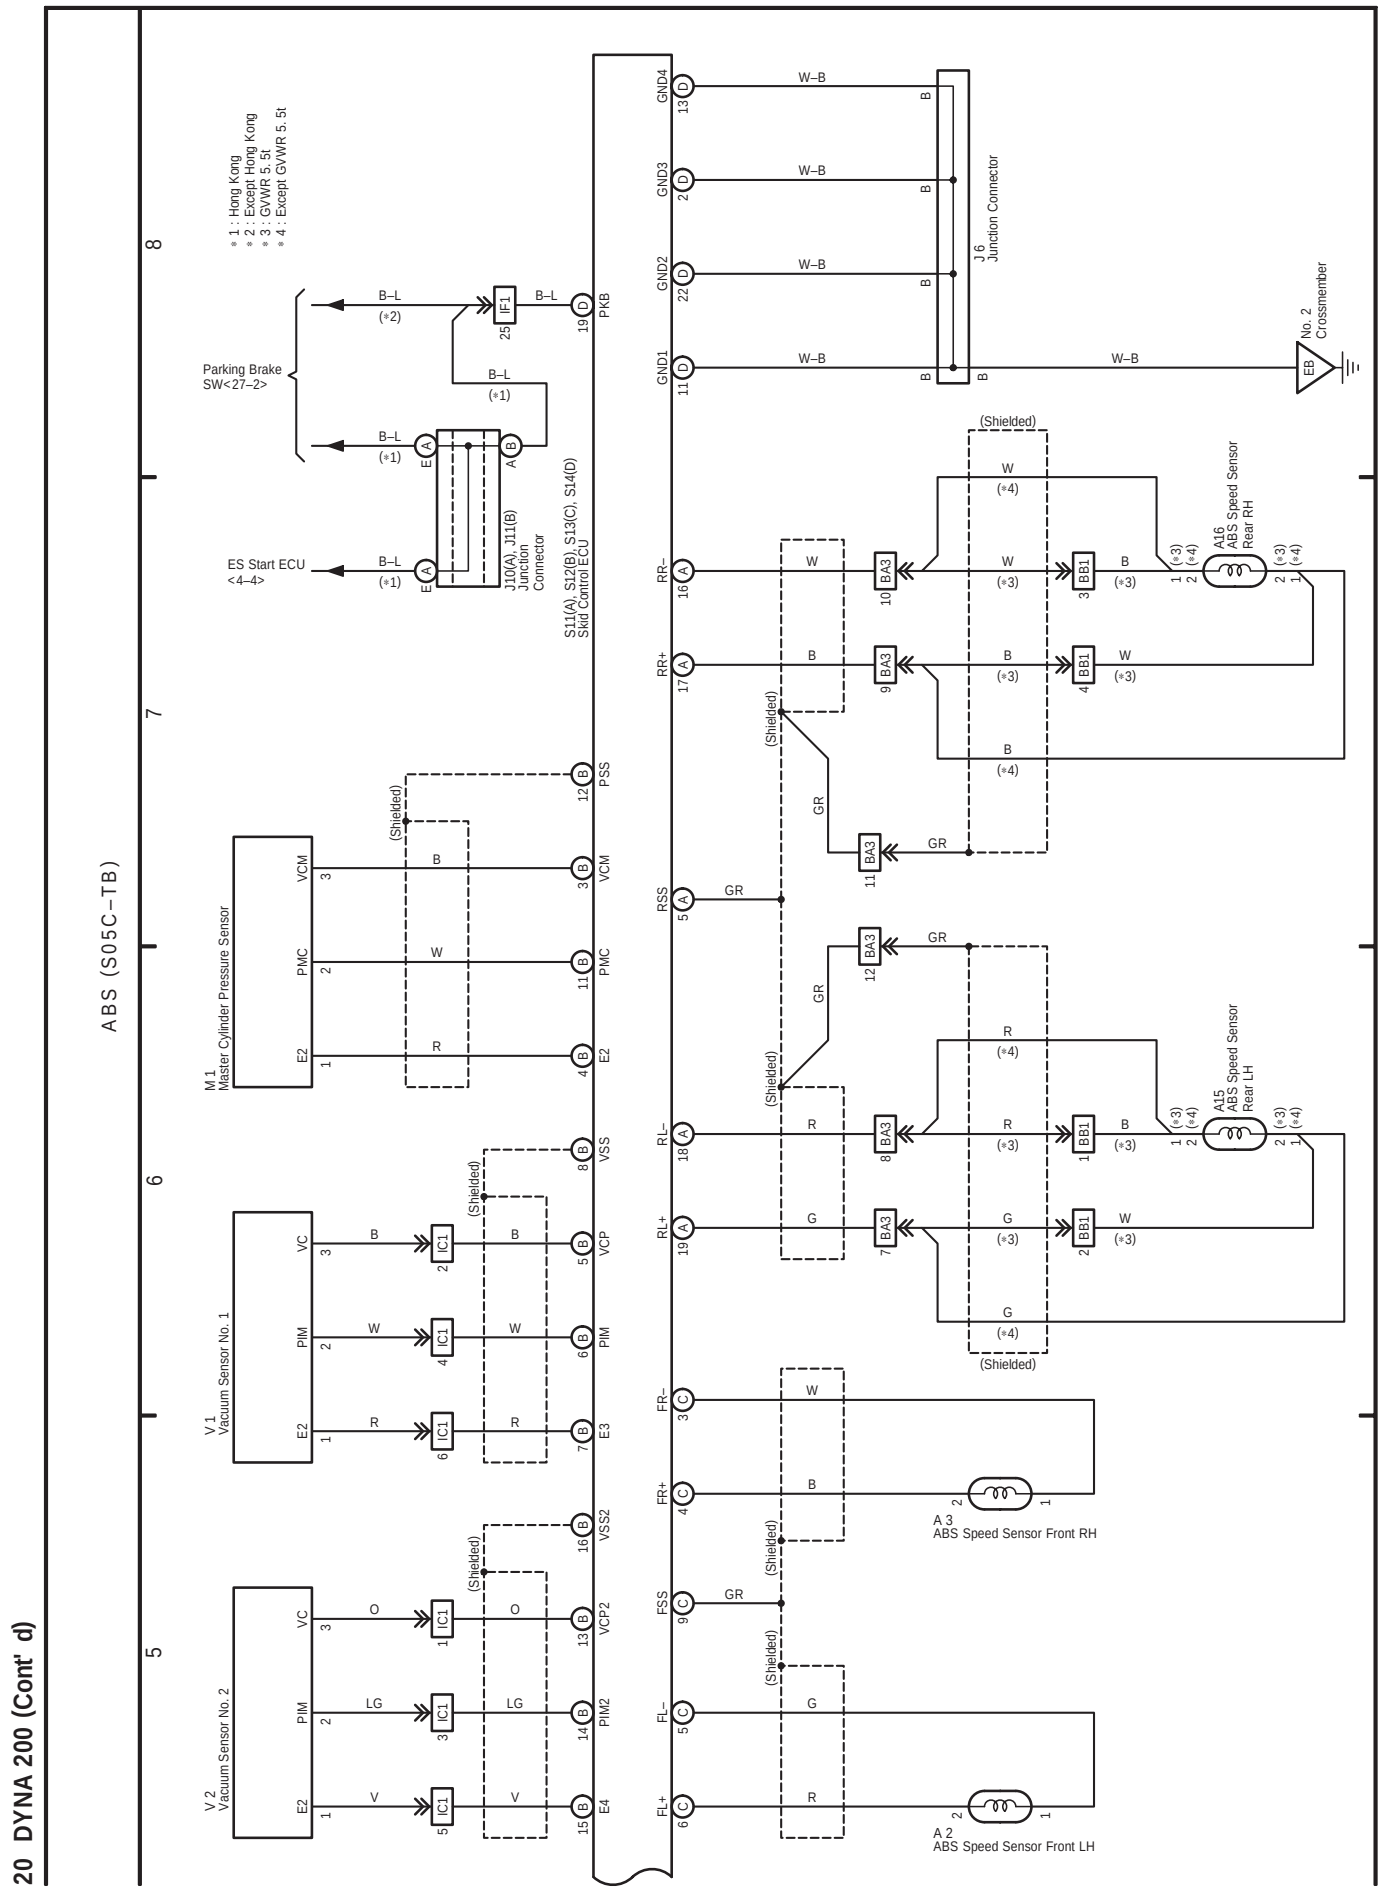


20 DYNA 200 (Cont' d)
ABS (S05C–TB)
5
6
7
8
* 1 : Hong Kong
* 2 : Except Hong Kong
* 3 : GVWR 5. 5t
* 4 : Except GVWR 5. 5t
Parking Brake SW<27–2>
ES Start ECU <4–4>
J10(A), J11(B) Junction Connector
S11(A), S12(B), S13(C), S14(D) Skid Control ECU
IF1
M 1 Master Cylinder Pressure Sensor
V 1 Vacuum Sensor No. 1
V 2 Vacuum Sensor No. 2
IC1
BA3
BB1
J 6 Junction Connector
No. 2 Crossmember
A16 ABS Speed Sensor Rear RH
A15 ABS Speed Sensor Rear LH
A 3 ABS Speed Sensor Front RH
A 2 ABS Speed Sensor Front LH
(Shielded)
B–L
W–B
W
B
R
G
GR
LG
O
V