010CD–01

VEHICLE LIFT AND SUPPORT LOCATIONS

1. NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP

(a) As a rule, vehicle must be in an unloaded and never jack up or lift up the vehicle with things of heavy weight.

(b) If removing any things of heavy weight like the engine and transmission, the center of gravity of the vehicle moves. Therefore, place a balance weight so as to keep it from rolling, or hold the jacking support location using the mission jack.

2. NOTICE FOR USING 4 POST LIFT

(a) Follow the instruction manual for a safety operation.

(b) Do not damage tires or wheels with a free wheel beam.

(c) Using a wheel stopper, fix the vehicle.

3. NOTICE FOR USING JACK AND SAFETY STAND

(a) Work in a flat place using a wheel stopper all the time.


(b) Support the specified location with a jack and safety stand accurately.

(c) Do not work or leave the vehicle supported only by a jack. Be sure to support the vehicle together with a safety stand.

(d) Be careful and accurate in jacking up and down the vehicle.

(e) Care must be taken when jacking up and supporting the vehicle. Be sure to lift and support the vehicle at the proper locations.

- Cancel the parking brake on a level place and shift the transmission in Neutral.
- When jacking up the front wheels of the vehicle at first place stoppers behind the rear wheels.
- When jacking up the rear wheels of the vehicle at first place stoppers behind the front wheels.
- When either the front or rear wheels only should be jacked up, set safety stands and place stoppers in front and behind the other wheels on the ground.
- After the vehicle is jacked up, be sure to support it on the safety stands. It is extremely dangerous to perform any work on a vehicle raised on a jack alone, even for a small job that can be finished quickly.

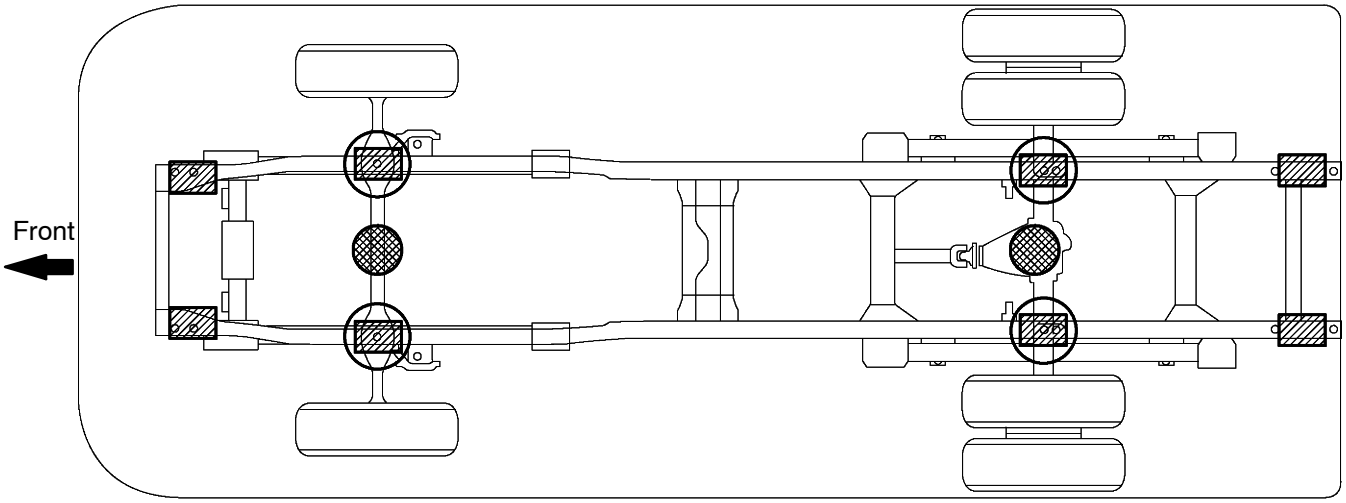

GARAGE JACK POSITION

Front - - - - - - - - - - - - - Center of front axle beam

Rear - - - - - - - - - - - - - Center of rear axle housing

OIL JACK POSITION

SUPPORT POSITION

Safety stand -

If necessary, remove the transport hooks on the front end of the frame.

Y

B09023

B14540